


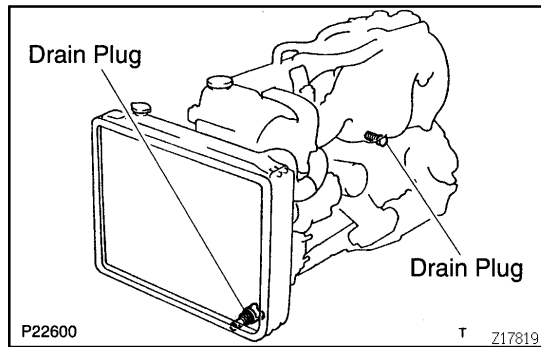

REPLACEMENT

REPLACE ENGINE COOLANT

- (a) Remove the radiator cap.

CAUTION:

See step 2. (a) above.

- (b) Drain the coolant from the radiator drain cock and engine drain plug (Engine drain plug at the left of engine block.).
- (c) Close the drain plugs.

Torque: Torque (Engine drain plug):

29 N·m (300 kgf·cm, 22 ft·lbf)

- (d) Slowly fill the system with coolant.
- Use a good brand of ethylene-glycol base coolant and mix it according to the manufacturer's directions.
 - Using coolant which includes more than 50 % ethylene-glycol (but not more than 70 %) is recommended.

NOTICE:

Do not use an alcohol type coolant. The coolant should be mixed with demineralized water or distilled water.

Capacity:

w/ Front heater:

13.7 liters (14.4 US qts, 12.1 Imp. qts)

w/ Front and rear heaters:

14.7 liters (15.5 US qts, 12.9 Imp. qts)

- (e) Reinstall the radiator cap.
- (f) Warm up the engine and check for leaks.
- (g) Recheck the coolant level and refill as necessary.