

DTC	43	Malfunction in Deceleration Sensor
------------	-----------	---

CIRCUIT DESCRIPTION

DTC No.	DTC Detecting Condition	Trouble Area
43	Either of the following (1) or (2) is detected: (1) After the battery terminal is connected, input from the deceleration sensor does not change at one cycle (0 km/h → more than 30 km/h → 0 km/h) for 16 times continuously. (2) When the brake pedal is not depressed at vehicle speed of 5 km/h or more, forward and backward G (more than 0.4 G) is detected for 30 seconds or more.	• Deceleration sensor • Wire harness for deceleration sensor system

INSPECTION PROCEDURE

1	Check deceleration sensor (See page DI-189).
----------	---

NG

Replace deceleration sensor.

OK

2	Check for open or short in harness and connector between sensor and ECU (See page IN-27).
----------	--

NG

Repair or replace harness and connector.

OK

Check and replace ABS ECU.