


TERMINALS OF ECM

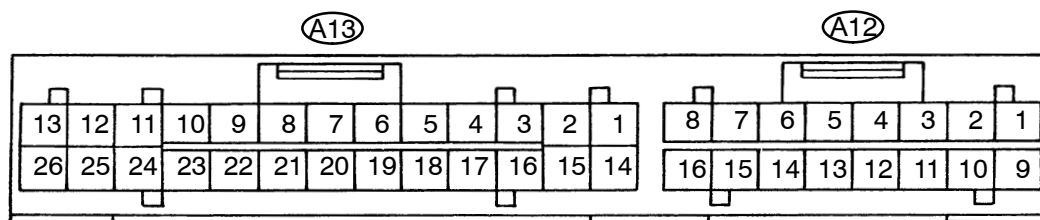

Symbols (Terminals No.)	STD Voltage (V)	Condition	R00463
BAT (A13 - 25) - GND (A13 - 2, 15)	10 - 14	Always	
IG1 (A13 - 12) - GND (A13 - 2, 15)	10 - 14	IG switch ON	
SR (A13 - 11) - R- (A13 - 24)	9 - 14	IG switch ON, ABS warning light OFF	
MR (A13 - 23) - R- (A13 - 24)	Below 1.0	IG switch ON	
SFR (A13 - 1) - GND (A13 - 2, 15)	10 - 14	IG switch ON, ABS warning light OFF	
SFL (A13 - 13) - GND (A13 - 2, 15)	10 - 14	IG switch ON, ABS warning light OFF	
SRR (A13 - 26) - GND (A13 - 2, 15)	10 - 14	IG switch ON, ABS warning light OFF	
AST (A13 - 18) - GND (A13 - 2, 15)	10 - 14	IG switch ON, ABS warning light OFF	
WA (A12 - 13) - GND (A13 - 2, 15)	Below 2.0	IG switch ON, ABS warning light ON	
	10 - 14	IG switch ON, ABS warning light OFF	
PKB (A12 - 14) - GND (A13 - 2, 15)	Below 1.5	IG switch ON, PKB switch ON	
	8 - 14	IG switch ON, PKB switch OFF	
STP (A12 - 6) - GND (A13 - 2, 15)	Below 1.5	Stop light switch OFF	
	8 - 14	Stop light switch ON	
Tc (A13 - 5) - GND (A13 - 2, 15)	8 - 14	IG switch ON	
Ts (A12 - 15) - GND (A13 - 2, 15)	8 - 14	IG switch ON	
FR+ (A13 - 16) - FR- (A13 - 3)	AC generation	IG switch ON Slowly turn right front wheel	
FL+ (A13 - 9) - FL- (A13 - 22)	AC generation	IG switch ON Slowly turn left front wheel	
RR+ (A12 - 8) - RR- (A12 - 16)	AC generation	IG switch ON Slowly turn right rear wheel	
RL+ (A12 - 9) - RL- (A12 - 1)	AC generation	IG switch ON Slowly turn left rear wheel	
GS1 (A12 - 12) - GND (A13 - 2, 15)	4 - 6 or 7 - 11	IG switch ON	
GS2 (A12 - 3) - GND (A13 - 2, 15)	4 - 6	IG switch ON	