


Diagnosis Circuit

CIRCUIT DESCRIPTION


This circuit sends a signal to the ECU that DTC output is required.

WIRING DIAGRAM

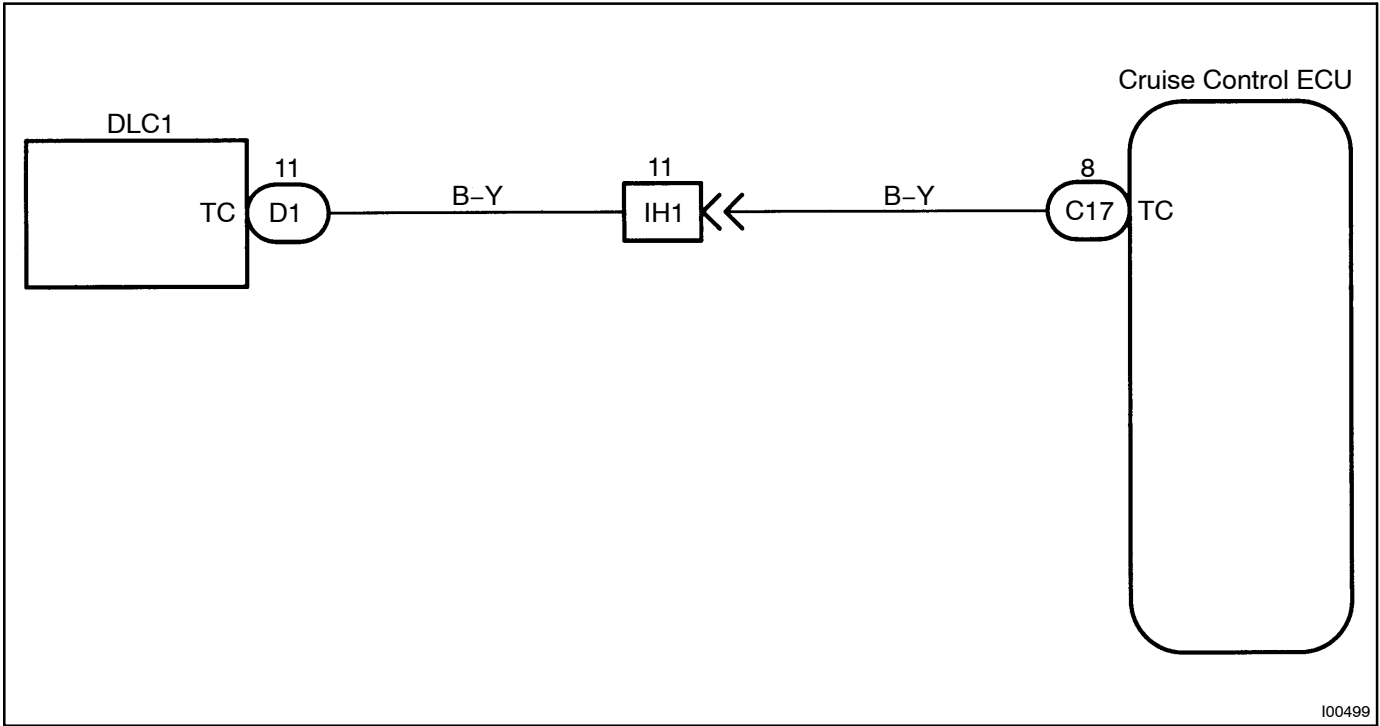

INSPECTION PROCEDURE

1	Check voltage between terminals Tc and E ₁ of DLC1.
---	--

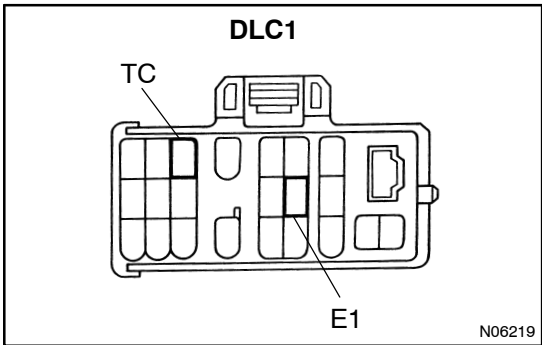

PREPARATION:

Turn ignition switch ON.

CHECK:

Measure voltage between terminals Tc and E₁ of DLC1.

OK:

 
Voltage: 10 - 14 V

OK

Proceed to next circuit inspection shown on problem symptoms table (See page [DI-294](#)).

NG

2	Check harness and connector between cruise control ECU and DLC1, DLC1 and body ground (See page IN-27).
---	--

NGRepair or replace harness or connector.OKCheck and replace cruise control ECU
(See page [IN-27](#)).