


ECU Power Source Circuit

CIRCUIT DESCRIPTION

The ECU power source supplies power to the actuator and sensors, etc.. When terminal GND and the cruise control ECU case are grounded.

WIRING DIAGRAM

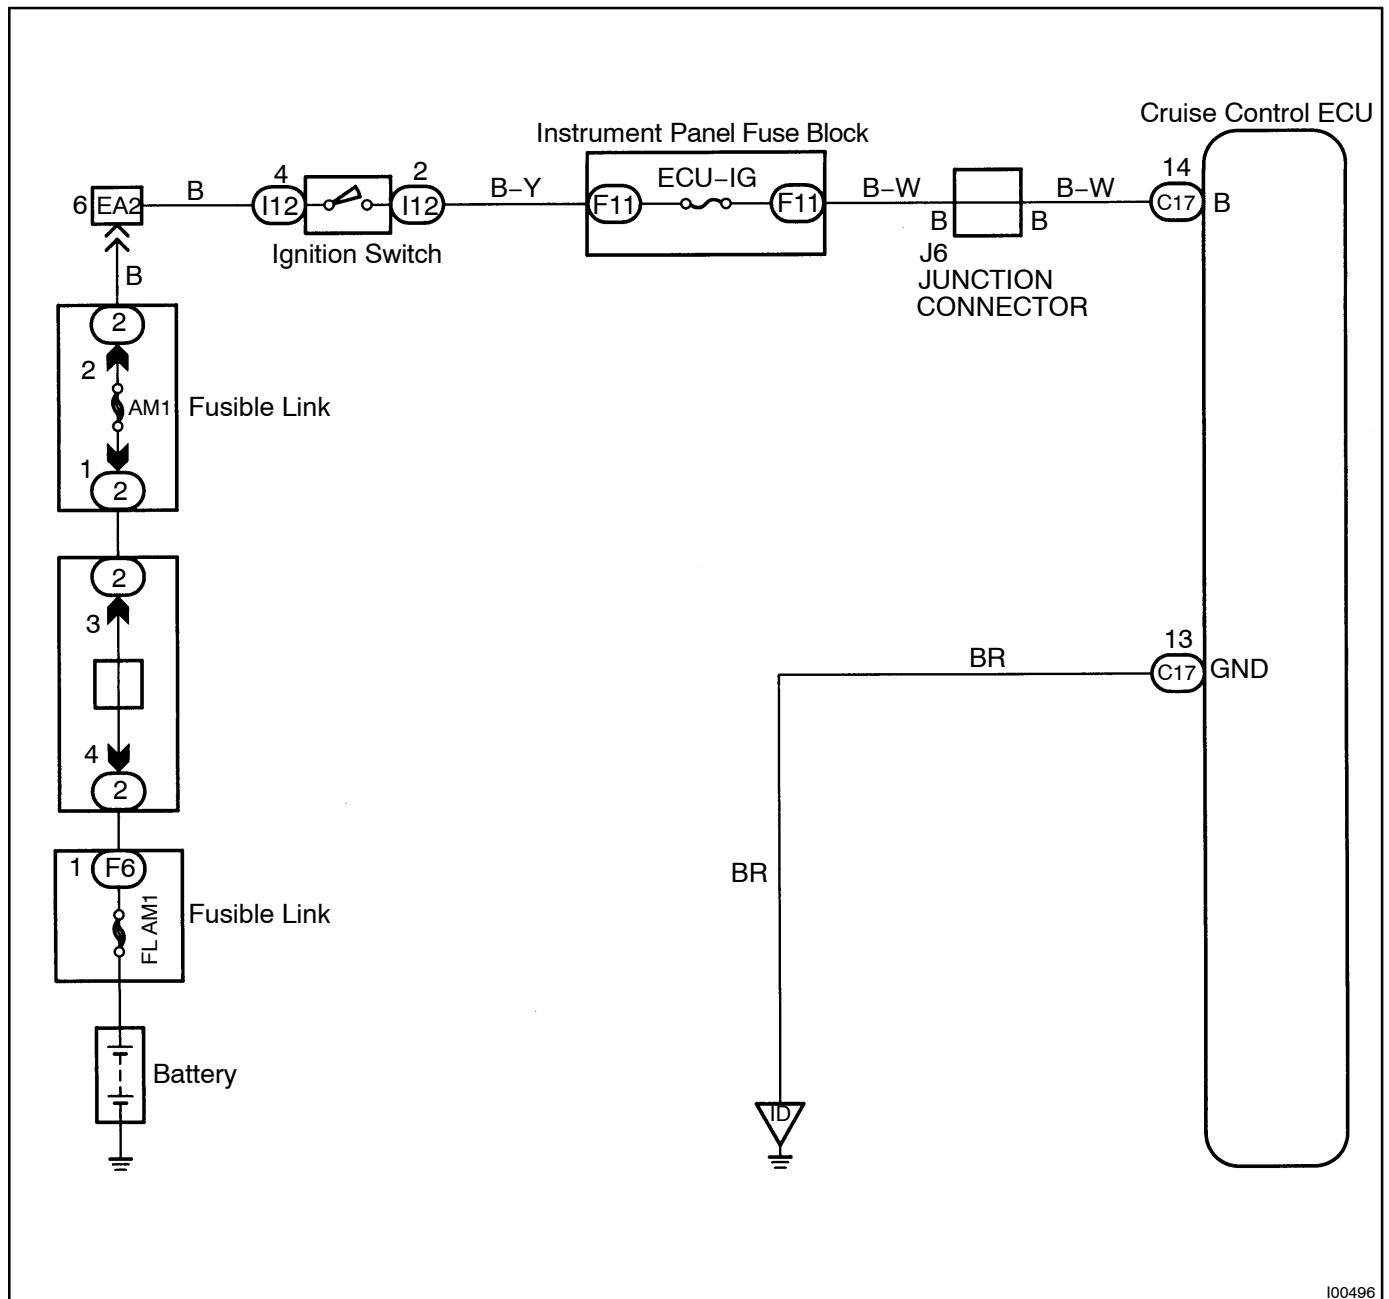


I00496

INSPECTION PROCEDURE

1 Check ECU-B fuse.

Junction Block No.1

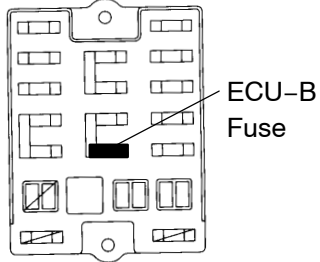

N18670

PREPARATION:

Remove the ECU-B fuse from instrument panel fuse block.

CHECK:

Check continuity of ECU-B fuse.

OK:

 
Continuity

NG


Check for short in all the harness and components connected to ECU-B fuse.

OK

2 Check voltage between terminals B and GND of cruise control ECU connector.



ON

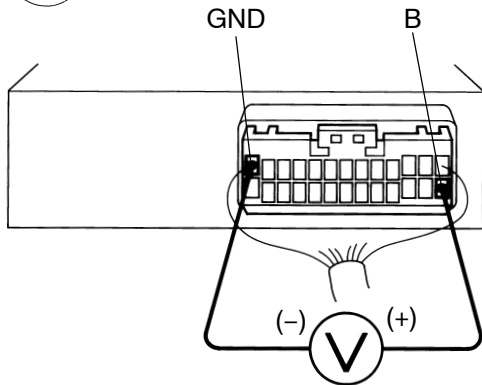AB0119
I00014

I00027

PREPARATION:

(a) Remove the ECU with connector still connected.

(b) Turn ignition switch ON.

CHECK:

Measure voltage between terminals B and GND of ECU connector.

OK:


10 - 14 V

OK

Proceed to next circuit inspection shown on problem symptoms table (See page [DI-294](#)).

NG

- 3** Check resistance between terminal GND of cruise control ECU connector and body ground (See page [IN-27](#)).

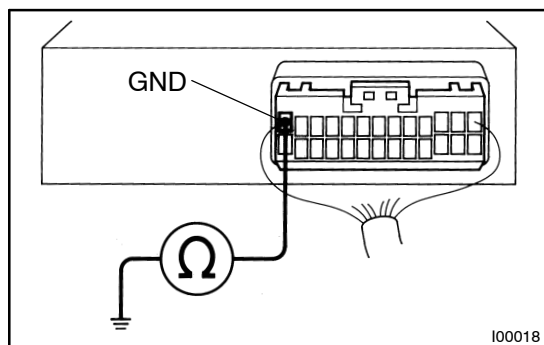**CHECK:**

Measure resistance between terminal GND of ECU connector and body ground.

OK:

Resistance: Below 1 Ω

NG

Repair or replace harness or connector.

OK

Check and repair harness and connector between cruise control ECU and battery (See page [IN-27](#)).