


CRUISE MAIN Indicator Light Circuit

CIRCUIT DESCRIPTION

When the cruise control main switch is turned ON, CRUISE MAIN indicator light lights up.


WIRING DIAGRAM

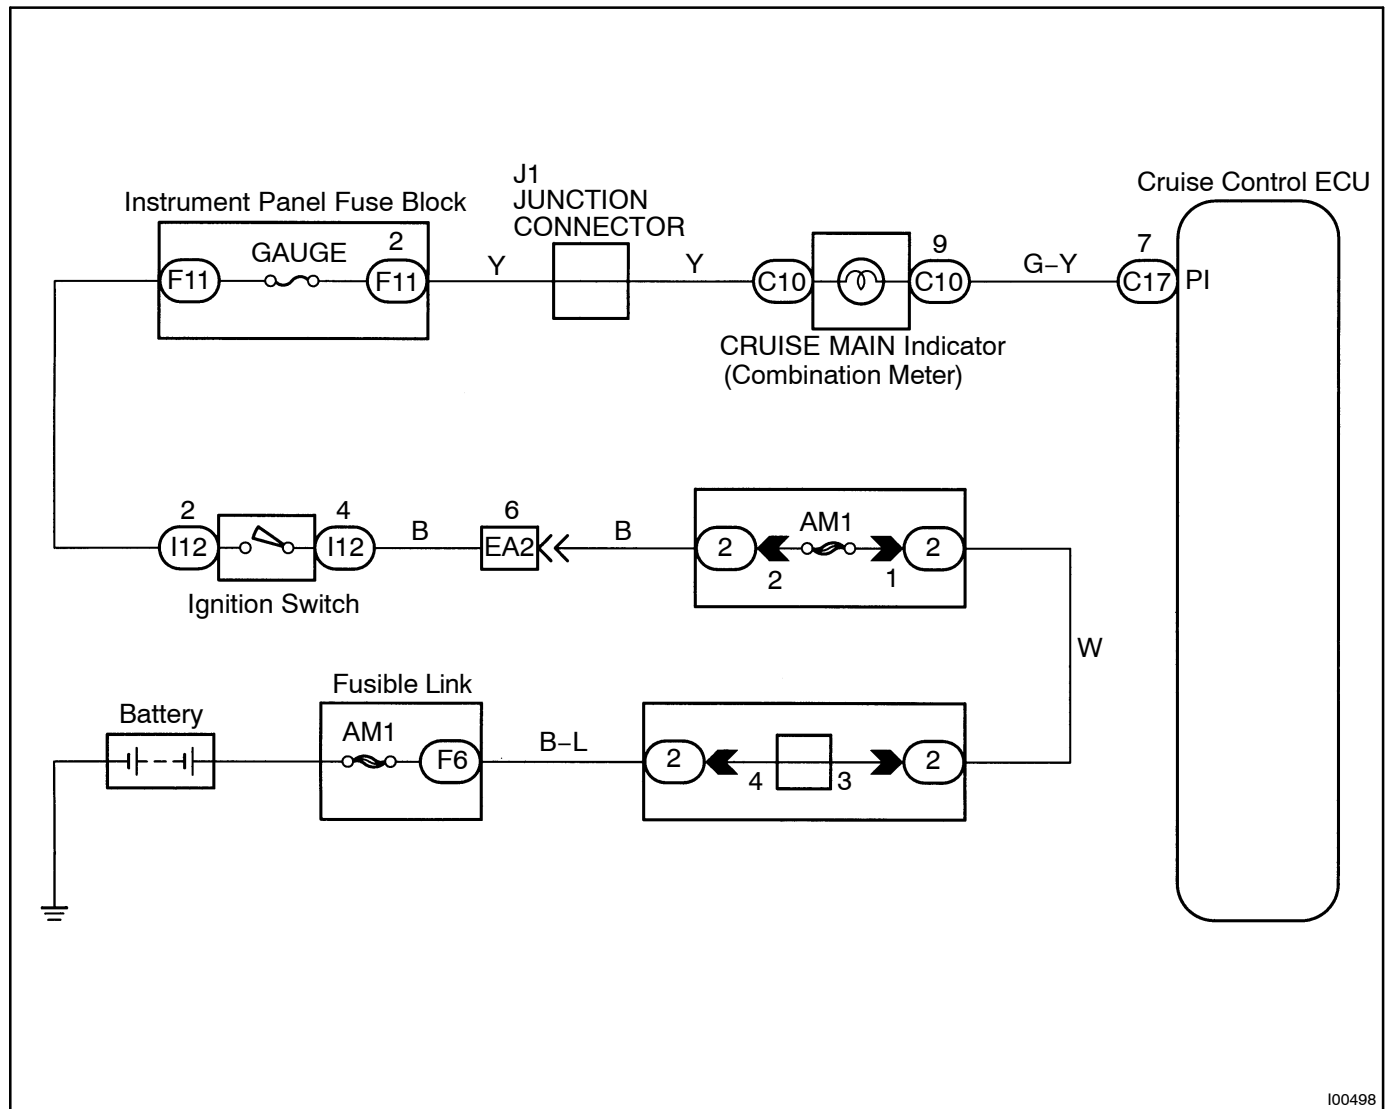

I00498

INSPECTION PROCEDURE

- 1** Check voltage between terminals PI and GND of cruise control ECU connector.

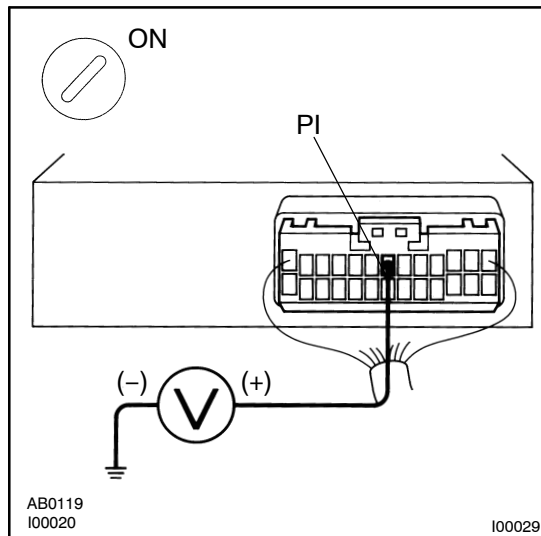**PREPARATION:**

Turn ignition switch ON.

CHECK:

Measure voltage between terminals PI and GND of ECU connector when main switch on and off.

OK:

Switch position	Voltage
OFF	10 - 16 V
ON	Below 1.2 V

OK

Proceed to next circuit inspection shown on problem symptoms table (See page [DI-294](#)).

NG

- 2** Check combination meter. (See page [BE-34](#))

NG

Replace combination meter.

OK

Check and replace cruise control ECU
(See page [IN-27](#)).