

|            |              |                                                                                        |
|------------|--------------|----------------------------------------------------------------------------------------|
| <b>DTC</b> | <b>P0121</b> | <b>Throttle/Pedal Position Sensor/Switch "A"<br/>Circuit Range/Performance Problem</b> |
|------------|--------------|----------------------------------------------------------------------------------------|

**CIRCUIT DESCRIPTION**

Refer to DTC P0120 (Throttle/Pedal Position Sensor/Switch "A" Circuit Malfunction) on page [DI-35](#).

| DTC No. | DTC Detection Condition                                                                                                                                                                                                    | Trouble Area               |
|---------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|----------------------------|
| P0121   | After the vehicle speed has been exceeded 30 km/h (19 mph) even once, the output value of the throttle position sensor is out of the applicable range while the vehicle speed between 30 km/h (19 mph) and 0 km/h (0 mph). | • Throttle position sensor |

**INSPECTION PROCEDURE**

|          |                                                                    |
|----------|--------------------------------------------------------------------|
| <b>1</b> | <b>Are there any other codes (besides DTC P0121) being output?</b> |
|----------|--------------------------------------------------------------------|

|            |                                  |
|------------|----------------------------------|
| <b>YES</b> | <b>Go to relevant DTC chart.</b> |
|------------|----------------------------------|

|           |
|-----------|
| <b>NO</b> |
|-----------|

|                                          |
|------------------------------------------|
| <b>Replace throttle position sensor.</b> |
|------------------------------------------|