

## PROBLEM SYMPTOMS TABLE

Proceed with troubleshooting of each circuit in the table below.

| Symptom                                                                                                                                                                                                                                                              | Suspect Area                                                                                                                                                  | See page |
|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------|----------|
| <ul style="list-style-type: none"> <li>• With the ignition switch at ACC or ON, the SRS warning light sometimes lights up after approx. 6 seconds have elapsed.</li> <li>• SRS warning light lights up even when ignition switch is in the LOCK position.</li> </ul> | <ul style="list-style-type: none"> <li>• SRS warning light system malfunction<br/>(Always lit up when ignition switch is in LOCK position.)</li> </ul>        | DI-273   |
| <ul style="list-style-type: none"> <li>• With the ignition switch at ACC or ON, the SRS warning lights does not light up.</li> </ul>                                                                                                                                 | <ul style="list-style-type: none"> <li>• SRS warning light system malfunction<br/>(Does not light up when ignition switch is turned to ACC or ON.)</li> </ul> | DI-275   |
| <ul style="list-style-type: none"> <li>• DTC not displayed.</li> <li>• SRS warning light is always lit up with a DTC check procedure.</li> <li>• DTC displayed without Tc and E1 terminal connection.</li> </ul>                                                     | <ul style="list-style-type: none"> <li>• Tc terminal circuit</li> </ul>                                                                                       | DI-278   |