
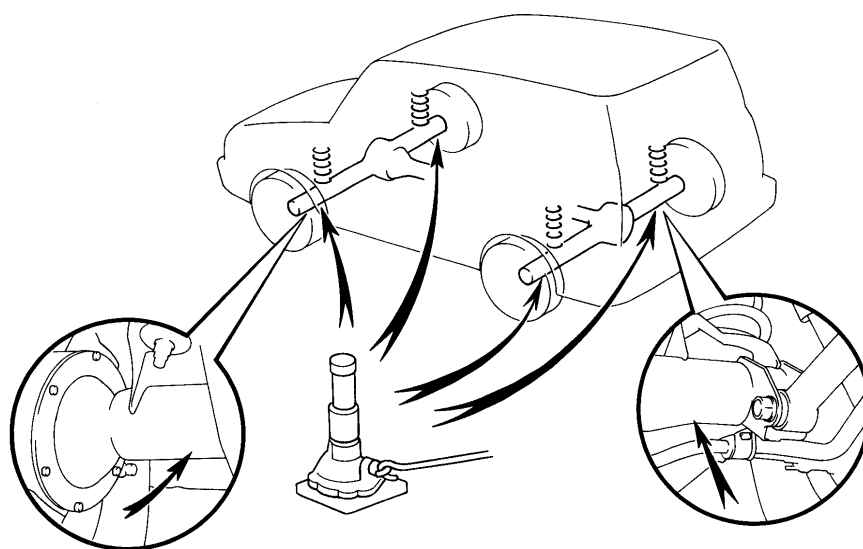


VEHICLE LIFT AND SUPPORT LOCATIONS

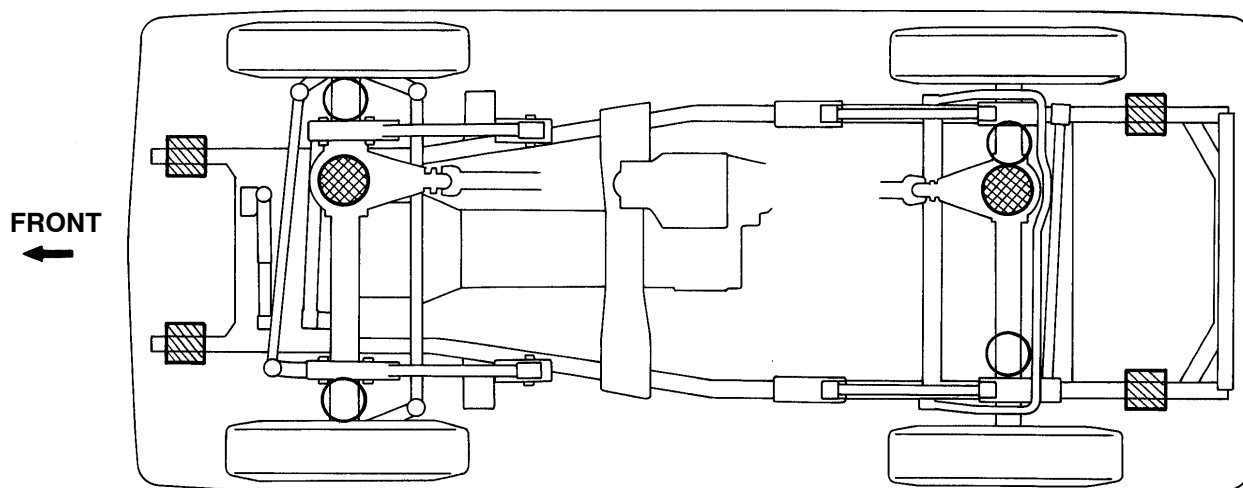

JACK POSITION

Front

Rear

Engine under cover

Rear differential carrier

SCREW TYPE JACK POSITION

SUPPORT POSITION

Safety stand



Z00796