

ENGINE

INSPECTION

HINT:

Inspect these items when the engine is cold.

1. INSPECT AIR FILTER

(a) Visually check that the air cleaner element is not excessively dirty, damaged or oily.

If necessary, replace the air cleaner element.

(b) Clean the element with compressed air. First blow from the inside thoroughly, then blow off the outside of the element.

2. REPLACE TIMING CHAIN (See page [EM-18](#))

3. INSPECT VALVE CLEARANCE

(See page [EM-4](#))

4. INSPECT DRIVE BELT

(See page [CH-1](#))

5. REPLACE ENGINE OIL AND OIL FILTER

(See page [LU-2](#))

6. REPLACE ENGINE COOLANT

(See page [CO-2](#))

7. INSPECT EXHAUST PIPES AND MOUNTINGS

Visually inspect the pipes, hangers and connections for severe corrosion, leaks or damage.

8. REPLACE AIR CLEANER FILTER

Replace the air cleaner filter with a new one.

9. INSPECT FUEL LINES, CONNECTIONS VALVE

(See page [EC-6](#))

Visually inspect the fuel lines for cracks, leakage loose connections, deformation or tank band looseness.

10. INSPECT GASKET IN FUEL TANK CAP

(See page [EC-6](#))

11. REPLACE SPARK PLUGS

(See page [IG-1](#))

12. INSPECT CHARCOAL CANISTER

(See page [EC-6](#))