

EQUIPMENT

Voltmeter	
Ammeter	
Ohmmeter	
Test lead	
Thermometer	Engine coolant temperature sender gauge, Engine oil level warning switch
Oil bath	Engine oil level warning switch
Bulb (3.4 W)	Fuel sender gauge, Seat belt warning relay
Bulb (21 W)	Turn signal flasher relay
Dry cell battery	Fuel sender gauge
Clip remover	For removing cowl louver
Torque wrench	
Masking tape	Rear window defogger wire
Tin foil	Rear window defogger wire