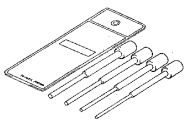 
 
 
 
 
 
 
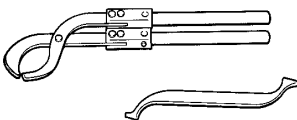 
 
 


 
 
 
 
 
 
 
 
ENGINE MECHANICAL

 
 
 
 
 
 
SST (Special Service Tools)

PP300-01

	09201-10000 Valve Guide Bushing Remover & Replacer Set	
	(09201-01070) Valve Guide Bushing Remover & Replacer 7	
	09202-70020 Valve Spring Compressor	
	(09202-00010) Attachment	
	09213-58012 Crankshaft Pulley Holding Tool	
	09223-15030 Oil Seal & Bearing Replacer	Crankshaft rear oil seal
	09236-00101 Water Pump Overhaul Tool Set	
	(09236-15010) Bearing Stay	Valve stem oil seal
	09248-06020 Valve Lifter Stopper	
	09248-55050 Valve Clearance Adjust Tool Set	
	(09248-05510) Valve Lifter Press	
	09316-60010 Transmission & Transfer Bearing Replacer <mk2>	

PREPARATION - ENGINE MECHANICAL

	(09316-00010) Replacer Pipe <mk2>	
	(09316-00050) Replacer "D"<mk2>	
	09316-60011 Transmission & Transfer Bearing Replacer	
	(09316-00011) Replacer Pipe	Crankshaft front oil seal
	(09316-00051) Replacer "D"	Crankshaft front oil seal
	09330-00021 Companion Flange Holding Tool	Crankshaft pulley
	09636-20010 Upper Ball Joint Dust Cover Replacer	Crankshaft timing gear
	09816-30010 Oil Pressure Switch Socket	Knock sensor
	09843-18020 Diagnosis Check Wire	
	(09951-04010) Hanger 150	
	(09952-04010) Slide Arm	
	(09953-04020) Center Bolt 150	
	(09954-04010) Arm 25	

	(09951-05010) Hanger 150	
	(09952-05010) Slide Arm	
	(09953-05010) Center Bolt 100	
	(09953-05020) Center Bolt 150	
	(09954-05020) Claw No.2	
	09950-60010 Replacer Set	
	(09951-00280) Replacer 28	Connecting rod bushing
	(09951-00350) Replacer 35	Crankshaft timing gear
	(09951-00480) Replacer 48	Spark plug tube gasket
	09950-70010 Handle Set	
	(09951-07100) Handle 100	
	(09951-07150) Handle 150	