 
 
 
 
 
 
 
 
 
 
 


SUSPENSION AND AXLE

 
 
 
 
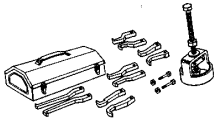 
 
 
 
 
 
SST (Special Service Tools)

 
 
 
 
 
 
PP2YB-01

	09214-76011	Crankshaft Pulley Replacer	Oil seal
	09223-15020	Oil Seal & Bearing Replacer	Side bearing
	09226-10010	Crankshaft Front & Rear Bearing Replacer	
	09308-00010	Oil Seal Puller	Drive oilion rear bearing outer race
	09308-10010	Oil Seal Puller	Oil seal
	09315-00022	Clutch Release Bearing Remover & Replacer	Side bearing
	09316-20011	Transfer Bearing Replacer	
	09316-60011	Transmission & Transfer Bearing Replacer	Oil storage ring Drive pinion rear bearing
	(09316-00011)	Replacer Pipe	
	(09316-00021)	Replacer "A"	
	(09316-00051)	Replacer "D"	
	09330-00021	Companion Flange Holding Tool	Companion flange holding

 
 
 
 
 
 
	09504-00011 Differential Side Bearing Adjusting Nut Wrench	Side bearing preload adjust
	09504-22011 Differential Side Bearing Replacer	Side bearing plate washer
	09506-30012 Differential Drive Pinion Rear Bearing Cone Replacer	
	09506-35010 Differential Drive Pinion Rear Bearing Replacer	Drive pinion rear bearing
	09509-25011 Rear Axle Bearing Lock Nut Wrench	Rear axle bearing lock nut Rear axle bearing preload
	09517-36010 Rear Axle Shaft Oil Seal Replacer-	Oil seal
	(09553-10010) Differential Side Bearing Replacer	
	(09951-03010) Upper Plate	
	(09953-03010) Center Bolt	
	(09954-03010) Arm	
	(09955-03030) Lower Plate 130	
	(09956-03020) Adapter 18	
	09550-60010 Differential Side Bearing Replacer	Side bearing

PREPARATION - SUSPENSION AND AXLE

	09556-22010 Drive Pinion Front Bearing Remover	Front bearing
	09605-60010 Steering Knuckle Bearing Cup Replacer-	Bearing outer races
	09606-60020 Steering Knuckle Bearing Remover	Steering knuckle bearing
	09607-60020 Front Wheel Adjusting Nut Wrench	Axle hub
	09611-22012 Tie Rod End Puller	Tie rod
	09612-65014 Steering Worm Bearing Puller	Steering knuckle bushing
	(09612-01010) Claw "A"	
	(09612-01050) Hanger Pin with Nut	
	09618-60010 Front Axle & Drive Shaft Bearing Replacer	Oil seal
	09710-22021 Front Suspension Bushing Tool Set	
	(09710-01071) Lower Arm Bushing Remover	
	09710-22042 Rear Suspension Bushing Tool Set	
	(09710-02051) Base	Lateral control rod bushing

	(09710-02071) Bushing Remover & Replacer	Lateral control rod bushing
	09726-40010 Lower Control Shaft Bearing Replacer	Dust deflector
	09727-30021 Coil Spring Compressor	Coilo spring
	09950-00020 Bearing Remover	Drive pinion rear bearing
	(09951-03010) Upper Plate	
	(09953-03010) Center Bolt	
	(09954-03010) Arm	
	(09955-03030) Lower Plate 130	
	(09956-03020) Adapter 18	
	(09951-04010) Hanger 150	
	(09952-04010) Slide Arm	
	(09953-04020) Center Bolt 150	
	(09954-04010) Arm 25	

PREPARATION - SUSPENSION AND AXLE

	(09957-04010) Attachment	
	09950-60010 Replacer Set	Side bearing
	(09951-00480) Replacer 48	
	(09951-00490) Replacer 49	
	(09951-00540) Replacer 54	
	09950-60020 Replacer Set No.2	Bearing races Oil seal
	(09951-00710) Replacer 71	
	(09951-00720) Replacer 72	
	(09951-00810) Replacer 81	
	(09951-00890) Replacer 89	
	(09951-00910) Replacer 91	
	09950-70010 Handle Set	Lateral control rod bushing
	(09951-07100) Handle 100	

	(09951-07150) Handle 150
---	--------------------------