 
 
 
 
 
 
 
 
 
 
 
 


TRANSFER

SST (Special Service Tools)

PP2Y5-01

	09223-00010	Cover & Seal Replacer	Center differential
	09223-15020	Oil Seal & Bearing Replacer	Front extension housing
	09316-12010	Transfer Bearing Replacer	Center differential
	09316-20011	Transfer Bearing Replacer	Front extension housing, Rear extension housing, Component parts removal and installation
	09316-60011	Transmission & Transfer Bearing Replacer	
	(09316-00011)	Replacer Pipe	Front extension housing, Rear extension housing, Idler gear, Component parts removal and installation, Center differential
	(09316-00021)	Replacer "A"	Rear extension housing
	(09316-00031)	Replacer "B"	Front extension housing, Rear extension housing, Idler gear, Component parts removal and installation, Input shaft
	(09316-00041)	Replacer "C"	Component parts removal and installation, Front extension housing, Rear extension housing
	(09316-00061)	Replacer "E"	Front extension housing
	(09316-00071)	Replacer "F"	Idler gear, Front extension housing
	09325-12010	Transmission Oil Plug	Rear extension housing

	09527-30010 Rear Axle Shaft Bearing Remover	Input shaft
	(09550-00020) Handle <mk2>	
	09612-24014 Steering Gear Housing Overhaul Tool Set	Center differential
	(09612-10050) Steering Rack Shaft Bushing Replacer	
	09950-00020 Bearing Remover	Idler gear, Center differential, Front extension housing
	09950-00030 Bearing Remover Attachment	Center differential
	09950-60010 Replacer Set	
	(09951-00320) Replacer 32	Component parts removal and installation, Center differential
	(09951-00400) Replacer 40	Center differential
	09950-70010 Handle Set	Component parts removal and installation, Front extension housing Center differential
	(09951-07150) Handle 150	