


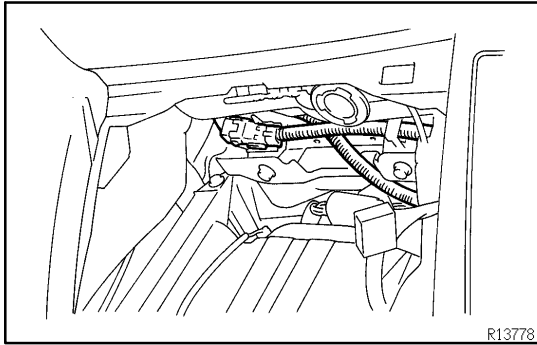

## REMOVAL

### NOTICE:

If the wiring connector of the SRS is disconnected with the ignition switch at ON or ACC, DTCs will be recorded.


#### 1. DISCONNECT AIRBAG CONNECTOR

- (a) Remove the glove compartment door.  
(See page [BO-86](#))
- (b) Remove the airbag connector from the airbag bracket.

### NOTICE:

When handling the airbag connector, take care not to damage the airbag wire harness.

- (c) Disconnect the airbag connector.

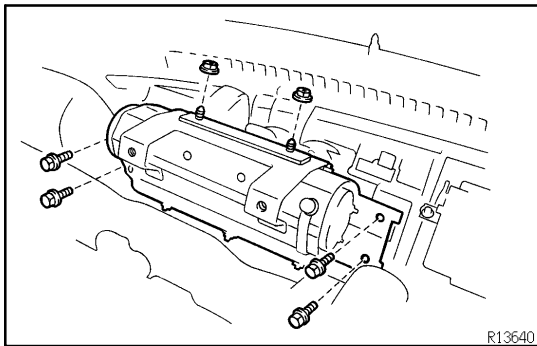


#### 2. REMOVE INSTRUMENT PANEL

(See pages [BO-86](#))

#### 3. REMOVE FRONT PASSENGER AIRBAG ASSEMBLY

- (a) Remove the 4 bolts and 2 nuts, and remove front passenger airbag assembly.

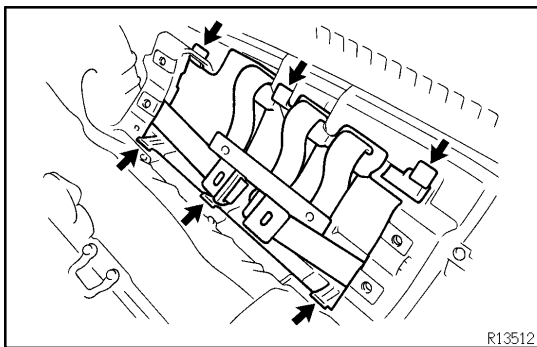

- (b) Pry up the 6 clips shown in the illustration and remove the airbag door.

### CAUTION:

Do not store the front passenger airbag assembly with the airbag deployment direction facing down. Never disassemble the front passenger airbag assembly.