


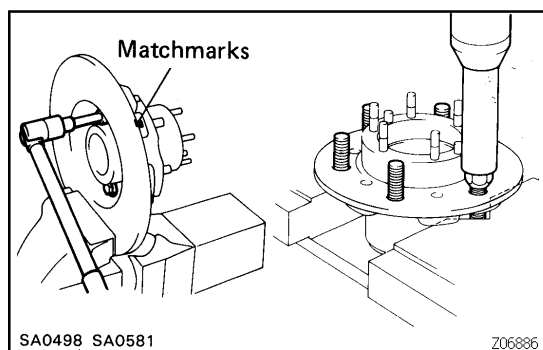


FRONT WHEEL HUB BOLT REPLACEMENT

SA1UE-01

1. REMOVE FRONT AXLE HUB (See page [SA-8](#))

2. REPLACE HUB BOLTS

- Place matchmarks on the axle hub and disc.
- Remove the 6 bolts and disc from the axle hub.
- Install the nut to the hub bolt.

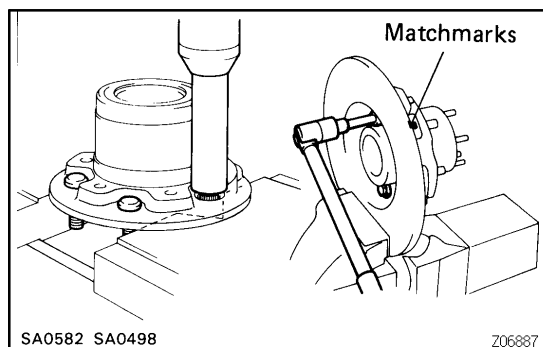

- Using an extension bar and a press, remove the hub bolt.
- Using an extension bar and press, install a new hub bolt.
- Align the matchmarks on the axle hub and disc.
- Install and torque the 6 bolts.

Torque: 64 N·m (650 kgf·cm, 47 ft·lbf)

3. INSTALL FRONT AXLE HUB (See page [SA-10](#))