



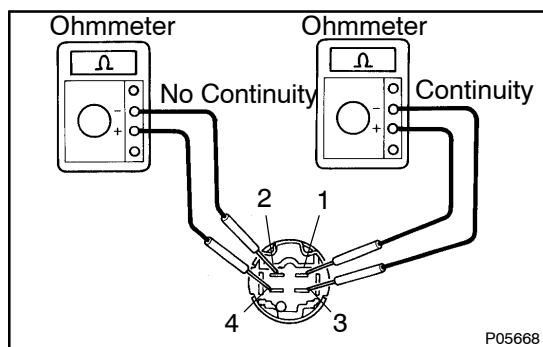

INSPECTION

1. **REMOVE CIRCUIT OPENING RELAY**
2. **INSPECT CIRCUIT OPENING RELAY CONTINUITY**
 - (a) Using an ohmmeter, check that there is continuity between terminals 1 and 3.
 - (b) Check that there is no continuity between terminals 2 and 4.

If continuity is not as specified, replace the relay.

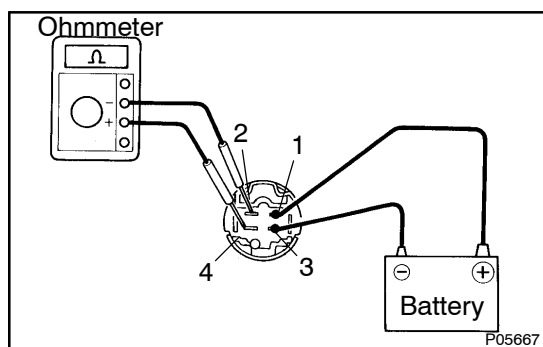

3. **INSPECT CIRCUIT OPENING RELAY OPERATION**
 - (a) Apply battery voltage across terminals 1 and 3.
 - (b) Using an ohmmeter, check that there is continuity between terminals 2 and 4.

- (a) Apply battery voltage across terminals 1 and 3.
- (b) Using an ohmmeter, check that there is continuity between terminals 2 and 4.

If operation is not as specified, replace the relay.

4. **REINSTALL CIRCUIT OPENING RELAY**