


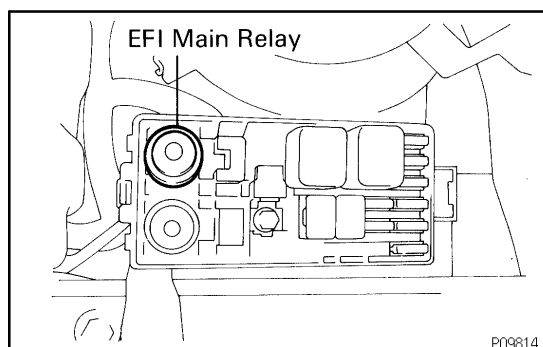


EFI MAIN RELAY INSPECTION

SF06G-11

1. REMOVE EFI MAIN RELAY


LOCATION: In the engine compartment relay box.

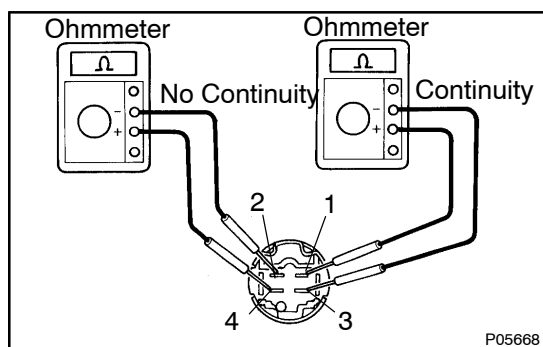

2. INSPECT EFI MAIN RELAY CONTINUITY

- Using an ohmmeter, check that there is continuity between terminals 1 and 3.
- Check that there is no continuity between terminals 2 and 4.

If continuity is not as specified, replace the relay.

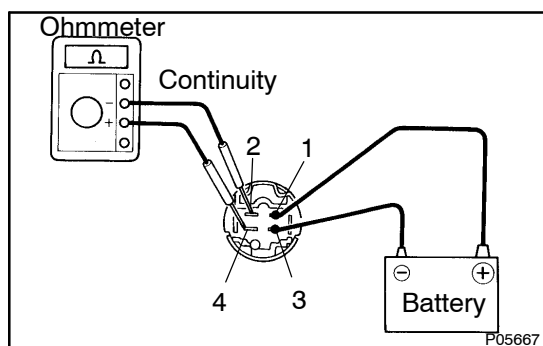

3. INSPECT EFI MAIN RELAY OPERATION

- Apply battery voltage across terminals 1 and 3.
- Using an ohmmeter, check that there is continuity between terminals 2 and 4.

If operation is not as specified, replace the relay.

4. REINSTALL EFI MAIN RELAY