


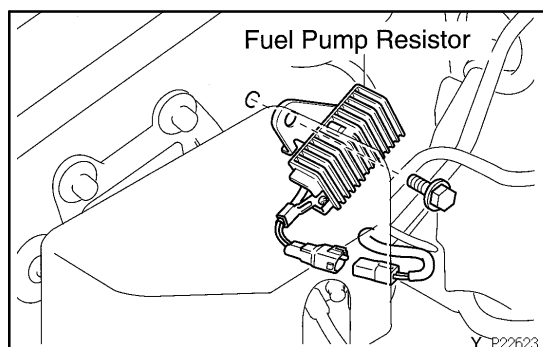


FUEL PUMP RESISTOR INSPECTION

SF1F8-01

1. REMOVE FUEL PUMP RESISTOR

- Disconnect the fuel pump resistor connector.
- Remove the bolt and fuel pump resistor.

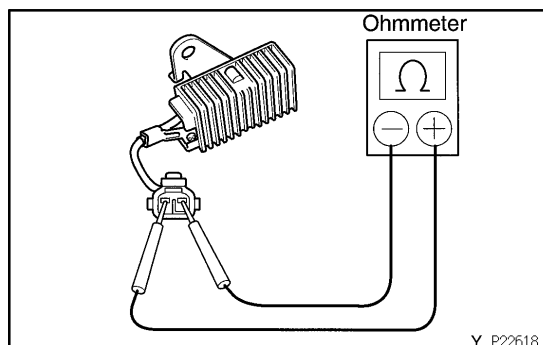

2. INSPECT FUEL PUMP RESISTOR

Using an ohmmeter, measure the resistance between the terminals.

Resistance: 0.70 – 0.76 Ω at 20°C (68°F)

If there is no continuity, replace the resistor.

3. REINSTALL FUEL PUMP RESISTOR

Torque: 18 N·m (185 kgf·cm, 13 ft·lbf)