
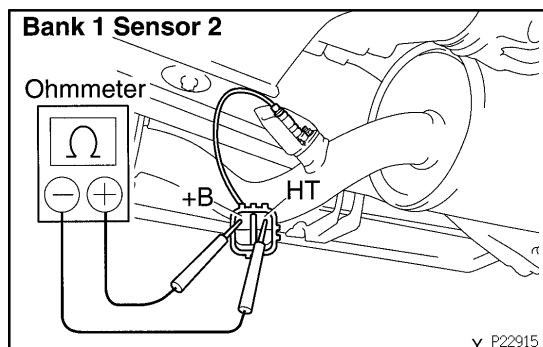


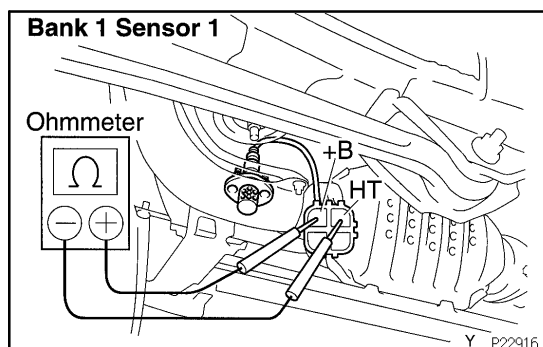

HEATED OXYGEN SENSOR INSPECTION

SF1FC-01

INSPECT HEATER RESISTANCE OF HEATED OXYGEN SENSORS

- Disconnect the heated oxygen sensor connector.
- Using an ohmmeter, measure the resistance between terminals +B and HT.

Resistance: 11 – 16 Ω at 20°C (68°F)

If resistance is not as specified, replace the heated oxygen sensor.

- Reconnect the heated oxygen sensor connector.