


G ELECTRICAL WIRING ROUTING

Position of Parts in Engine Compartment

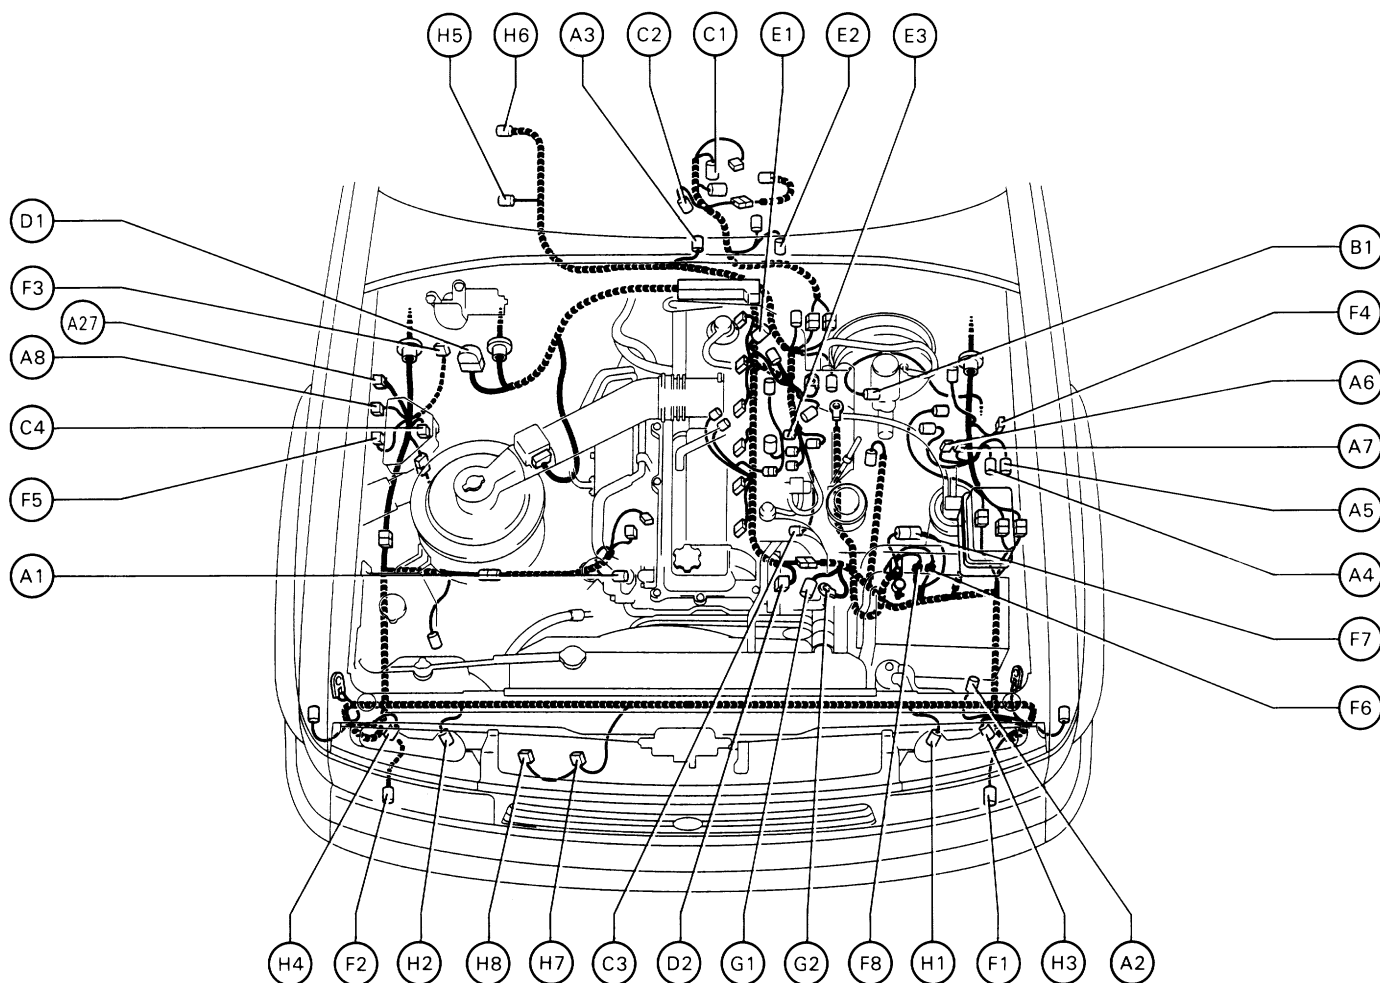

A1 A/C Magnetic Clutch
 A2 A/C Dual Pressure SW
 A3 A/T Fluid Temp. Sensor
 A4 ABS Actuator
 A5 ABS Actuator
 A6 ABS Relay
 A7 ABS Relay
 A8 Auto Antenna Motor
 A27 Auto Antenna Relay

B1 Brake Fluid Level Warning SW

C1 Center Diff. Lock Control Motor
 C2 Center Diff. Lock Indicator SW
 C3 Crankshaft Position Sensor
 C4 Cruise Control Actuator

D1 Data Link Connector 1
 D2 Distributor

E1 EGR Gas Temp. Sensor
 E2 Electronically Controlled Transmission Solenoid


E3 Engine Coolant Temp. Sensor

F1 Front Turn Signal Light RH
 F2 Front Turn Signal Light RH
 F3 Front Wiper Motor
 F4 Fuel Pump Relay
 F5 Fuel Pump Resistor
 F6 Fusible Link (AM1)
 F7 Fusible Link (AM2)
 F8 Fusible Link (Main)

G1 Generator
 G2 Generator

H1 Headlight Hi LH
 H2 Headlight Hi RH
 H3 Headlight Lo LH
 H4 Headlight Lo RH
 H5 Heated Oxygen Sensor (Bank 1 Sensor 1)
 H6 Heated Oxygen Sensor (Bank 1 Sensor 2)
 H7 Horn LH (High)
 H8 Horn RH (Low)

Position of Parts in Engine Compartment

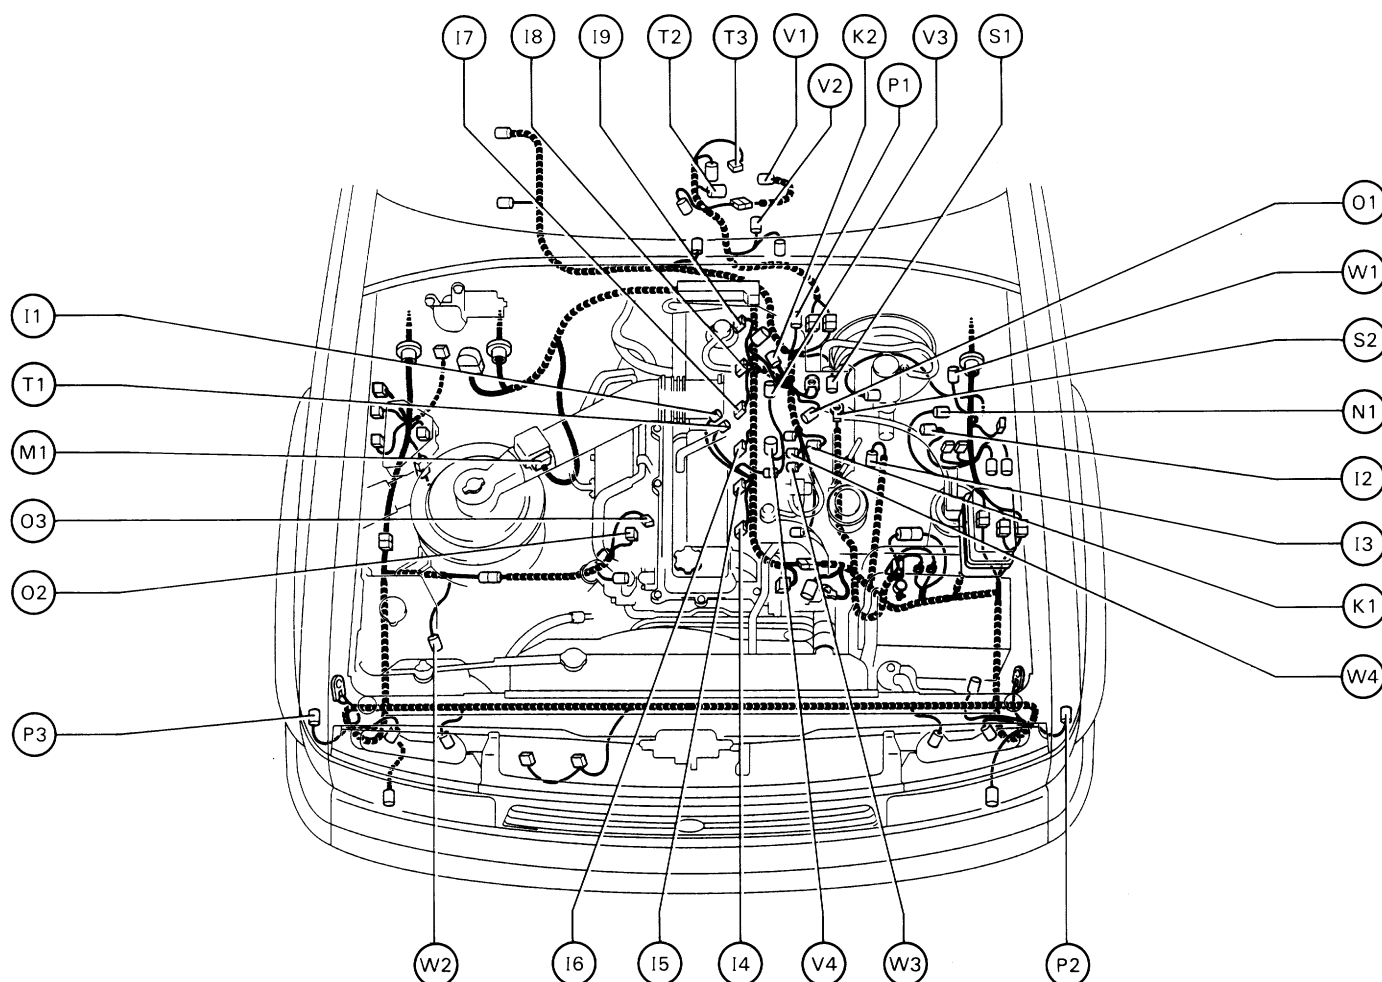

I1 Idle Air Control Valve
 I2 Igniter
 I3 Ignition Coil
 I4 Injector No. 1
 I5 Injector No. 2
 I6 Injector No. 3
 I7 Injector No. 4
 I8 Injector No. 5
 I9 Injector No. 6

K1 Knock Sensor 1
 K2 Knock Sensor 2

M1 Mass Air Flow Meter

N1 Noise Filter (Ignition System)

O1 Oil Level Warning SW
 O2 Oil Pressure Sender
 O3 Oil Pressure Sender

P1 Park/Neutral Position SW
 P2 Parking Light LH
 P3 Parking Light RH

S1 Starter
 S2 Starter


T1 Throttle Position Sensor
 T2 Transfer L4 Position SW
 T3 Transfer Neutral Position SW

V1 Vehicle Speed Sensor (Combination Meter)
 V2 Vehicle Speed Sensor (Electronically
 Controlled Transmission)
 V3 VSV (EGR)
 V4 VSV (Fuel Pressure Control)

W1 Washer Change Valve
 W2 Washer Motor
 W3 Water Temp. Sender
 W4 Water Temp. SW (A/C)

G ELECTRICAL WIRING ROUTING

Position of Parts in Instrument Panel

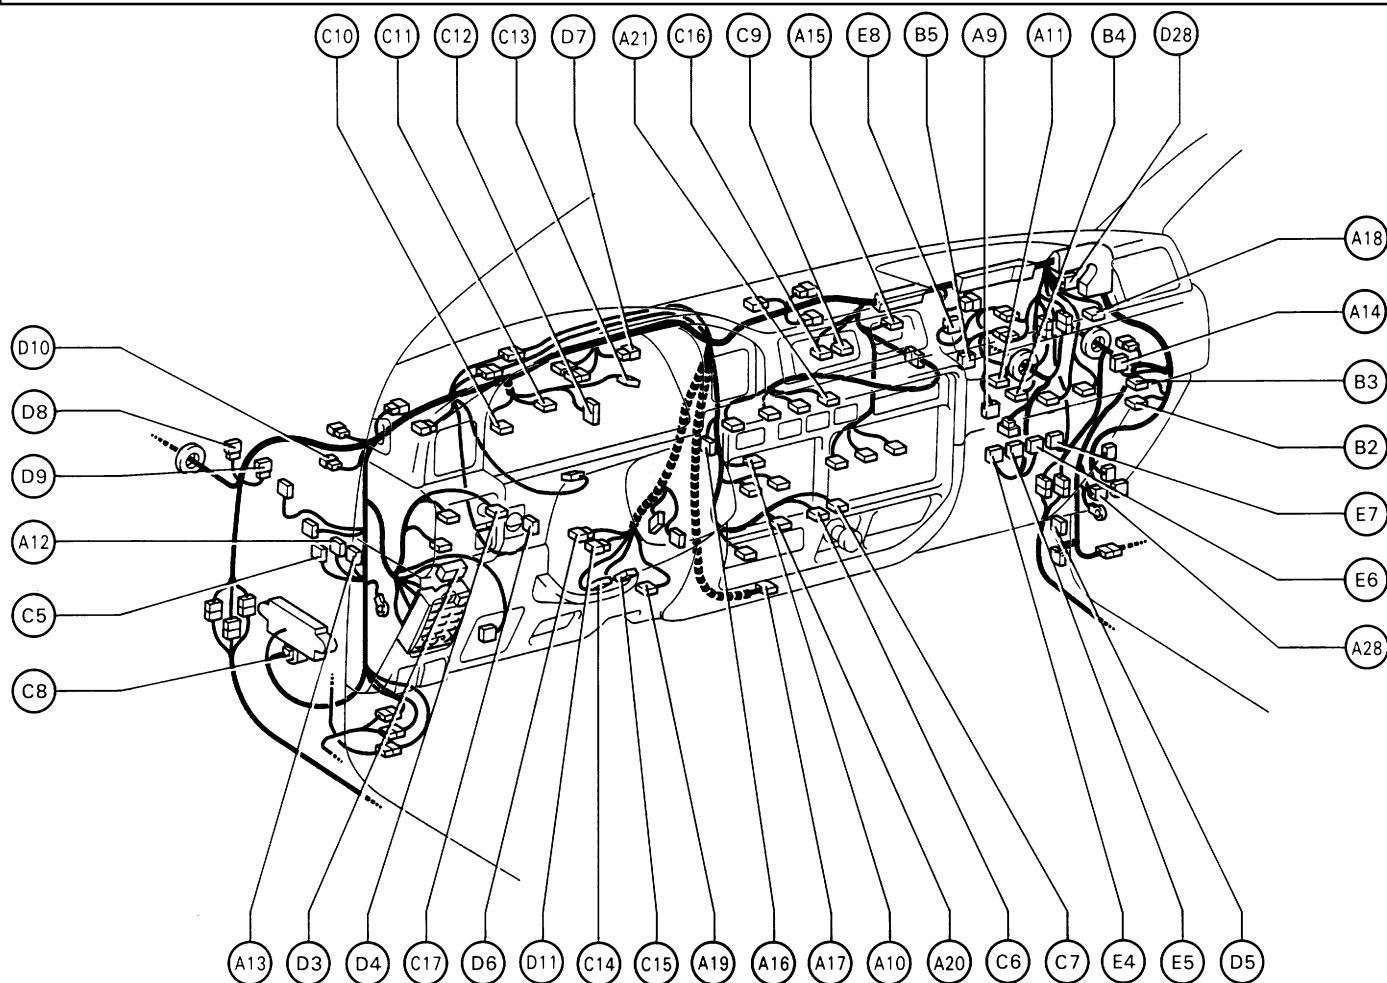

A9 A/C Amplifier
 A10 A/C System Amplifier
 A11 A/C Thermistor
 A12 ABS ECU
 A13 ABS ECU
 A14 Air Inlet Control Servo Motor
 A15 Air Mix Control Servo Motor
 A16 Air Vent Mode Control Servo Motor
 A17 Airbag Sensor Assembly
 A18 Airbag Squib (Front Passenger's Airbag Assembly)
 A19 Airbag Squib (Steering Wheel Pad)
 A20 Ashtray Illumination
 A21 Auto Antenna Control SW
 A28 Auto Antenna ECU

B2 Blower Motor (A/C)
 B3 Blower Motor (Heater)
 B4 Blower Resistor
 B5 Blower Speed Control Relay


C5 Center Diff. Lock Control Relay
 C6 Cigarette Lighter
 C7 Cigarette Lighter Illumination
 C8 Circuit Opening Relay
 C9 Clock

C10 Combination Meter
 C11 Combination Meter
 C12 Combination Meter
 C13 Combination Meter
 C14 Combination SW
 C15 Combination SW
 C16 Cooling Fan (Radio and Player)
 C17 Cruise Control ECU

D3 Data Link Connector 3
 D4 Diff. Lock Control SW
 D5 Diff. Lock ECU
 D6 Diode (Front Washer)
 D7 Diode (Headlight)
 D8 Diode (Interior Light)
 D9 Diode (Interior Light)
 D10 Diode (Interior Light)
 D11 Diode (Rear Washer)
 D28 Diode (Neutral Detection)

E4 Engine Control Module
 E5 Engine Control Module
 E6 Engine Control Module
 E7 Engine Control Module
 E8 Engine Coolant Temp. Cut Relay

Position of Parts in Instrument Panel

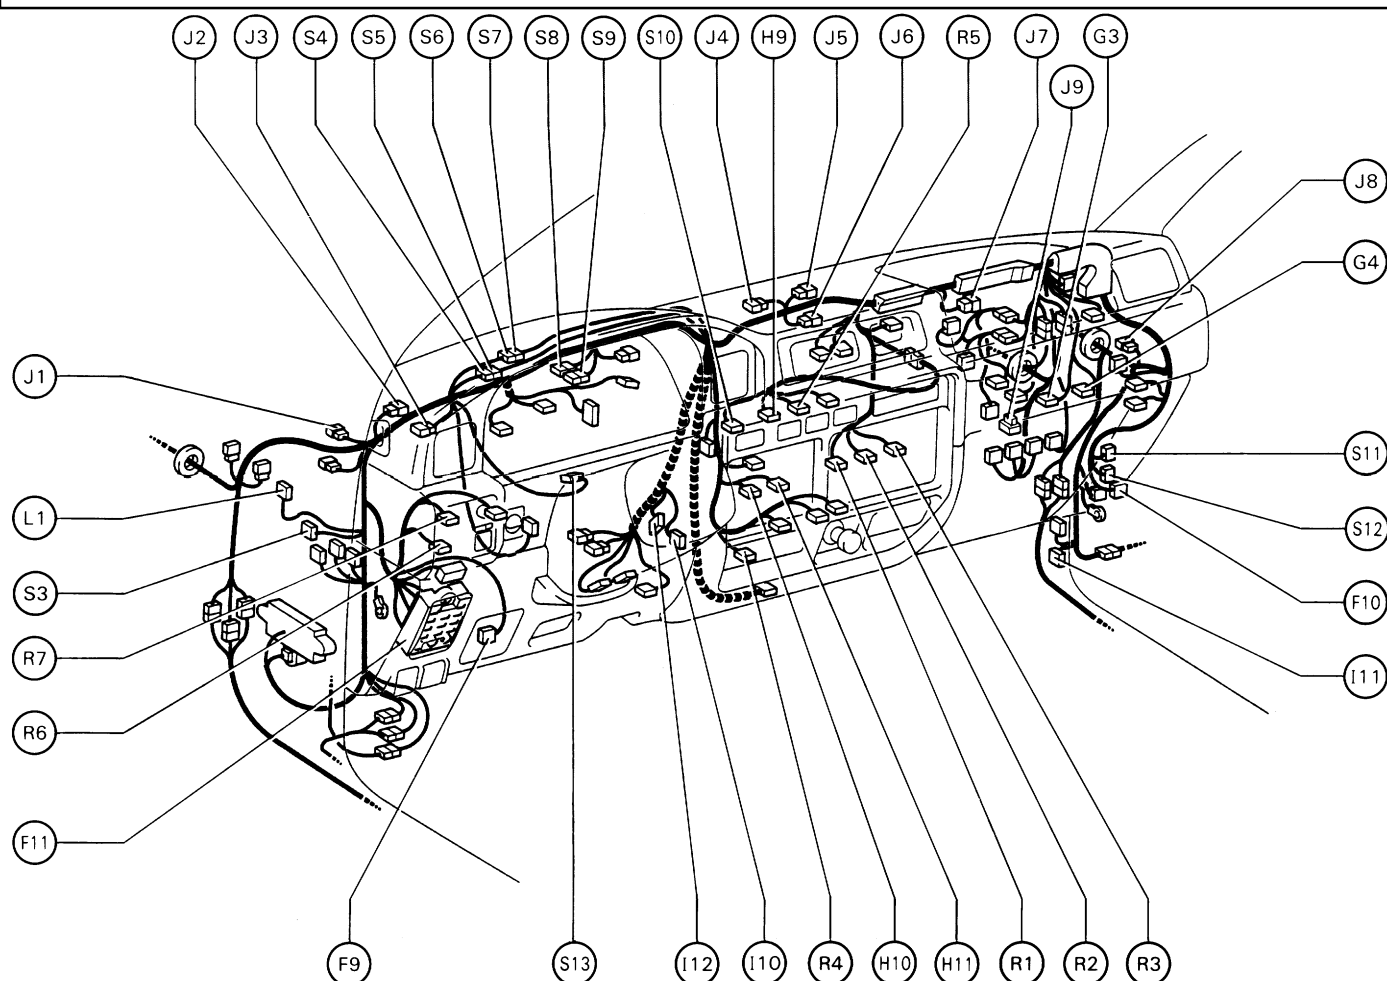

F9 Front Speaker LH
F10 Front Speaker RH
F11 Fuse Block

G3 Glove Box Light
G4 Glove Box Light SW

H9 Hazard SW
H10 Heater Control SW and A/C SW
H11 Heater Control SW and A/C SW

I10 Ignition Key Cylinder Light
I11 Ignition Key Cylinder Light Relay
I12 Ignition SW, Unlock Warning SW and Key Interlock Solenoid

J1 Junction Connector
J2 Junction Connector
J3 Junction Connector
J4 Junction Connector
J5 Junction Connector
J6 Junction Connector
J7 Junction Connector
J8 Junction Connector
J9 Junction Connector


L1 Light Retainer Relay

R1 Radio and Player
R2 Radio and Player
R3 Radio and Player
R4 Rear Heater SW
R5 Rear Window Defogger SW
R6 Remote Control Mirror SW
R7 Rheostat

S3 Seat Belt Warning Relay
S4 Short Connector (SRS)
S5 Short Connector (SRS)
S6 Short Connector (SRS)
S7 Short Connector (SRS)
S8 Short Connector (A/C)
S9 Short Connector (A/C)
S10 Short Pin (Center Diff. Lock)
S11 Stereo Component Amplifier
S12 Stereo Component Amplifier
S13 Stop Light SW

G ELECTRICAL WIRING ROUTING

Position of Parts in Body

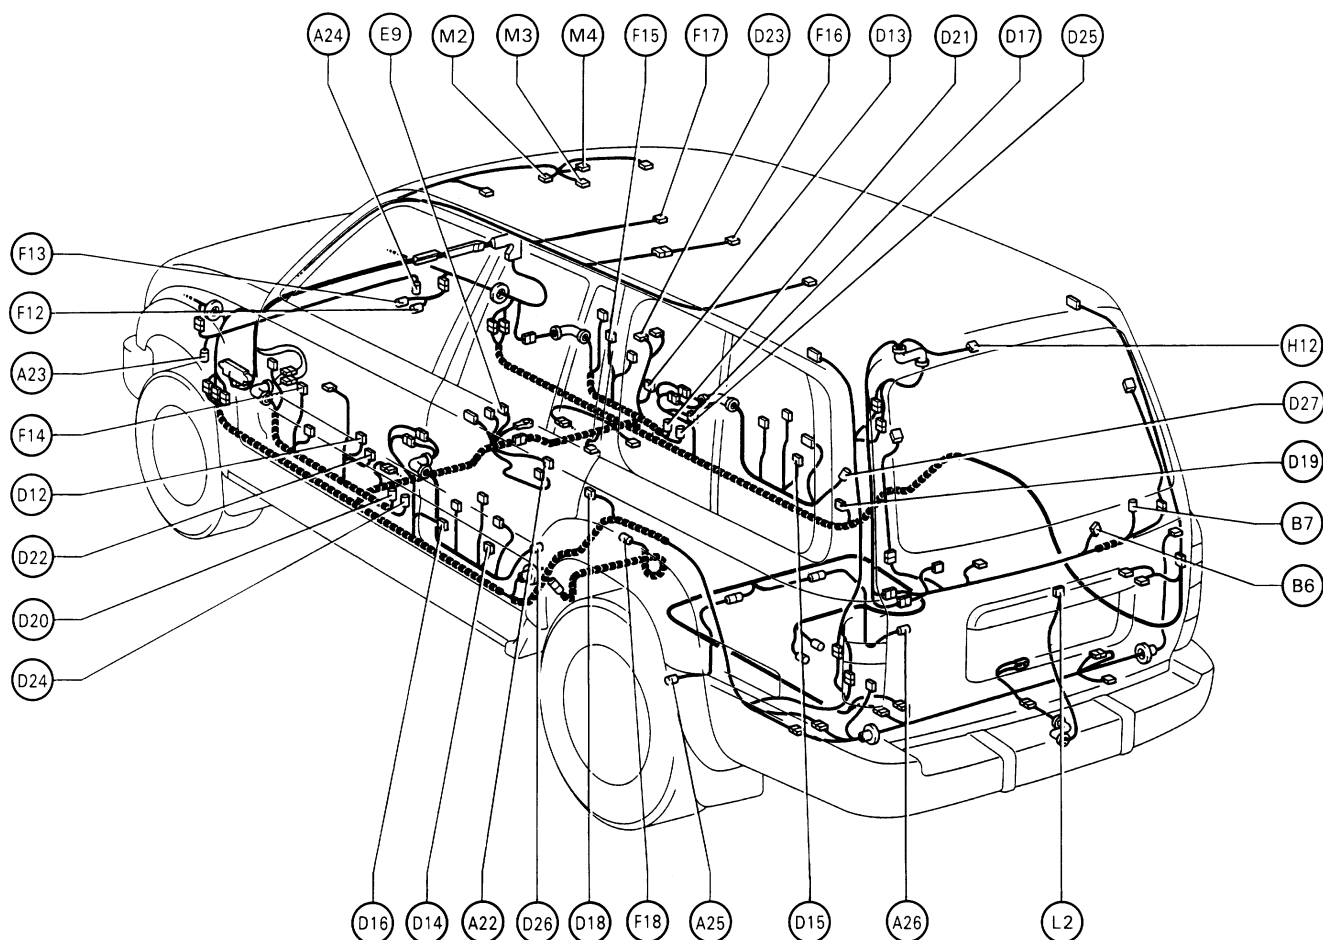

A22 ABS Deceleration Sensor
 A23 ABS Speed Sensor Front LH
 A24 ABS Speed Sensor Front RH
 A25 ABS Speed Sensor Rear LH
 A26 ABS Speed Sensor Rear RH

B6 Back Door Courtesy SW
 B7 Back Door Lock Motor

D12 Door Courtesy Light Front LH
 D13 Door Courtesy Light Front RH
 D14 Door Courtesy Light Rear LH
 D15 Door Courtesy Light Rear RH
 D16 Door Courtesy SW Front LH
 D17 Door Courtesy SW Front RH
 D18 Door Courtesy SW Rear LH
 D19 Door Courtesy SW Rear RH
 D20 Door Key Lock and Unlock SW LH
 D21 Door Key Lock and Unlock SW RH
 D22 Door Lock Control Relay
 D23 Door Lock Control SW RH

D24 Door Lock Motor and Door Unlock Detection SW Front LH
 D25 Door Lock Motor and Door Unlock Detection SW Front RH
 D26 Door Lock Motor Rear LH
 D27 Door Lock Motor Rear RH

E9 Electronically Controlled Transmission Pattern Select SW


F12 Front Diff. Lock Control Motor
 F13 Front Diff. Lock Position SW
 F14 Front Door Speaker LH
 F15 Front Door Speaker RH
 F16 Front Interior Light (w/Moon Roof)
 F17 Front Interior Light (w/o Moon Roof)
 F18 Fuel Sender and Pump

H12 High Mounted Stop Light

L2 License Plate Light

M2 Moon Roof Control Relay
 M3 Moon Roof Control SW and Personal Light
 M4 Moon Roof Limit SW and Motor

Position of Parts in Body

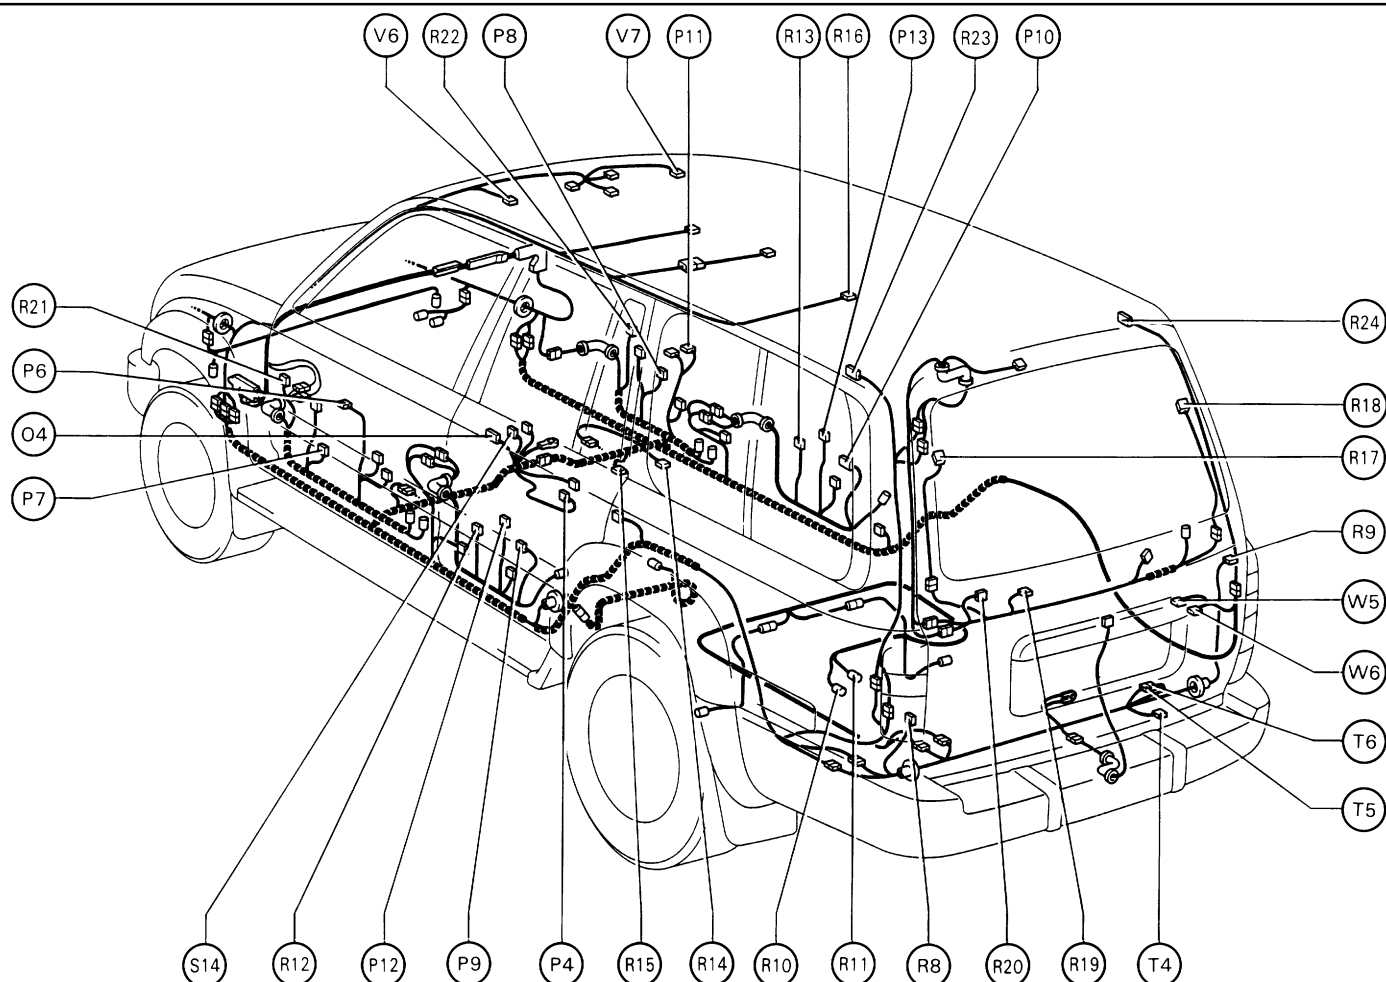

O4 O/D Main SW

P4 Parking Brake SW
 P6 Power Window Master SW
 P7 Power Window Motor Front LH
 P8 Power Window Motor Front RH
 P9 Power Window Motor Rear LH
 P10 Power Window Motor Rear RH
 P11 Power Window SW Front RH
 P12 Power Window SW Rear LH
 P13 Power Window SW Rear RH

R8 Rear Combination Light LH
 R9 Rear Combination Light RH
 R10 Rear Diff. Lock Control Motor
 R11 Rear Diff. Lock Position SW
 R12 Rear Door Speaker LH
 R13 Rear Door Speaker RH
 R14 Rear Heater
 R15 Rear Heater Relay
 R16 Rear Interior Light

R17 Rear Window Defogger (+)
 R18 Rear Window Defogger (-)
 R19 Rear Wiper Motor
 R20 Rear Wiper Relay
 R21 Remote Control Mirror LH
 R22 Remote Control Mirror RH
 R23 Roof Speaker LH
 R24 Roof Speaker RH

S14 Shift Lock ECU


T4 Trailer Socket (Tail and Stop Light)
 T5 Trailer Socket (Turn Signal Light)
 T6 Trailer Socket (Turn Signal Light)

V6 Vanity Light LH
 V7 Vanity Light RH

W5 Woofer (Speaker)
 W6 Woofer Amplifier

G ELECTRICAL WIRING ROUTING

Position of Parts in Seat

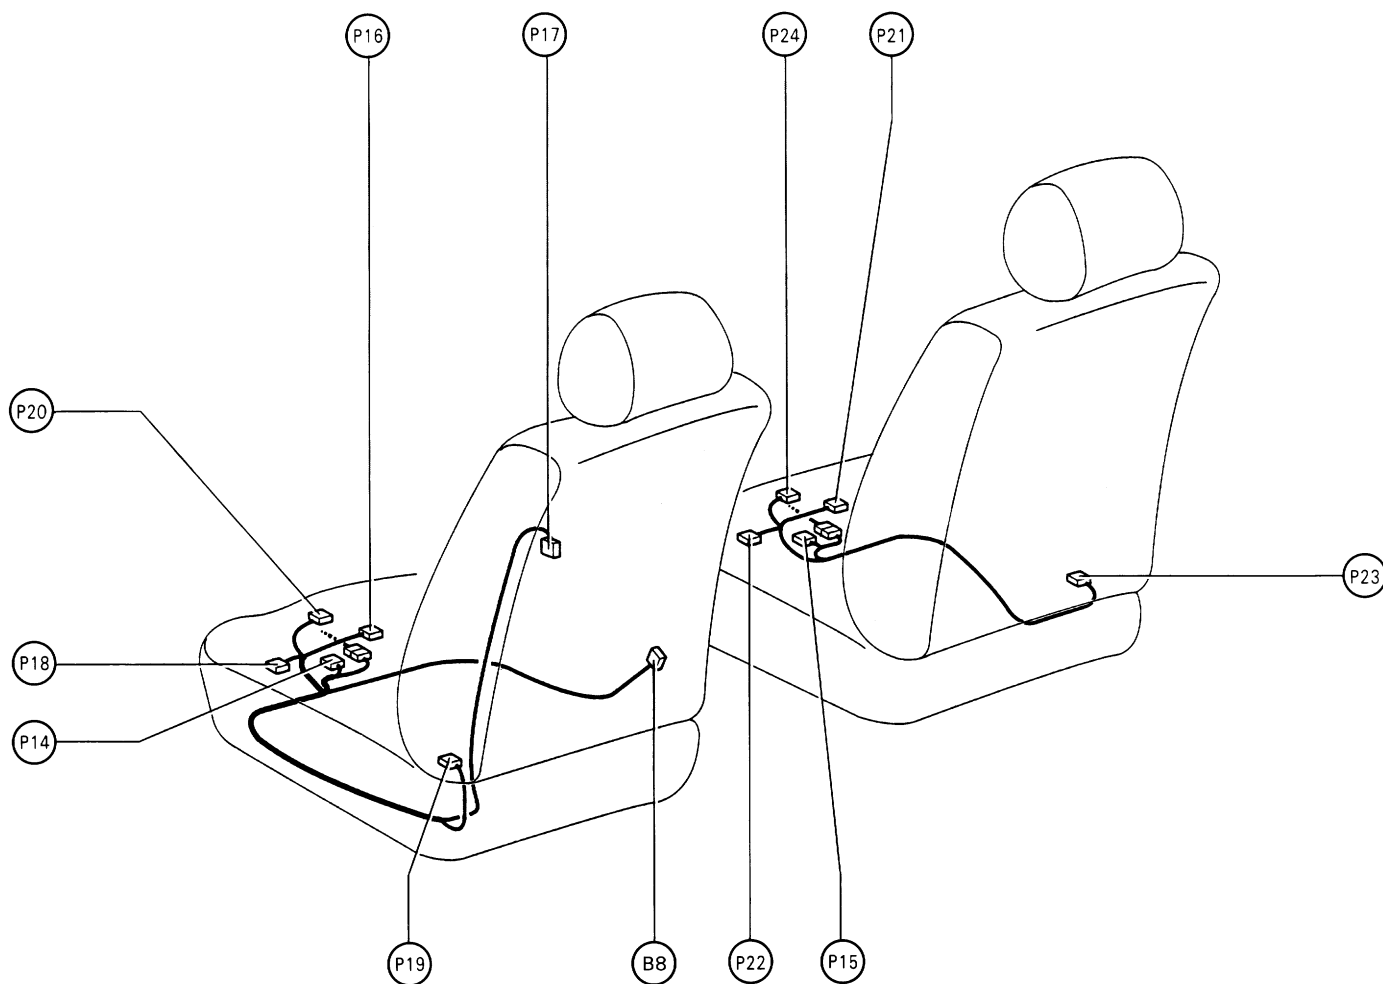

B8 Buckle SW LH

P14 Power Seat Control SW (Driver's Seat)

P15 Power Seat Control SW (Passenger's Seat)

P16 Power Seat Motor (Driver's Seat Front Vertical Control)

P17 Power Seat Motor (Driver's Seat Lumbar Support Control)

P18 Power Seat Motor (Driver's Seat Rear Vertical Control)

P19 Power Seat Motor (Driver's Seat Reclining Control)

P20 Power Seat Motor (Driver's Seat Slide Control)

P21 Power Seat Motor (Passenger's Seat Front Vertical Control)

P22 Power Seat Motor (Passenger's Seat Rear Vertical Control)

P23 Power Seat Motor (Passenger's Seat Reclining Control)

P24 Power Seat Motor (Passenger's Seat Slide Control)

