



G ELECTRICAL WIRING ROUTING

□ : Location of Connector Joining Wire Harness and Wire Harness


▽ : Location of Ground Points

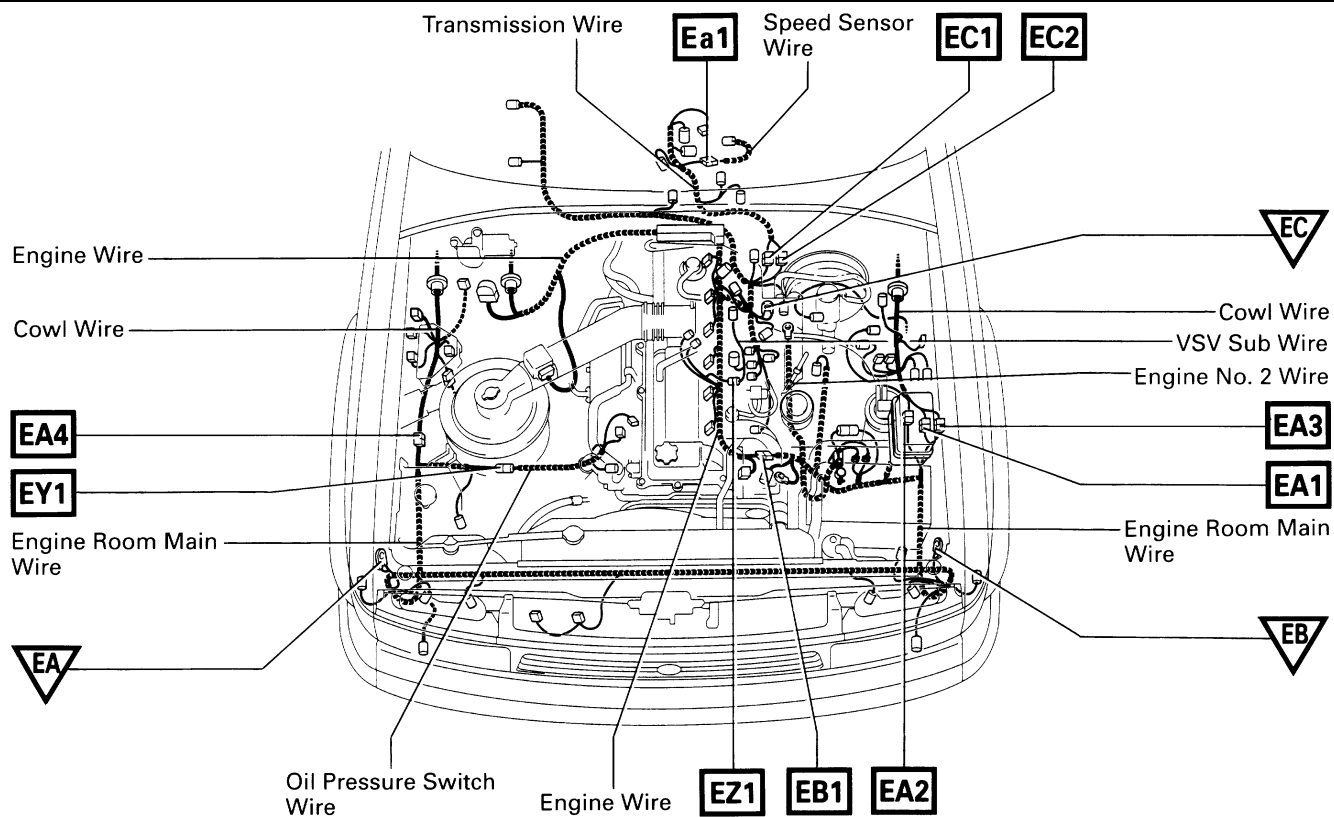

○ : Location of Splice Points

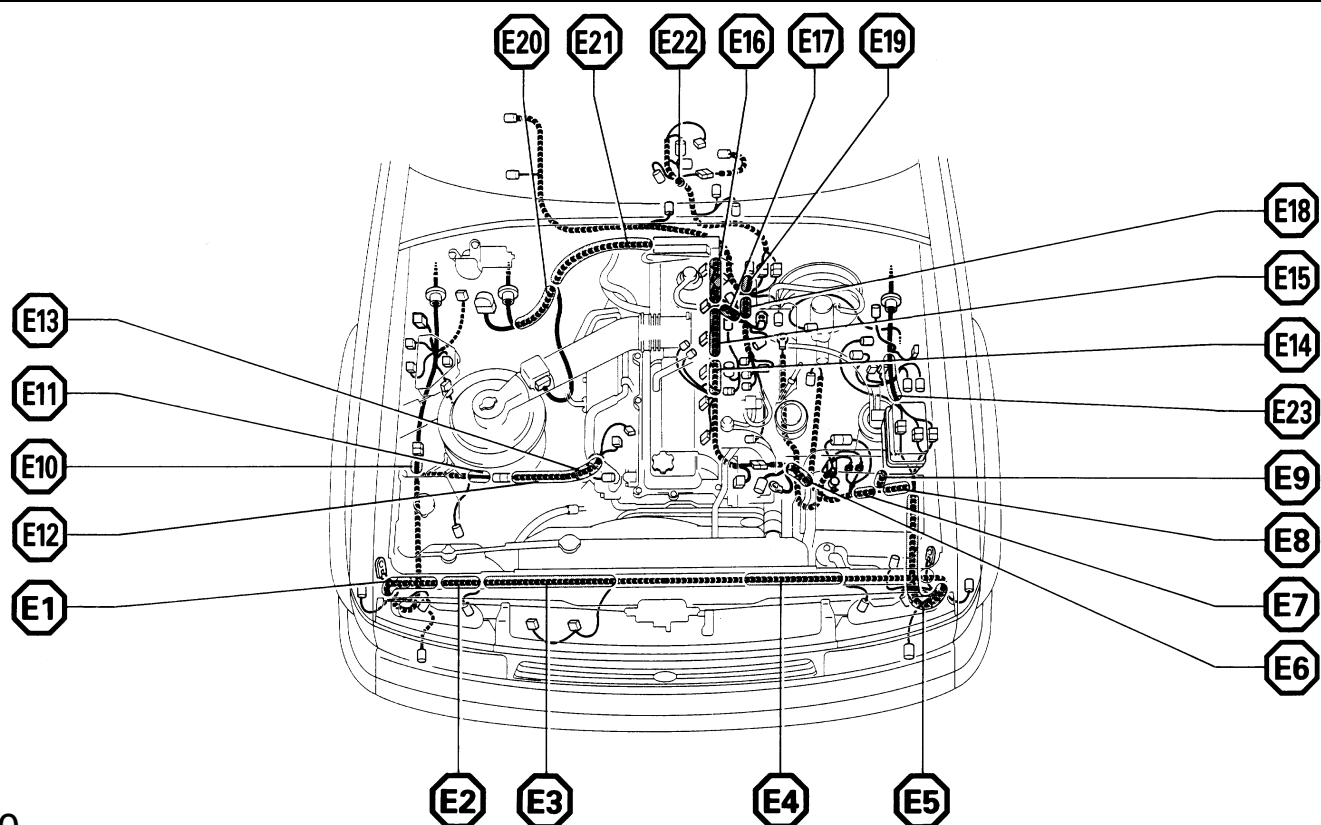

Connector Joining Wire Harness and Wire Harness

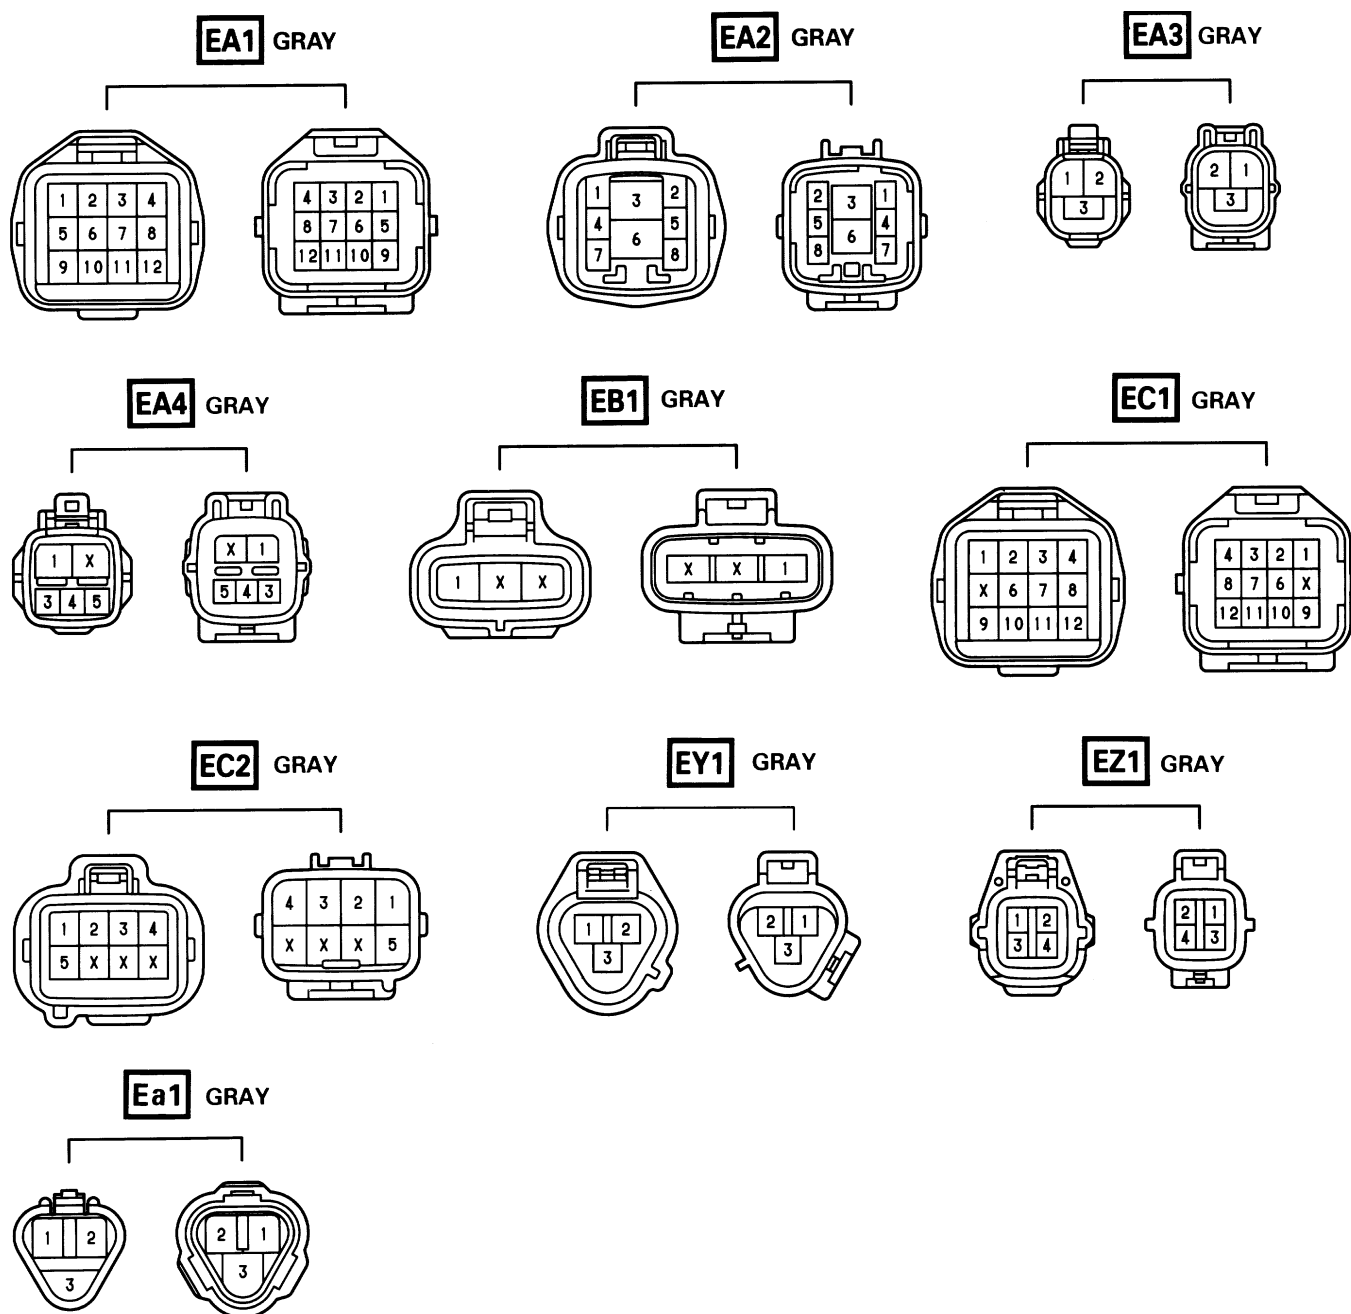


CODE	JOINING WIRE HARNESS AND WIRE HARNESS (CONNECTOR LOCATION)
EA1	
EA2	COWL WIRE AND ENGINE ROOM MAIN WIRE (LEFT FENDER)
EA3	
EA4	COWL WIRE AND ENGINE ROOM MAIN WIRE (RIGHT FENDER)
EB1	ENGINE ROOM MAIN WIRE AND ENGINE WIRE (NEAR THE DISTRIBUTOR)
EC1	
EC2	ENGINE WIRE AND TRANSMISSION WIRE (NEAR THE STARTER)
EY1	OIL PRESSURE SWITCH WIRE AND ENGINE ROOM MAIN WIRE (NEAR THE AIR CLEANER)
EZ1	ENGINE WIRE AND VSV SUB WIRE (NEAR THE THROTTLE POSITION SENSOR)
Ea1	TRANSMISSION WIRE AND SPEED SENSOR WIRE (NEAR THE TRANSMISSION)


G ELECTRICAL WIRING ROUTING

□ : Location of Connector Joining Wire Harness and Wire Harness


▽ : Location of Ground Points

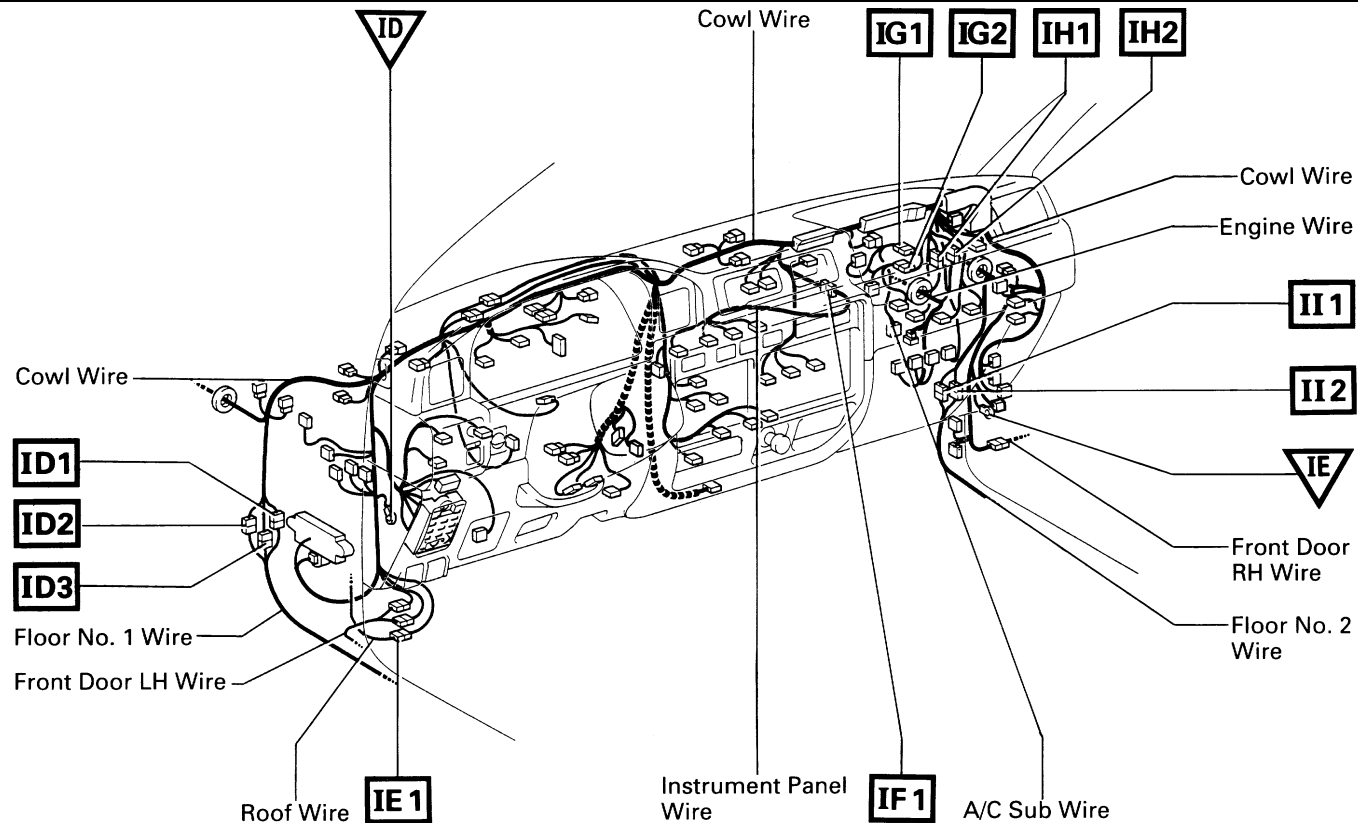

○ : Location of Splice Points

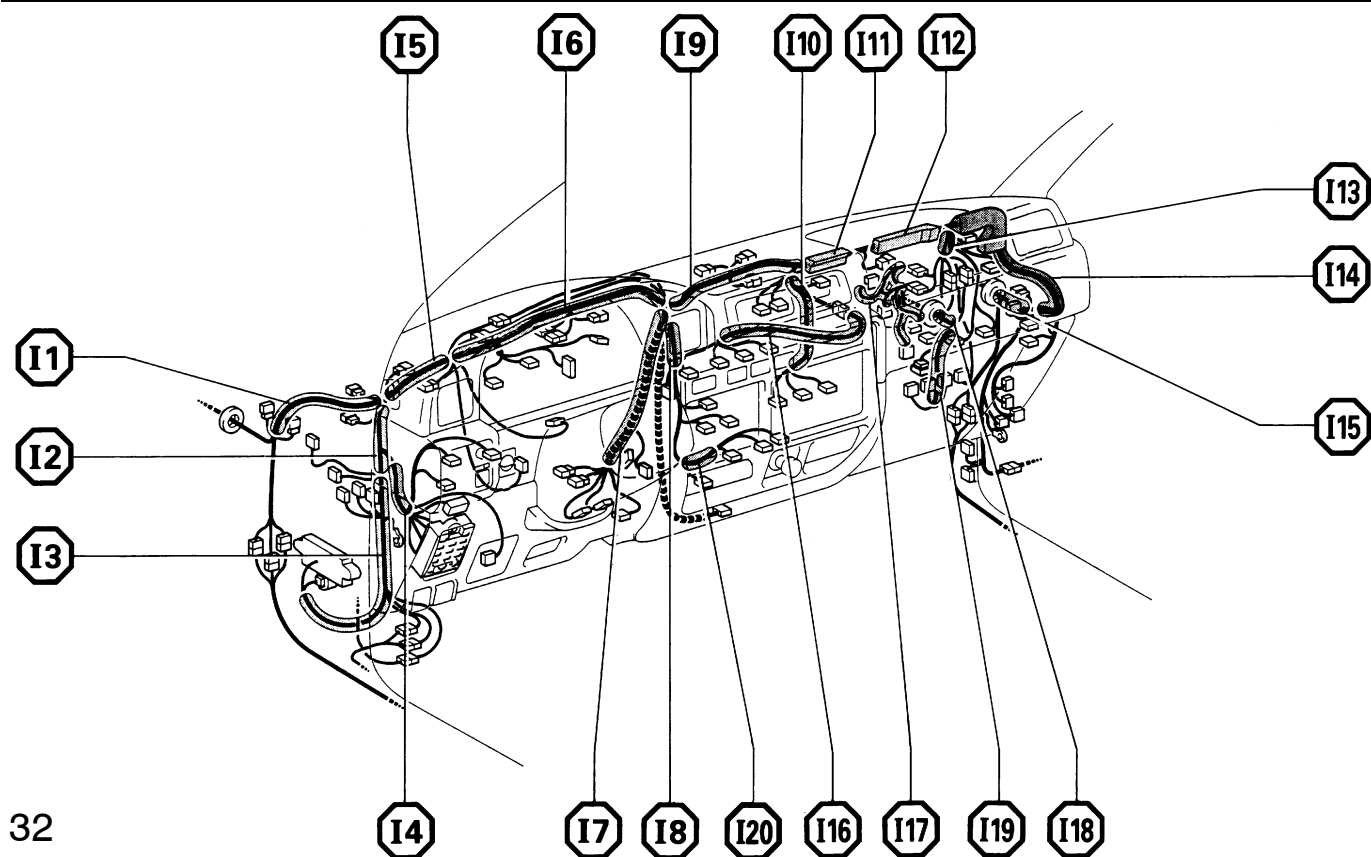


Connector Joining Wire Harness and Wire Harness

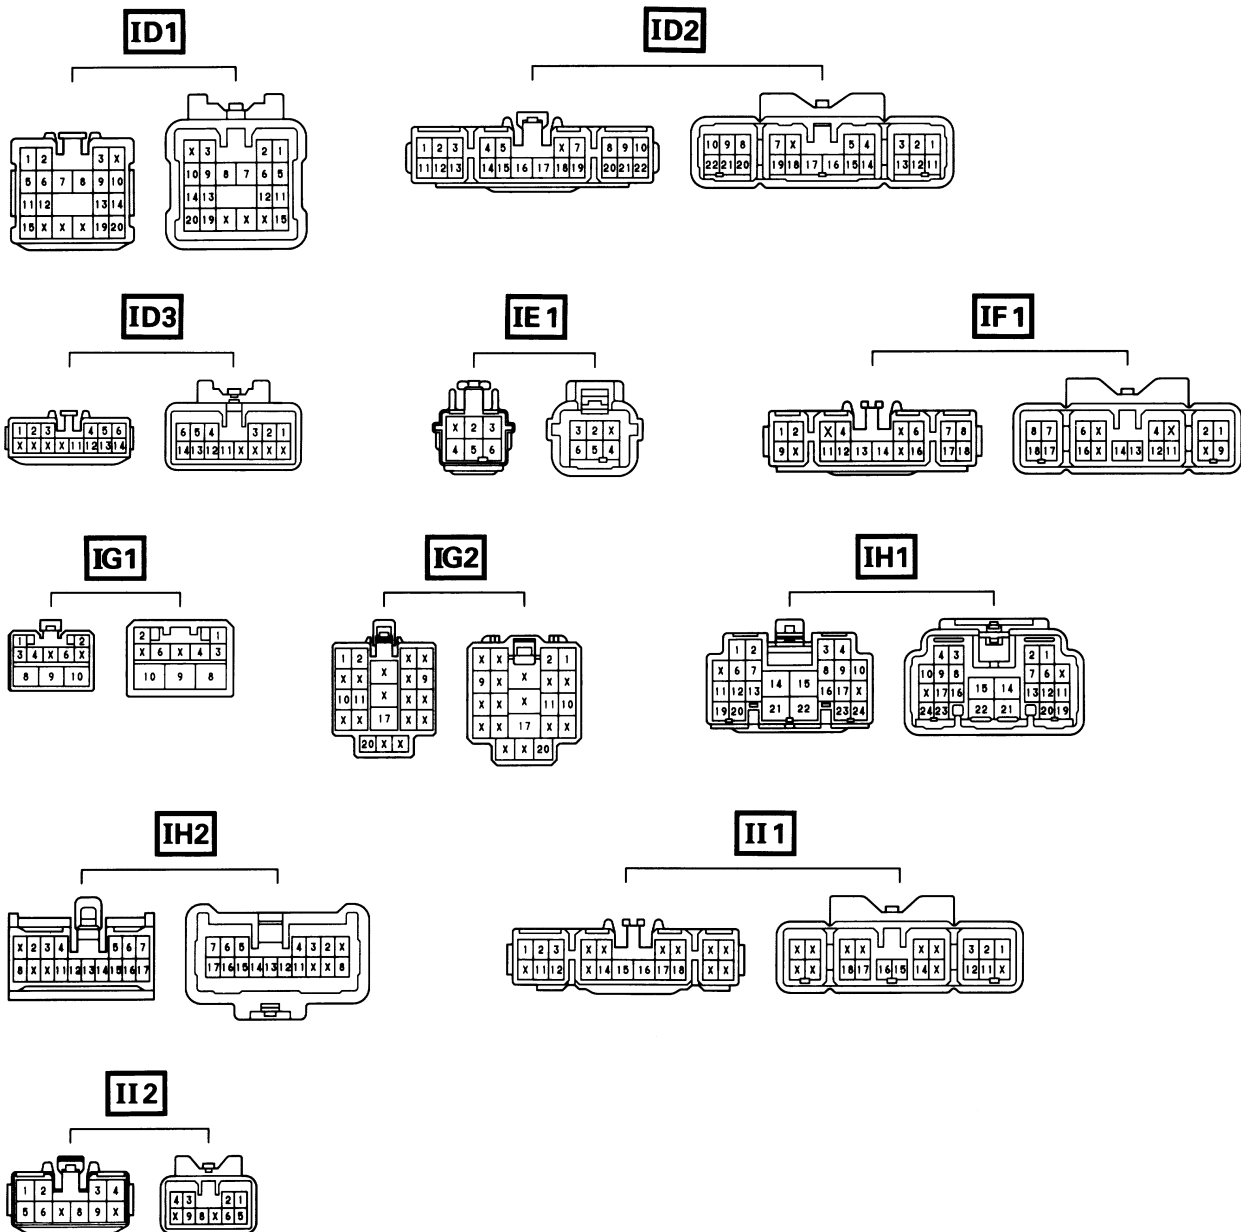


CODE	JOINING WIRE HARNESS AND WIRE HARNESS (CONNECTOR LOCATION)
ID1	COWL WIRE AND FLOOR NO. 1 WIRE (LEFT KICK PANEL)
ID2	
ID3	
IE1	ROOF WIRE AND COWL WIRE (LEFT KICK PANEL)
IF1	COWL WIRE AND INSTRUMENT PANEL WIRE (INSTRUMENT PANEL CENTER)
IG1	COWL WIRE AND A/C SUB WIRE (BEHIND GLOVE BOX)
IG2	
IH1	ENGINE WIRE AND COWL WIRE (BEHIND GLOVE BOX)
IH2	
II1	COWL WIRE AND FLOOR NO. 2 WIRE (RIGHT KICK PANEL)
II2	

G ELECTRICAL WIRING ROUTING


□ : Location of Connector Joining Wire Harness and Wire Harness

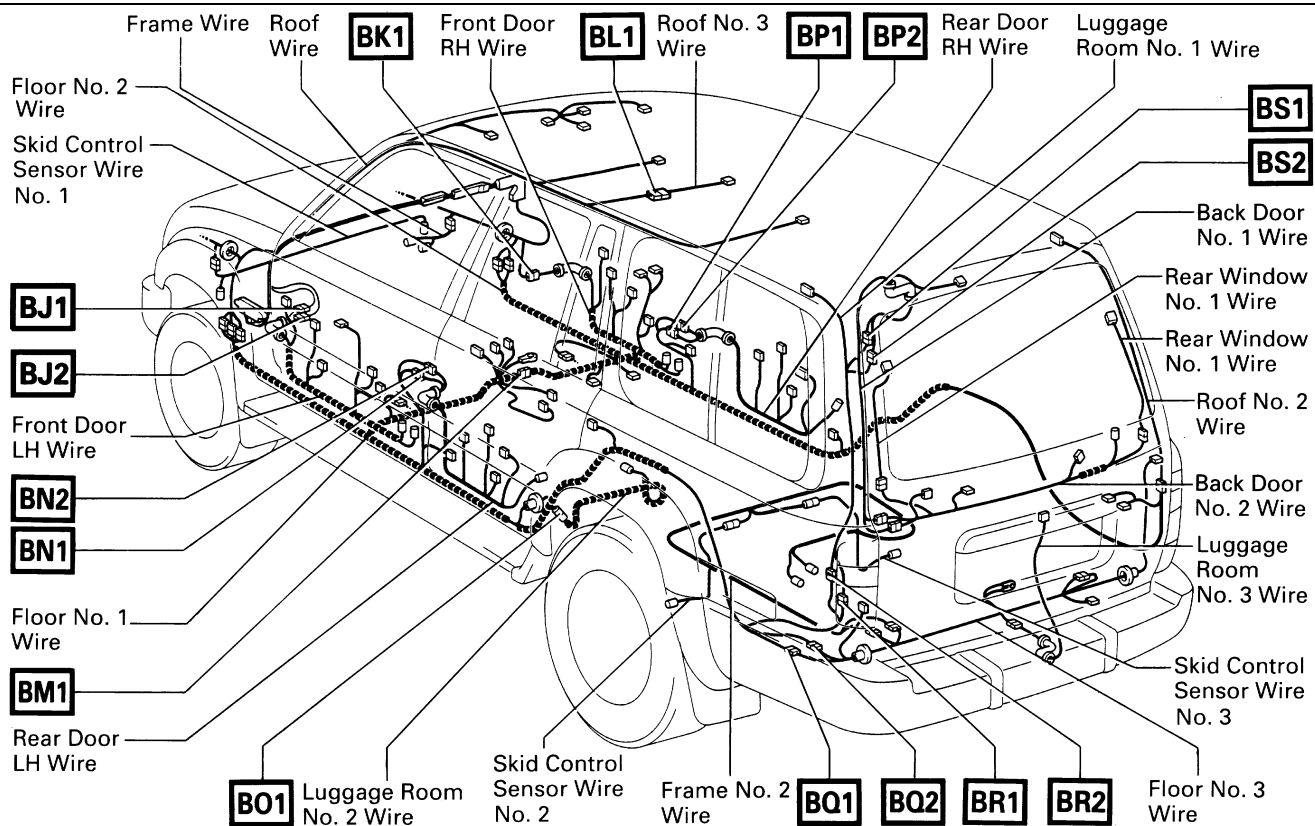

▽ : Location of Ground Points

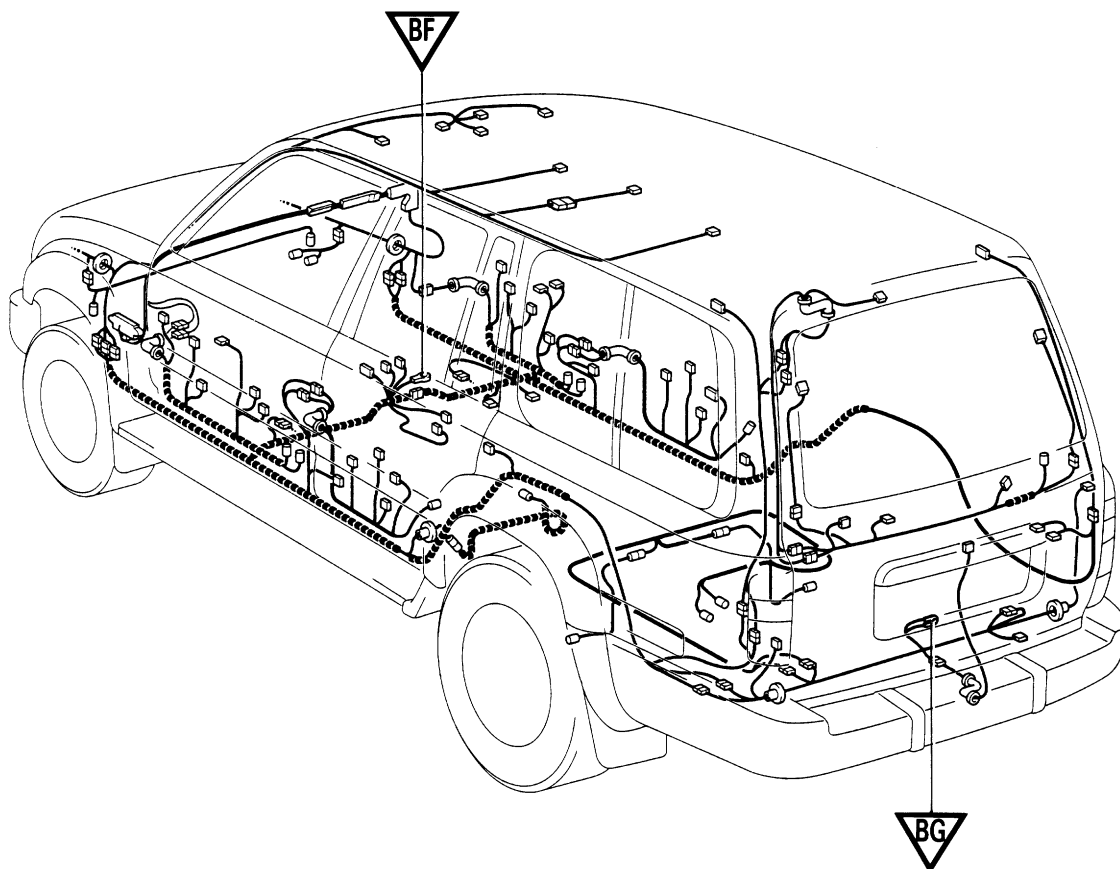


Connector Joining Wire Harness and Wire Harness

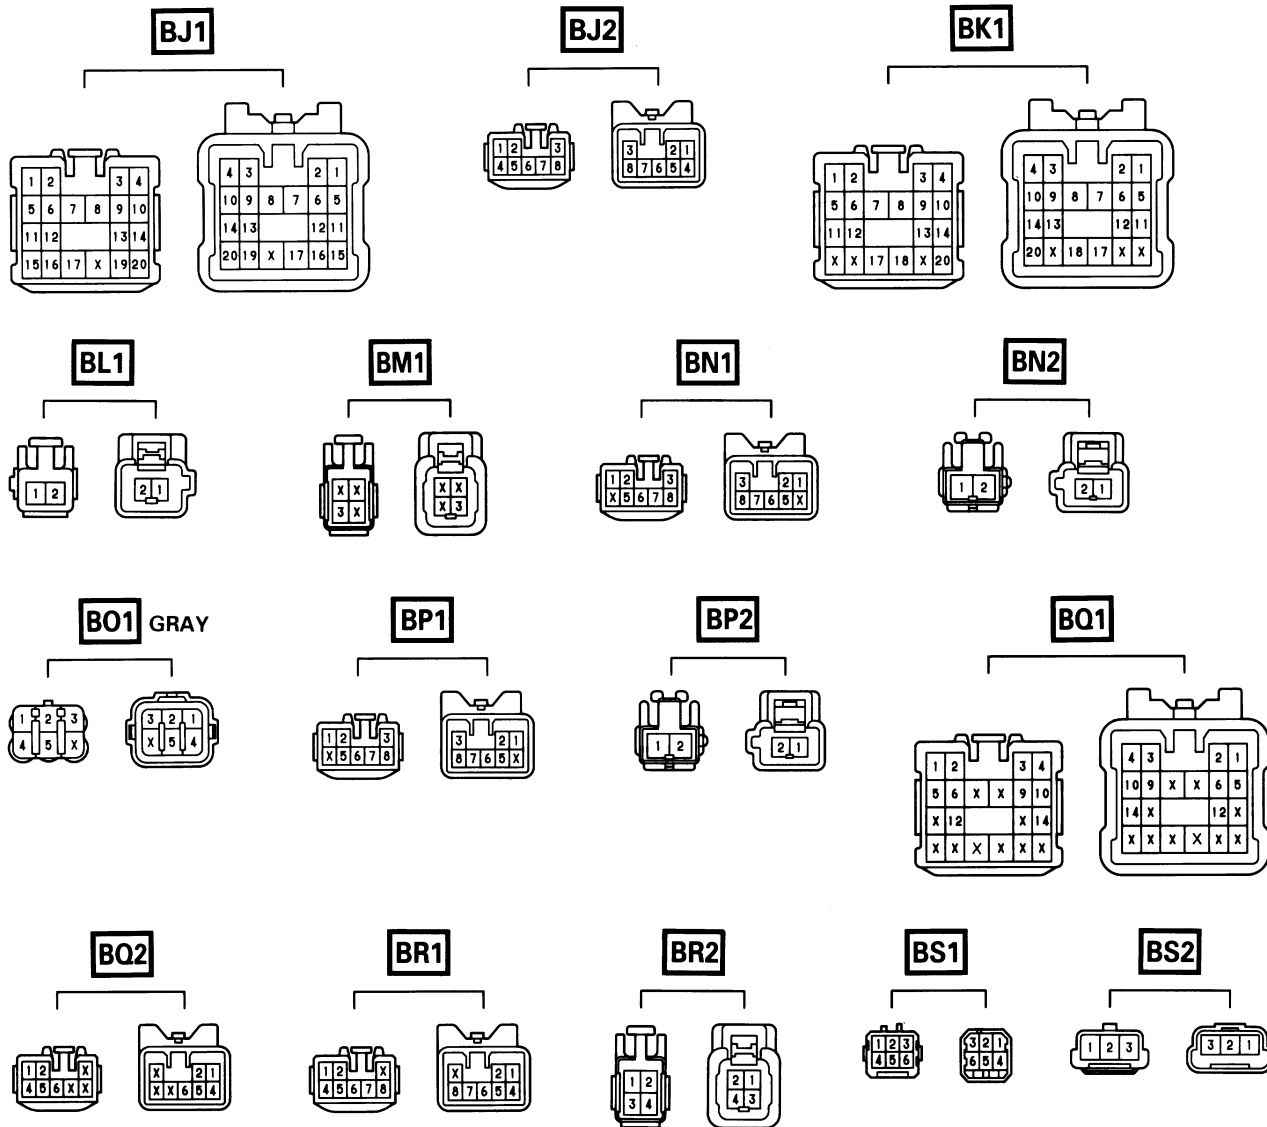


CODE	JOINING WIRE HARNESS AND WIRE HARNESS (CONNECTOR LOCATION)
BJ1	FRONT DOOR LH WIRE AND COWL WIRE (LEFT KICK PANEL)
BJ2	FRONT DOOR LH WIRE AND COWL WIRE (LEFT KICK PANEL)
BK1	FRONT DOOR RH WIRE AND COWL WIRE (RIGHT KICK PANEL)
BL1	ROOF WIRE AND ROOF NO. 3 WIRE (ROOF LEFT)
BM1	FLOOR NO. 2 WIRE AND FLOOR NO. 1 WIRE (UNDER THE CENTER CONSOLE)
BN1	REAR DOOR LH WIRE AND FLOOR NO. 1 WIRE (LEFT CENTER PILLAR)
BN2	REAR DOOR LH WIRE AND FLOOR NO. 1 WIRE (LEFT CENTER PILLAR)
BO1	FLOOR NO. 1 WIRE AND LUGGAGE ROOM NO. 2 WIRE (BESIDE THE FUEL TANK)
BP1	REAR DOOR RH WIRE AND FLOOR NO. 2 WIRE (RIGHT CENTER PILLAR)
BP2	REAR DOOR RH WIRE AND FLOOR NO. 2 WIRE (RIGHT CENTER PILLAR)
BQ1	FLOOR NO. 3 WIRE AND FLOOR NO. 1 WIRE (LEFT QUARTER PANEL INNER)
BQ2	FLOOR NO. 3 WIRE AND FLOOR NO. 1 WIRE (LEFT QUARTER PANEL INNER)
BR1	LUGGAGE ROOM NO. 1 WIRE AND LUGGAGE ROOM NO. 1 WIRE (LEFT QUARTER PANEL INNER)
BR2	LUGGAGE ROOM NO. 1 WIRE AND LUGGAGE ROOM NO. 1 WIRE (LEFT QUARTER PANEL INNER)
BS1	BACK DOOR NO. 1 WIRE AND LUGGAGE ROOM NO. 1 WIRE (LEFT REAR SIDE OF ROOF)
BS2	BACK DOOR NO. 1 WIRE AND LUGGAGE ROOM NO. 1 WIRE (LEFT REAR SIDE OF ROOF)

G ELECTRICAL WIRING ROUTING


□ : Location of Connector Joining Wire Harness and Wire Harness

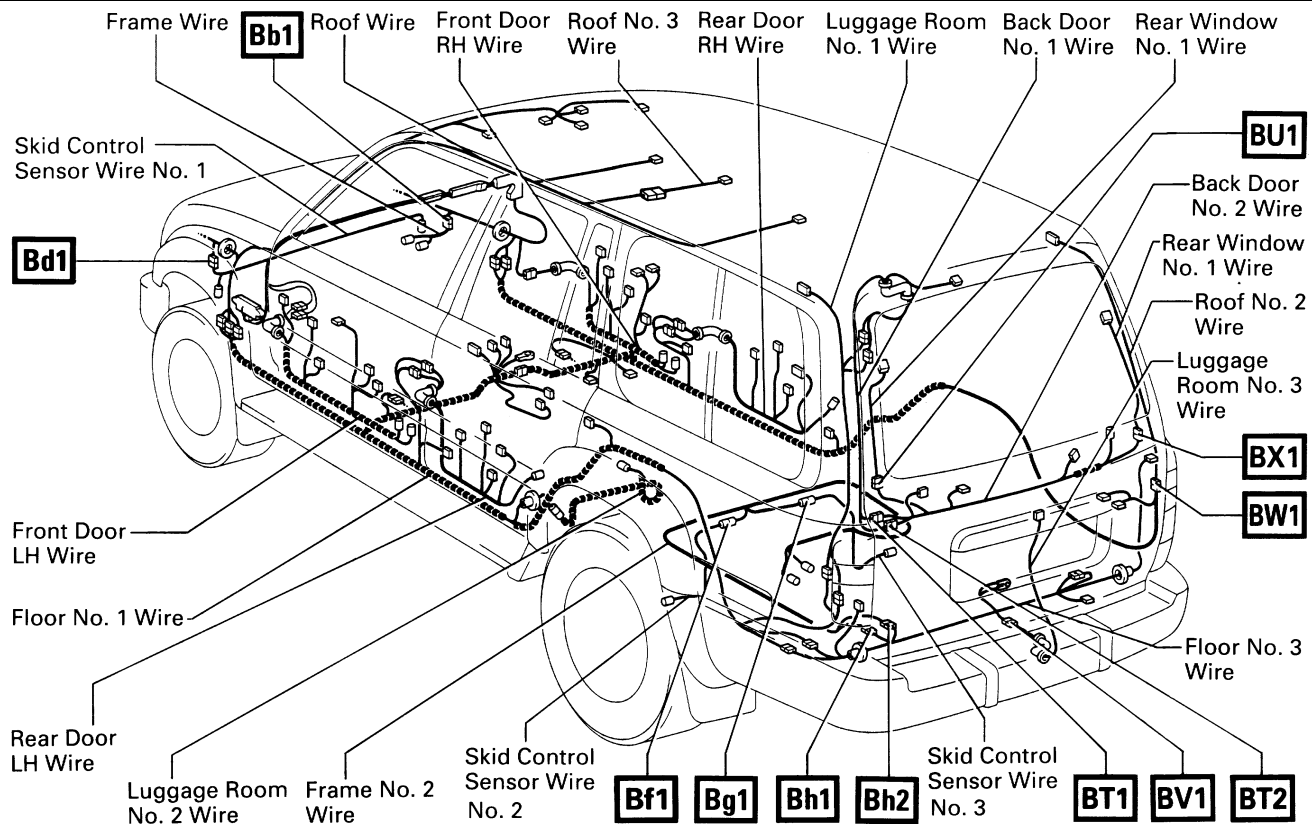

○ : Location of Splice Points

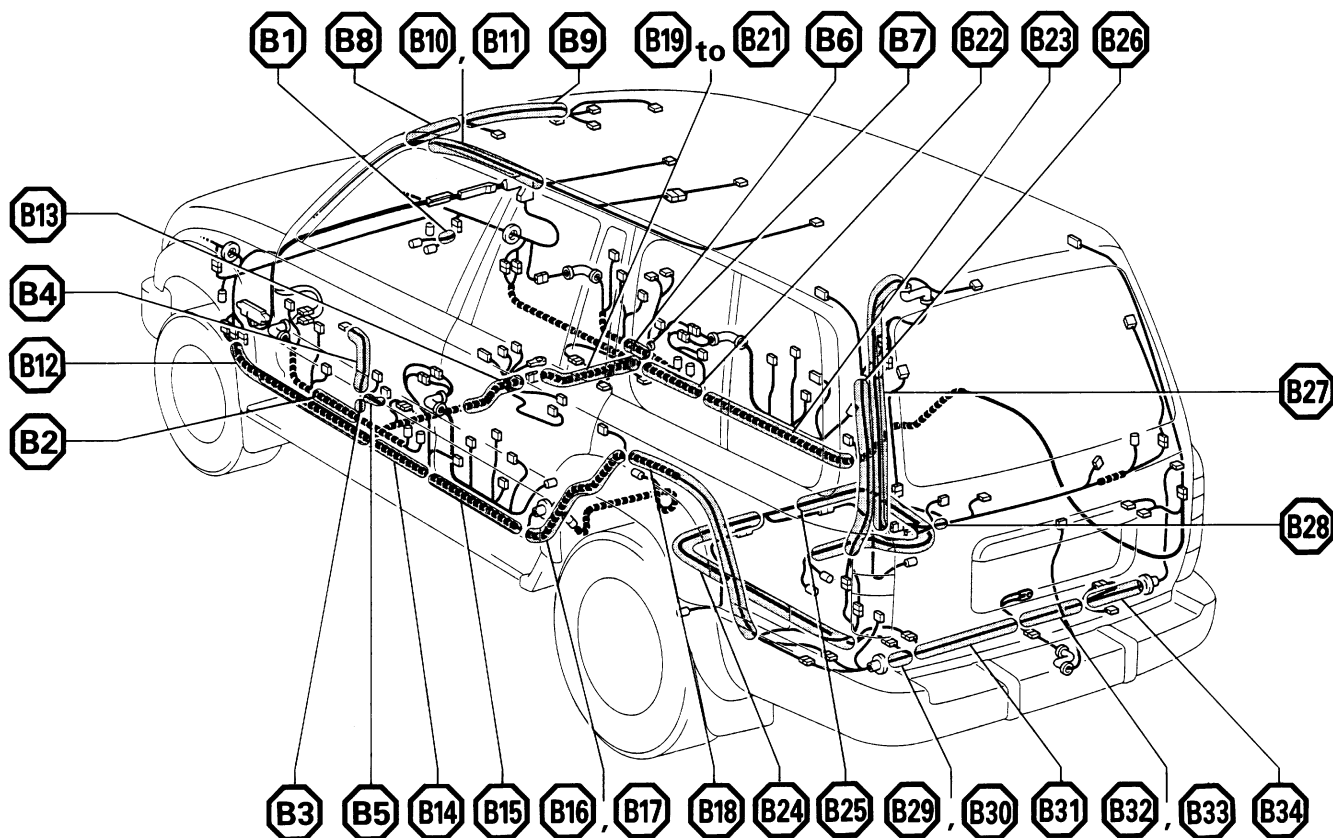


Connector Joining Wire Harness and Wire Harness

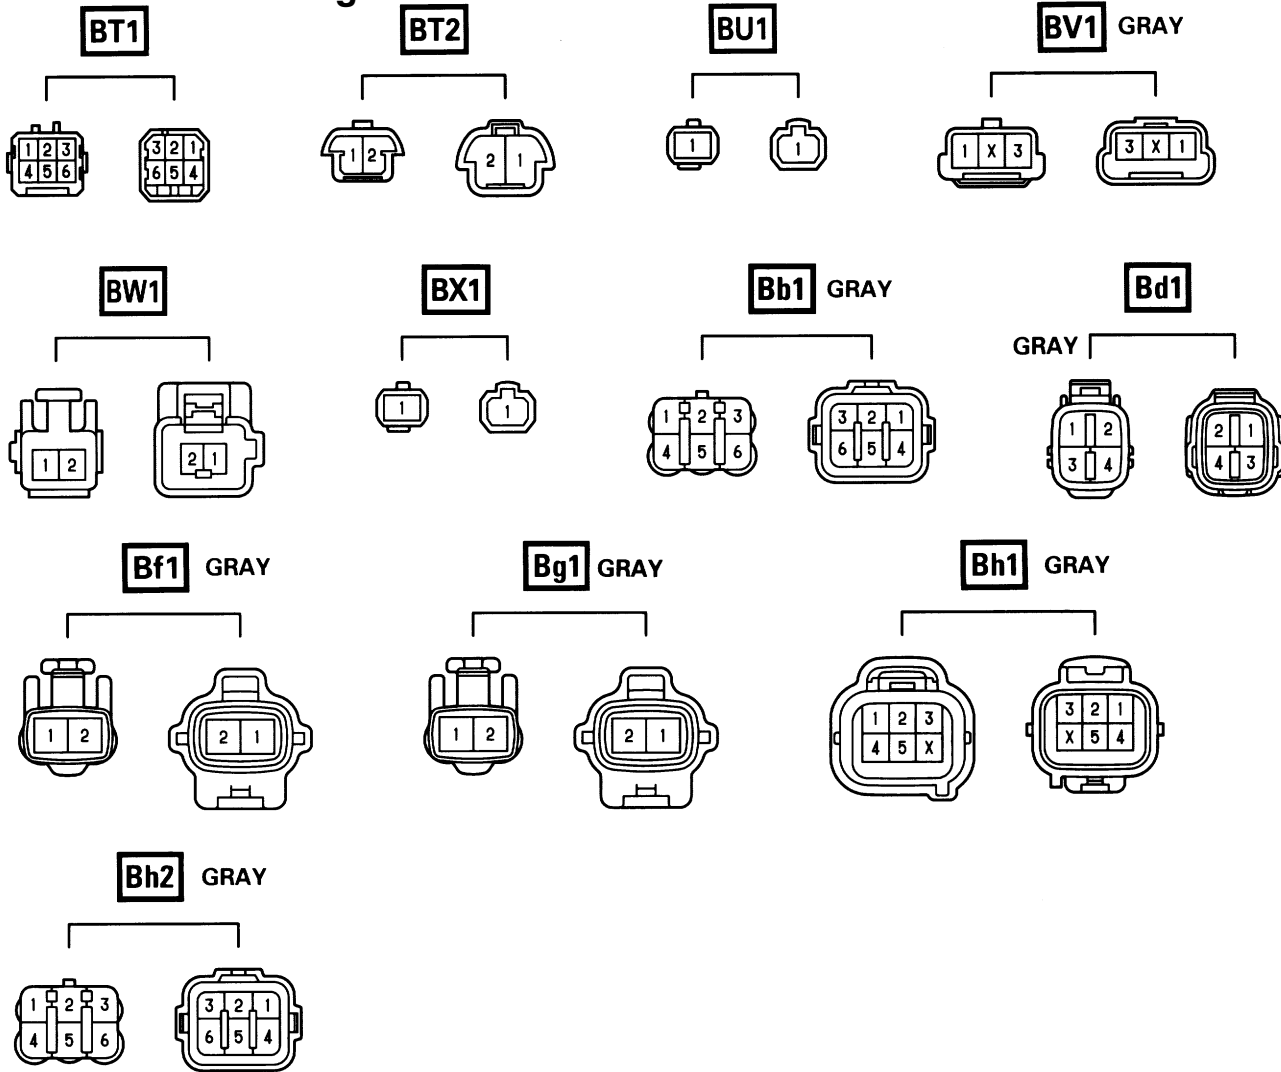


CODE	JOINING WIRE HARNESS AND WIRE HARNESS (CONNECTOR LOCATION)
BT1	BACK DOOR NO. 1 WIRE AND BACK DOOR NO. 2 WIRE (BACK DOOR LEFT)
BT2	BACK DOOR NO. 1 WIRE AND BACK DOOR NO. 2 WIRE (BACK DOOR LEFT)
BU1	REAR WINDOW NO. 1 WIRE AND BACK DOOR NO. 2 WIRE (BACK DOOR LEFT)
BV1	LUGGAGE ROOM NO. 3 WIRE AND FLOOR NO. 3 WIRE (UNDER THE LOWER BACK PANEL)
BW1	ROOF NO. 2 WIRE AND FLOOR NO. 2 WIRE (RIGHT QUARTER PANEL INNER)
BX1	REAR WINDOW NO. 1 WIRE AND BACK DOOR NO. 2 WIRE (BACK DOOR RIGHT)
Bb1	COWL WIRE AND FRAME WIRE (RIGHT FENDER)
Bd1	COWL WIRE AND SKID CONTROL SENSOR WIRE NO. 1 (LEFT KICK PANEL)
Bf1	FRAME NO. 2 WIRE AND SKID CONTROL SENSOR WIRE NO. 2 (REAR AXLE HOUSING LH)
Bg1	FRAME NO. 2 WIRE AND SKID CONTROL SENSOR WIRE NO. 3 (REAR AXLE HOUSING LH)
Bh1	FLOOR NO. 3 WIRE AND FRAME NO. 2 WIRE (LEFT QUARTER PANEL INNER)
Bh2	FLOOR NO. 3 WIRE AND FRAME NO. 2 WIRE (LEFT QUARTER PANEL INNER)

G ELECTRICAL WIRING ROUTING


□ : Location of Connector Joining Wire Harness and Wire Harness

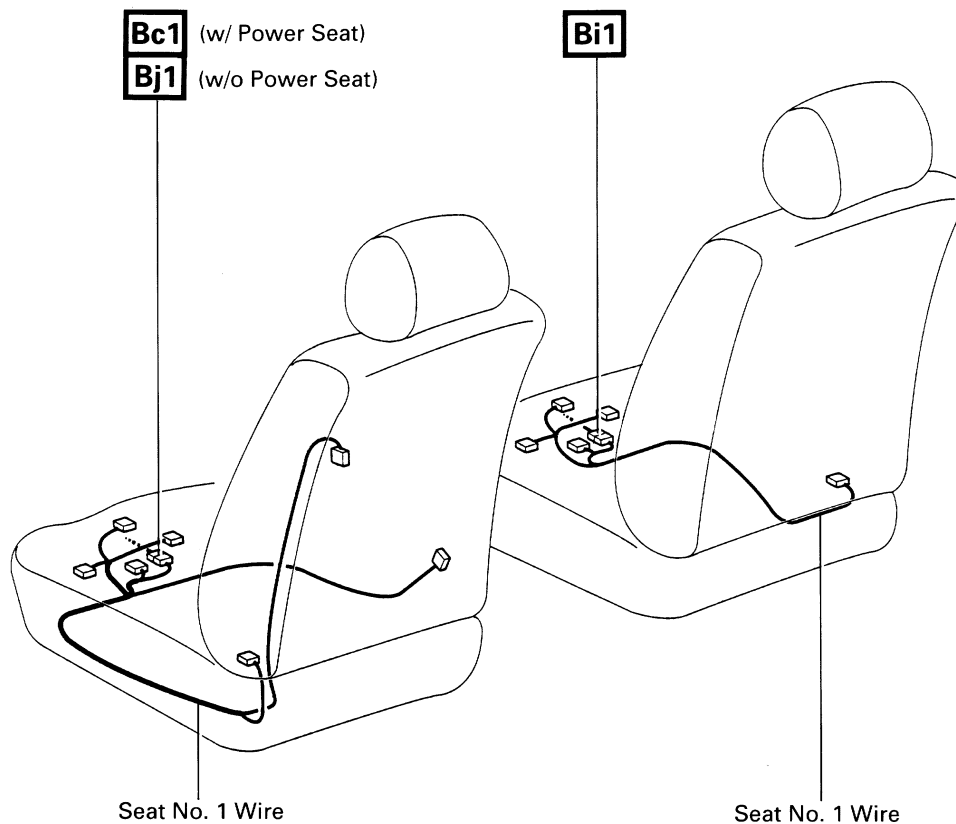

⬡ : Location of Splice Points

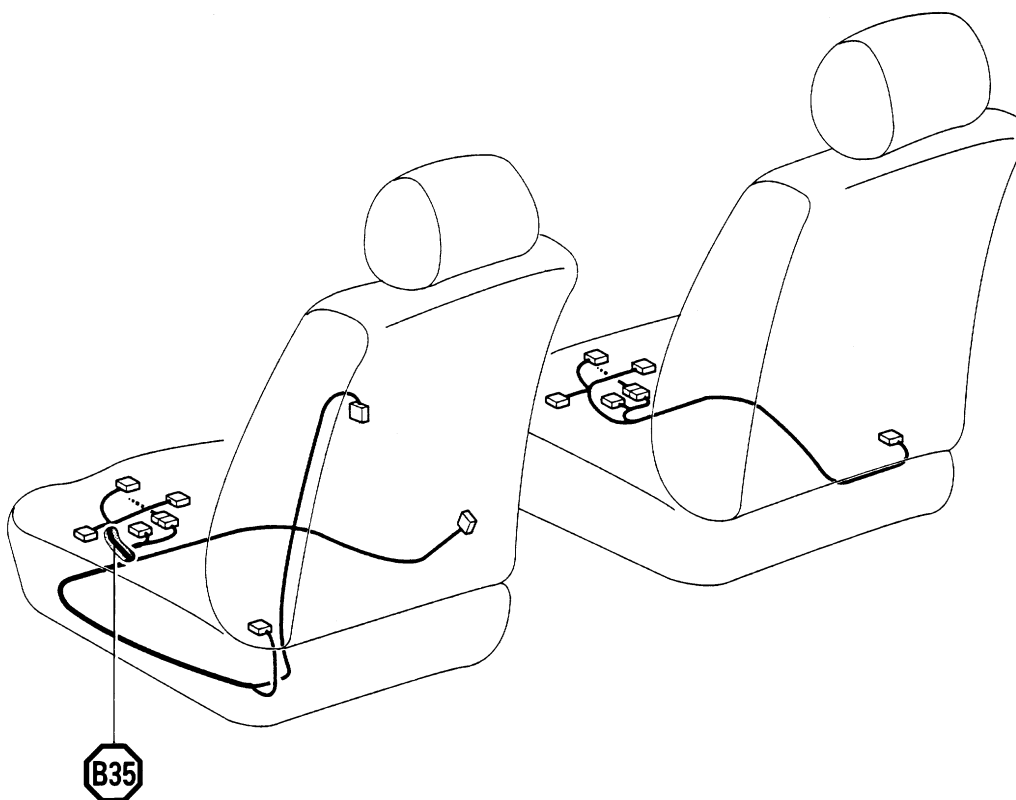

Connector Joining Wire Harness and Wire Harness

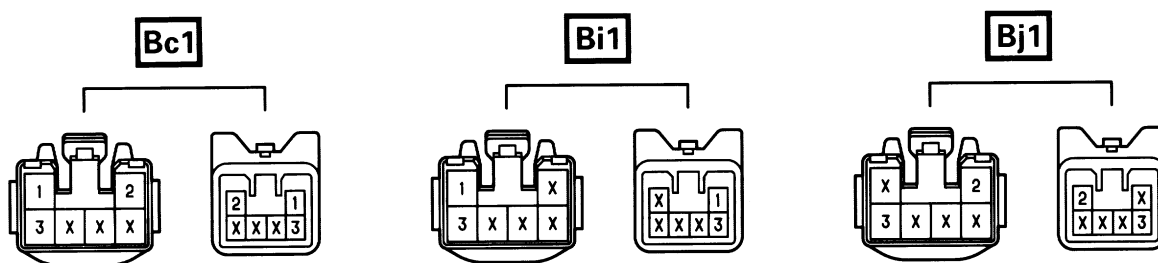

CODE	JOINING WIRE HARNESS AND WIRE HARNESS (CONNECTOR LOCATION)
Bc1	FLOOR NO. 1 WIRE AND SEAT NO. 1 WIRE (UNDER THE DRIVER'S SEAT)
Bi1	FLOOR NO. 2 WIRE AND SEAT NO. 1 WIRE (UNDER THE PASSENGER'S SEAT)
Bj1	FLOOR NO. 1 WIRE AND SEAT NO. 2 WIRE (UNDER THE DRIVER'S SEAT)