
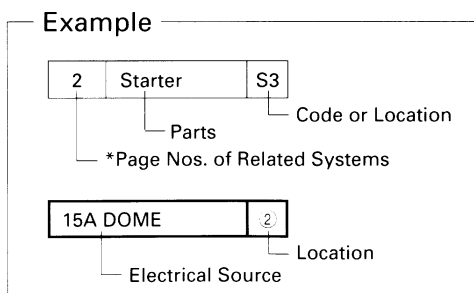


H POWER SOURCE (Current Flow Chart)


The chart below shows the route by which current flows from the battery to each electrical source (Fusible Link, Circuit Breaker, Fuse, etc.) and other parts.

The next page and following pages show the parts to which each electrical source outputs current.

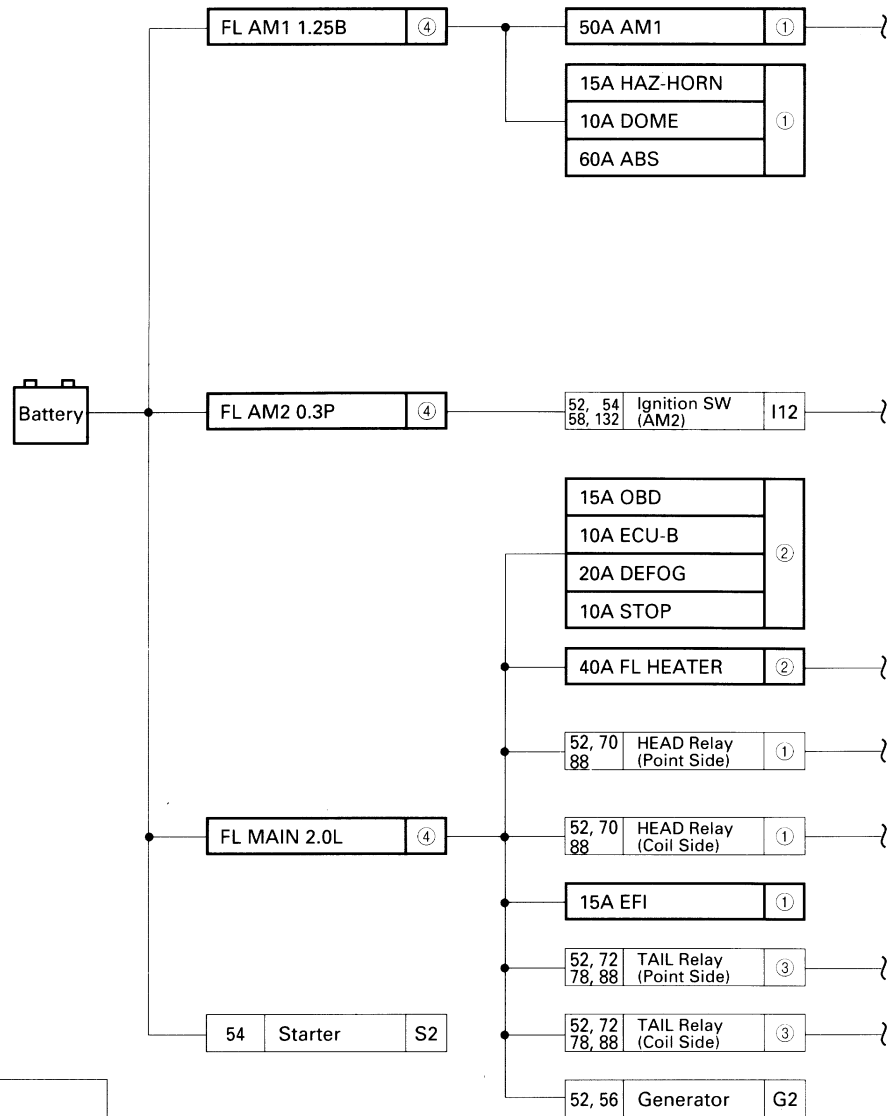

* These are the page numbers of the first page on which the related system is shown. The part indicated is located somewhere in the system, not necessarily on the page indicated here.

[LOCATION] ①: R/B No. 2 (See page 18) ②: Fuse Block (F11 See page 20)

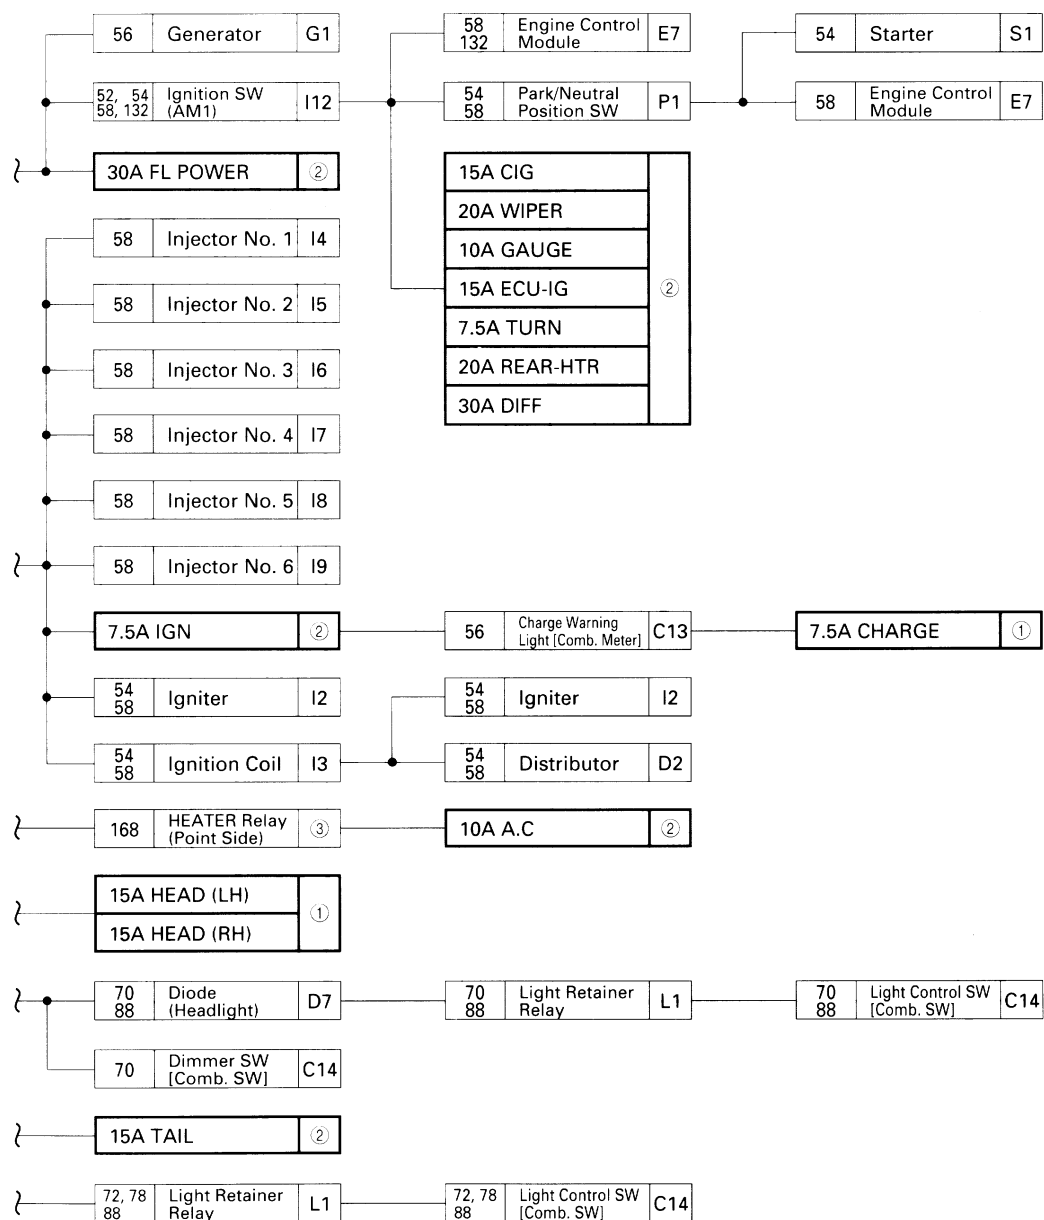

③: R/B No. 1 (See page 20)

④: Fusible Link (F6, F7, F8 See page 22)

H POWER SOURCE (Current Flow Chart)

Location			*Page Nos. of Related Systems		170	123		118	170	123		170	145	78	78 118	123	118	164	170											
					Parts		Code or Location		CB or Fuse		A/C Pressure SW	ABS Actuator	ABS Relay	Auto Antenna Motor	A/C Amplifier	A/C System Amplifier	ABS ECU	Air Inlet Control Servo Motor	Air Vent Mode Control Servo Motor	Airbag Sensor Assembly	Ashtray Illumination	Auto Antenna Control SW	ABS Deceleration Sensor	Auto Antenna Relay	Auto Antenna ECU	Brake Fluid Level Warning SW	Blower Motor (A/C)	Blower Motor (Heater)	Blower Resistor	Blower Speed Control Relay
			A2	A4							A6	A7	A8	A9	A10	A12	A13	A14	A16	A17	A20	A21	A22	A27	A28	B1	B2	B3	B4	B5
①	7.5A	CHARGE																												
	15A	EFI																												
	15A	HEAD (LH)																												
	15A	HEAD (RH)																												
	15A	HAZ-HORN																												
	10A	DOME																												
	60A	ABS		●	●	●						●								●										
②	15A	CIG												●		●			●											
	15A	TAIL																●												
	10A	STOP									●																			
	20A	DEFOG																												
	20A	WIPER																												
	10A	GAUGE	●	●		●		●	●	●	●	●	●											●				●		
	7.5A	TURN																												
	15A	ECU-IG					●					●					●	●		●	●									
	20A	REAR-HTR																												
	7.5A	IGN												●																
	10A	A.C																												
	30A	DIFF																												
	30A	FL POWER																												
	40A	FL HEATER																							●	●		●	●	
	10A	ECU-B										●			●															
	15A	OBD																												

* These are the page numbers of the first page on which the related system is shown.
The part indicated is located somewhere in the system, not necessarily on the page indicated here.

[LOCATION] ①:R/B No. 2 (See page 18) ②:Fuse Block (F11 See page 20)
⑤: R/B No. 1 (See page 20)

[illegible]

H POWER SOURCE (Current Flow Chart)

Location	*Page Nos. of Related Systems		58		154	154	91	82			94	82								98 108 112		112																						
			Parts		Code or Location		CB or Fuse		Data Link Connector 3		Diff. Lock Control SW		Diff. Lock ECU		Diode (Front Washer)		Diode (Interior Light)		Diode (Rear Washer)		Door Courtesy Light Front LH		Door Courtesy Light Front RH		Door Courtesy Light Rear LH		Door courtesy Light Rear RH		Door Courtesy SW Front LH		Door Courtesy SW Front RH		Door Courtesy SW Rear LH		Door Courtesy SW Rear RH		Door Lock Control Relay		Door Lock Motor and Door Unlock Detection SW Front LH		Door Lock Motor and Door Unlock Detection SW Front RH		Door Lock Motor Rear LH	
	CB or Fuse			D3	D4	D5	D6	D8	D9	D10	D11	D12	D13	D14	D15	D16	D17	D18	D19	D22	D24	D25	D26																					
①	7.5A	CHARGE																																										
	15A	EFI																																										
	15A	HEAD (LH)																																										
	15A	HEAD (RH)																																										
	15A	HAZ-HORN																																										
	10A	DOME					●	●	●		●	●	●	●	●	●	●	●	●																									
	60A	ABS																																										
②	15A	CIG																																										
	15A	TAIL																																										
	10A	STOP																																										
	20A	DEFOG																																										
	20A	WIPER				●				●																																		
	10A	GAUGE			●															●																								
	7.5A	TURN																																										
	15A	ECU-IG																																										
	20A	REAR-HTR																																										
	7.5A	IGN																																										
	10A	A.C																																										
	30A	DIFF		●	●																																							
	30A	FL POWER																		●		●		●																				
	40A	FL HEATER																																										
	10A	ECU-B																																										
	15A	OBD	●																																									

* These are the page numbers of the first page on which the related system is shown.
The part indicated is located somewhere in the system, not necessarily on the page indicated here.

[LOCATION] ①: R/B No. 2 (See page 18) ②: Fuse Block (F11 See page 20)
③: R/B No.1 (See page 20)

H POWER SOURCE (Current Flow Chart)

Location			*Page Nos. of Related Systems	170	74	58	82		88	72	58	98	82 98	98	164	78 132	76 132 151	72	164	108					
			Parts	Heater Control SW and A/C SW	High Mounted Stop Light	Idle Air Control Valve	Ignition Key Cylinder Light	Ignition Key Cylinder Light Relay	Light Retainer Relay	License Plate Light	Mass Air Flow Meter	Moon Roof Control Relay	Moon Roof Control SW and Personal Light	Moon Roof Limit SW and Motor	Oil Level Warning SW	Oil Pressure Sender	O/D Main SW	Park/Neutral Position SW	Parking Light LH	Parking Light RH	Parking Brake SW	Power Window Master SW	Power Window Motor Front LH	Power Window Motor Front RH	Power Window Motor Rear LH
			CB or Fuse	H11	H12	I1	I10	I11	L1	L2	M1	M2	M3	M4	O1	O2	O4	P1	P2	P3	P4	P6	P7	P8	P9
①	7.5A	CHARGE																							
	15A	EFI																							
	15A	HEAD (LH)																							
	15A	HEAD (RH)																							
	15A	HAZ-HORN																							
	10A	DOME																							
	60A	ABS																							
②	15A	CIG																							
	15A	TAIL																							
	10A	STOP																							
	20A	DEFOG																							
	20A	WIPER																							
	10A	GAUGE																							
	7.5A	TURN																							
	15A	ECU-IG																							
	20A	REAR-HTR																							
	7.5A	IGN																							
	10A	A.C																							
	30A	DIFF																							
	30A	FL POWER																							
	40A	FL HEATER																							
	10A	ECU-B																							
	15A	OBD																							

* These are the page numbers of the first page on which the related system is shown.
The part indicated is located somewhere in the system, not necessarily on the page indicated here.

[LOCATION] ①: R/B No. 2 (See page 18) ②: Fuse Block (F11 See page 20)
③: R/B No. 1 (See page 20)

[illegible]

H POWER SOURCE (Current Flow Chart)

Location			*Page Nos. of Related Systems	154	162		82	140	94		104		142	78 158	58, 74 106, 123 128, 132	106	132 151	151	72 74 76	86	164	58		82		
			Parts	Code or Location	CB or Fuse	Rear Diff. Lock Position SW	Rear Heater	Rear Heater Relay	Rear Interior Light	Rear Window Defogger	Rear Wiper Motor	Rear Wiper Relay	Remote Control Mirror LH	Remote Control Mirror RH	Seat Belt Warning Relay	Stereo Component Amplifier	Stop Light SW	Shift Lock ECU	Transfer L4 Position SW	Transfer Neutral Position SW	Trailer Socket (Tail and Stop Light)	Trailer Socket (Turn Signal Light)	Vehicle Speed Sensor (Combination Meter)	VSV (EGR)	VSV (Fuel Pressure Control)	Vanity Light LH
						R11	R14	R15	R16	R17	R19	R20	R21	R22	S3	S11	S13	S14	T2	T3	T4	T5	V1	V3	V4	V6
①	7.5A	CHARGE																								
	15A	EFI																					●	●		
	15A	HEAD (LH)																								
	15A	HEAD (RH)																								
	15A	HAZ-HORN																		●						
	10A	DOME					●							●	●										●	
	60A	ABS																								
②	15A	CIG									●	●		●		●				●						
	15A	TAIL												●					●							
	10A	STOP													●	●			●							
	20A	DEFOG					●																			
	20A	WIPER						●	●																	
	10A	GAUGE	●										●				●	●	●		●					
	7.5A	TURN																		●						
	15A	ECU-IG														●										
	20A	REAR-HTR			●	●																				
	7.5A	IGN																								
	10A	A.C																								
	30A	DIFF																								
	30A	FL POWER																								
	40A	FL HEATER																								
	10A	ECU-B																								
	15A	OBD																								

* These are the page numbers of the first page on which the related system is shown.
The part indicated is located somewhere in the system, not necessarily on the page indicated here.

[LOCATION] ①: R/B No. 2 (See page 18) ②: Fuse Block (F11 See page 20)
③: R/B No. 1 (See page 20)

V7																	Vanity Light RH	82
W1																	Washer Change Valve	94
W2																	Washer Motor	91 94
W3																	Water Temp. Sender	164
W6																	Woofor Amplifier	158
(1)																	EFI MAIN Relay	58 132
																	HORN Relay	97
																	DEFOG Relay	140
(3)																	FLASH Relay	86
																	HEATER Relay	170
																	POWER Relay	98 108 112

