


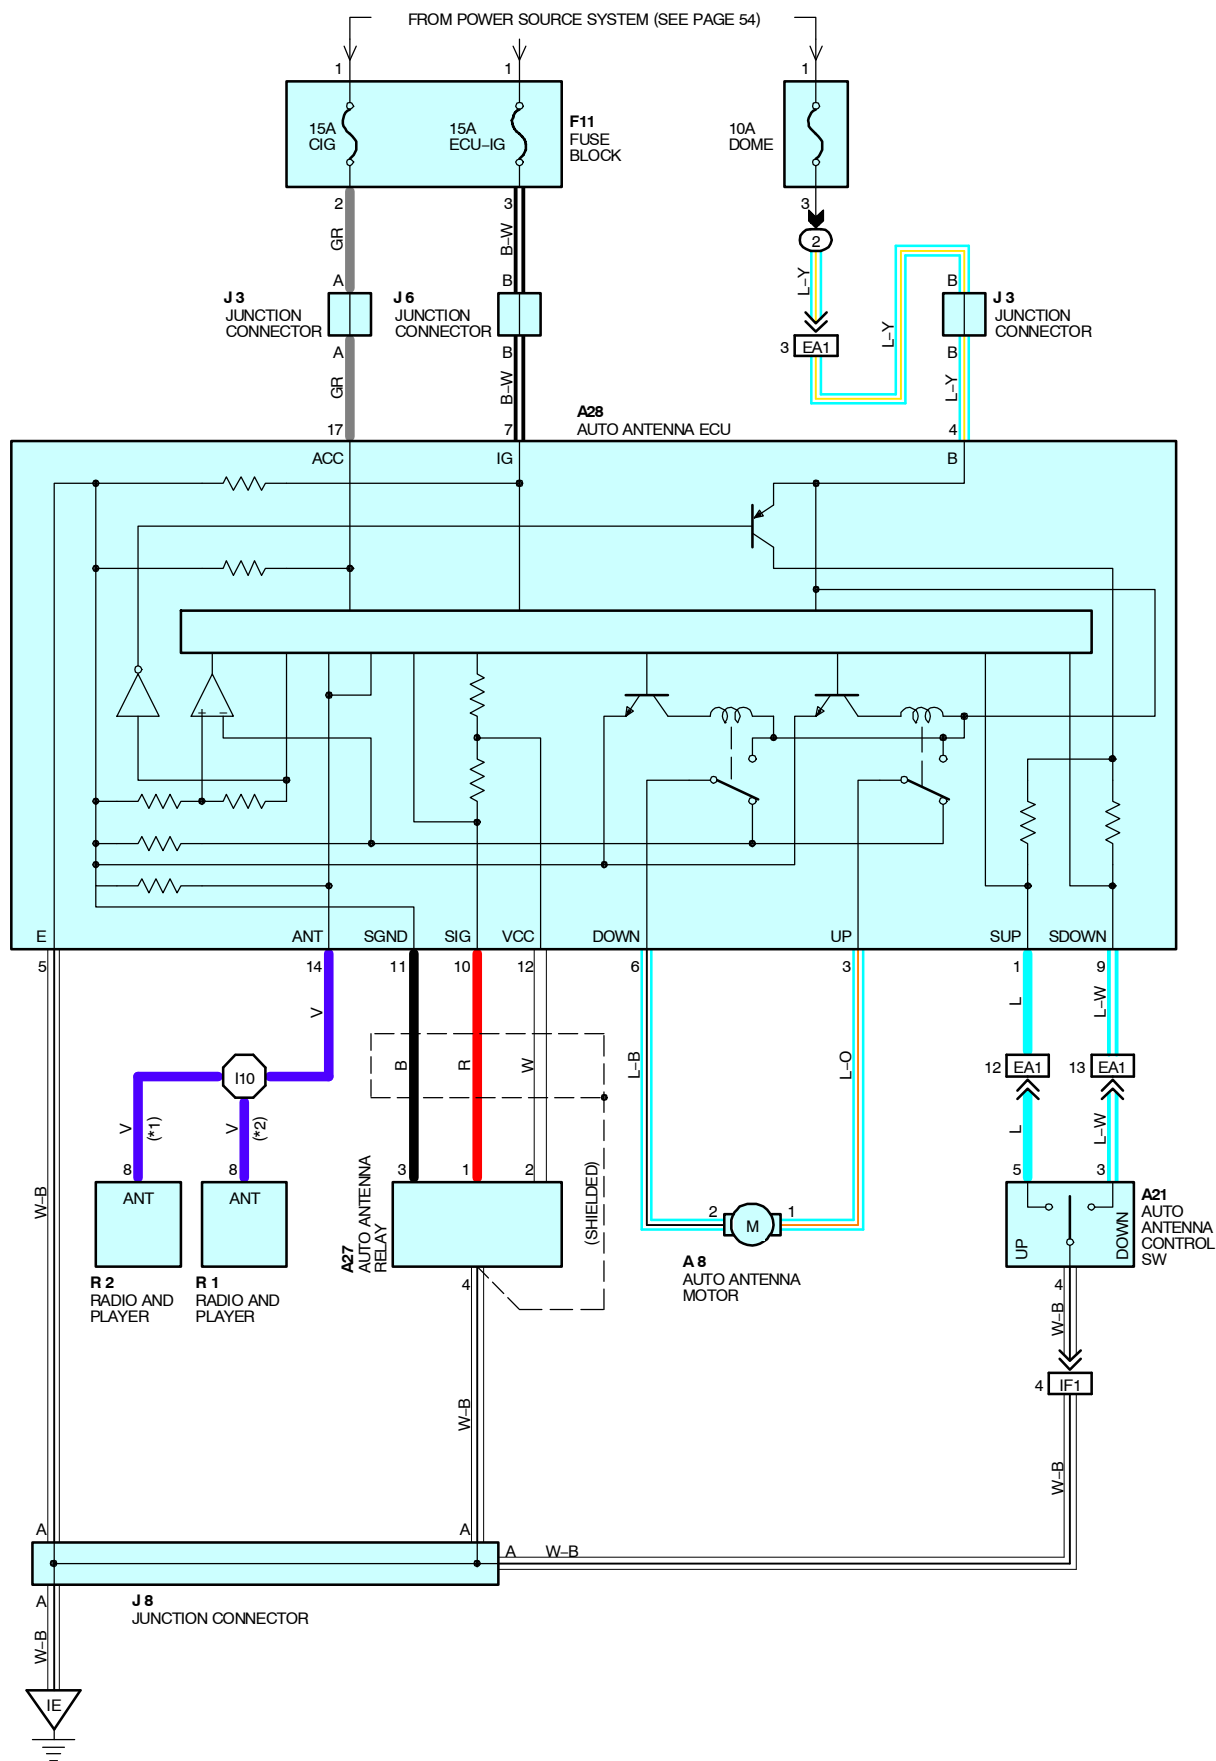

SERVICE HINTS

A30 AUTO ANTENNA ECU

- 4-GROUND : ALWAYS APPROX. 12 VOLTS
- 7-GROUND : APPROX. 12 VOLTS WITH THE IGNITION SW AT **ON** POSITION
- 17-GROUND : APPROX. 12 VOLTS WITH THE IGNITION SW AT **ACC** OR **ON** POSITION
- 5-GROUND : ALWAYS CONTINUITY

○ : PARTS LOCATION

CODE	SEE PAGE	CODE	SEE PAGE	CODE	SEE PAGE
A 8	22	F11	25	R 1	25
A21	24	J 3	25	R 2	25
A27	22	J 6	25		
A28	24	J 8	25		

○ : RELAY BLOCKS

CODE	SEE PAGE	RELAY BLOCKS (RELAY BLOCK LOCATION)
2	18	R/B NO.2 (FRONT SIDE OF LEFT FENDER)

□ : CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

CODE	SEE PAGE	JOINING WIRE HARNESS AND WIRE HARNESS (CONNECTOR LOCATION)
EA1	30	COWL WIRE AND ENGINE ROOM MAIN WIRE (LEFT FENDER)
IF1	32	COWL WIRE AND INSTRUMENT PANEL WIRE (INSTRUMENT PANEL CENTER)


▽ : GROUND POINTS

CODE	SEE PAGE	GROUND POINTS LOCATION
IE	32	RIGHT KICK PANEL


○ : SPLICE POINTS

CODE	SEE PAGE	WIRE HARNESS WITH SPLICE POINTS	CODE	SEE PAGE	WIRE HARNESS WITH SPLICE POINTS
I10	32	COWL WIRE			

 
A 8 GRAY




A21 BLACK

 

A27 GRAY

 


A 2 8

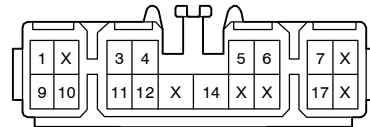

F11


(SEE PAGE 20)

J 3

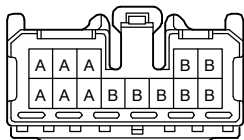


(HINT : SEE PAGE 7)

J 6

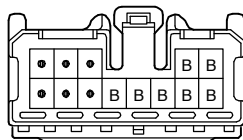


(HINT : SEE PAGE 7)

 J 8 BLUE



(HINT : SEE PAGE 7)

 R 1 GRAY



R 2

