


HEADLIGHT

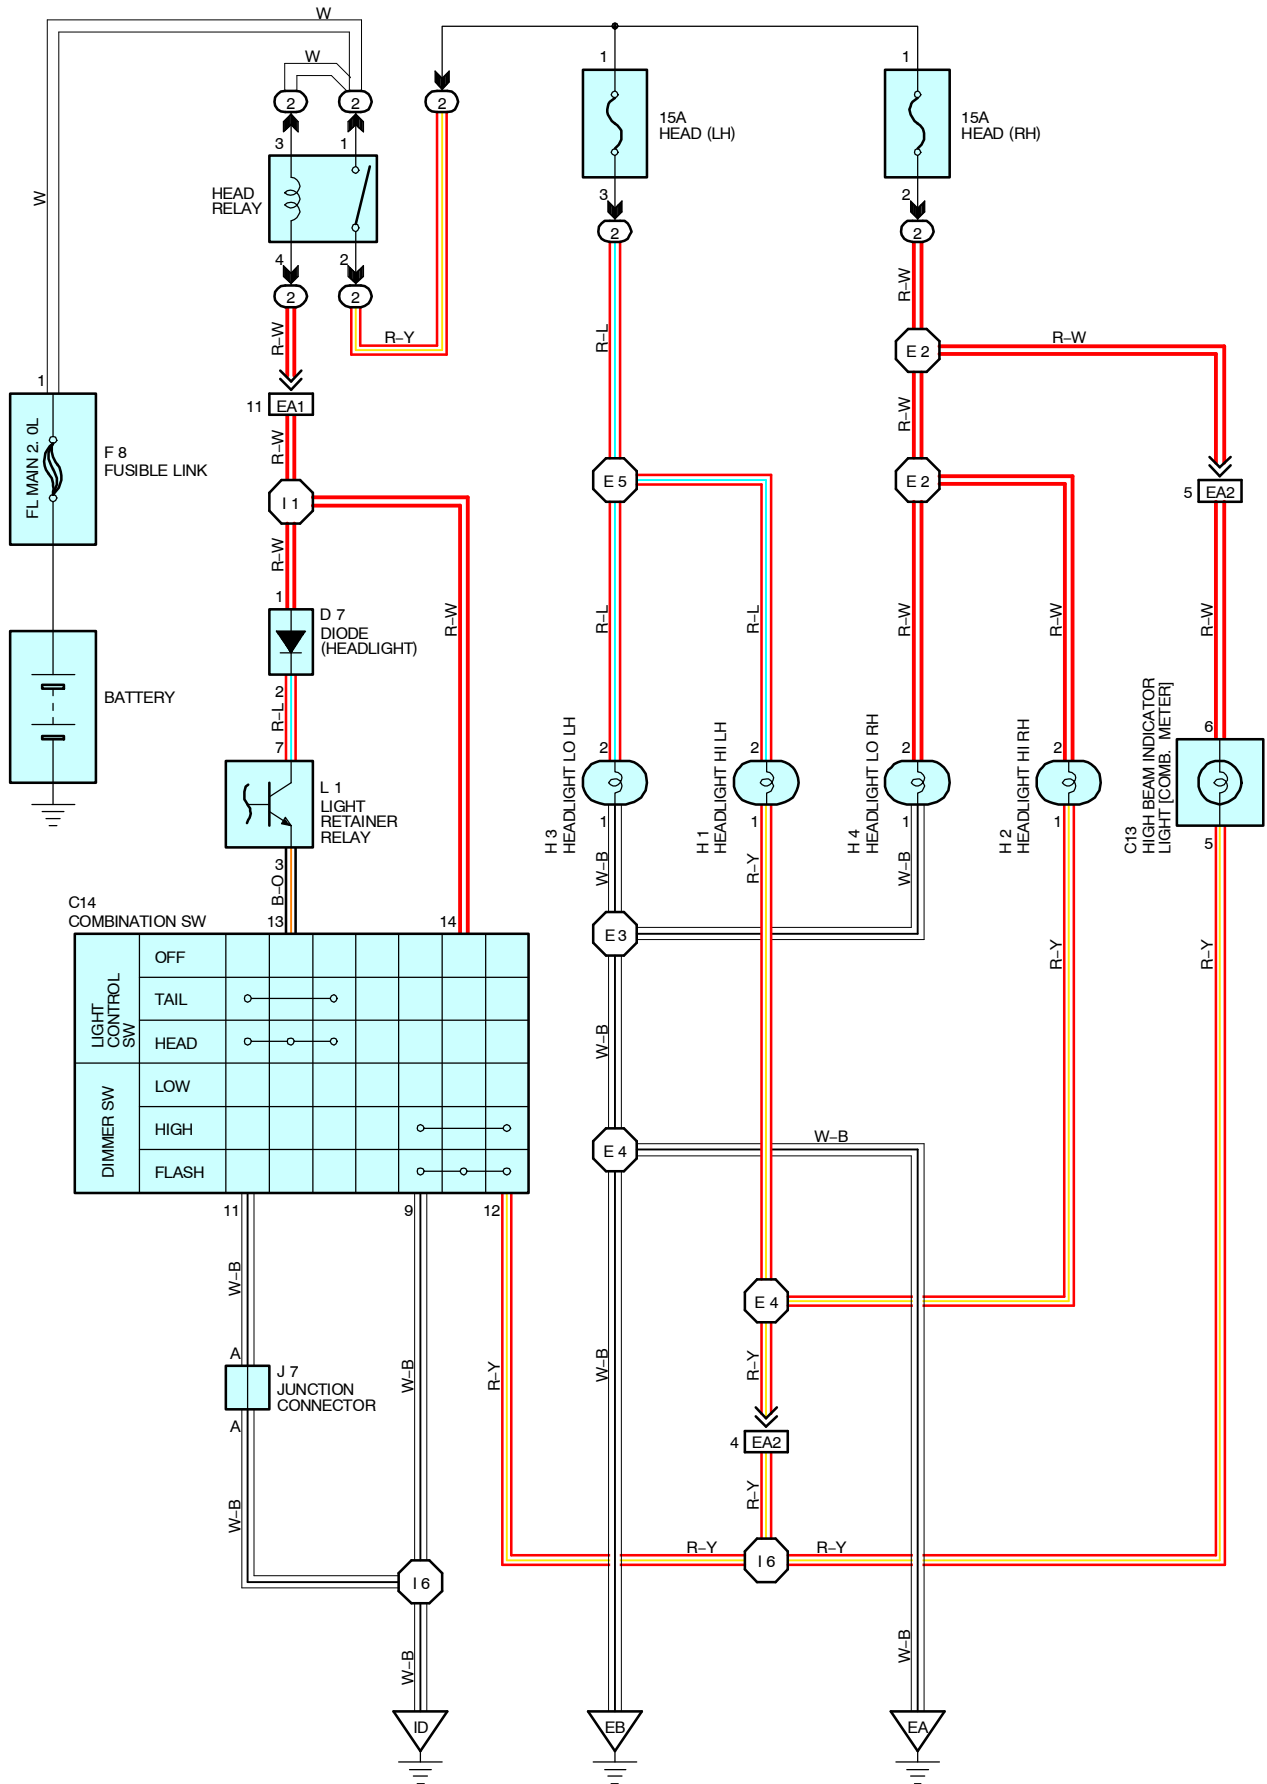

HEAD LIGHT

C14 LIGHT CONTROL SW (COMB. SW)

13-11:CLOSED WITH THE LIGHT CONTROL SW AT HEAD POSITION

C14 DIMMER SW (COMB. SW)

14-9:CLOSED WITH THE DIMMER SW AT **FLASH** POSITION

12-9:CLOSED WITH THE DIMMER SW AT **HIGH** OR **FLASH** POSITION

○ : PARTS LOCATION

CODE	SEE PAGE	CODE	SEE PAGE	CODE	SEE PAGE
C13	24	H 1	22	J 7	25
C14	24	H 2	22	L 1	25
D 7	24	H 3	22		
F 8	22	H 4	22		

 : RELAY BLOCKS

CODE	SEE PAGE	RELAY BLOCKS (RELAY BLOCK LOCATION)
2	18	R/B NO. 2 (FRONT SIDE OF LEFT FENDER)

 : CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

CODE	SEE PAGE	JOINING WIRE HARNESS AND WIRE HARNESS (CONNECTOR LOCATION)
EA1	30	COWL WIRE AND ENGINE ROOM MAIN WIRE (LEFT FENDER)
EA2		

 : GROUND POINTS

CODE	SEE PAGE	GROUND POINTS LOCATION
EA	30	FRONT SIDE OF THE RIGHT FENDER
EB	30	FRONT SIDE OF THE LEFT FENDER
ID	32	LEFT KICK PANEL

 : SPLICE POINTS

CODE	SEE PAGE	WIRE HARNESS WITH SPLICE POINTS	CODE	SEE PAGE	WIRE HARNESS WITH SPLICE POINTS
E 2	30	ENGINE ROOM MAIN WIRE	E 5	30	ENGINE ROOM MAIN WIRE
E 3			I 1	32	COWL WIRE
E 4			I 6		

