





INTERIOR LIGHT

FROM POWER SOURCE SYSTEM (SEE PAGE 52)

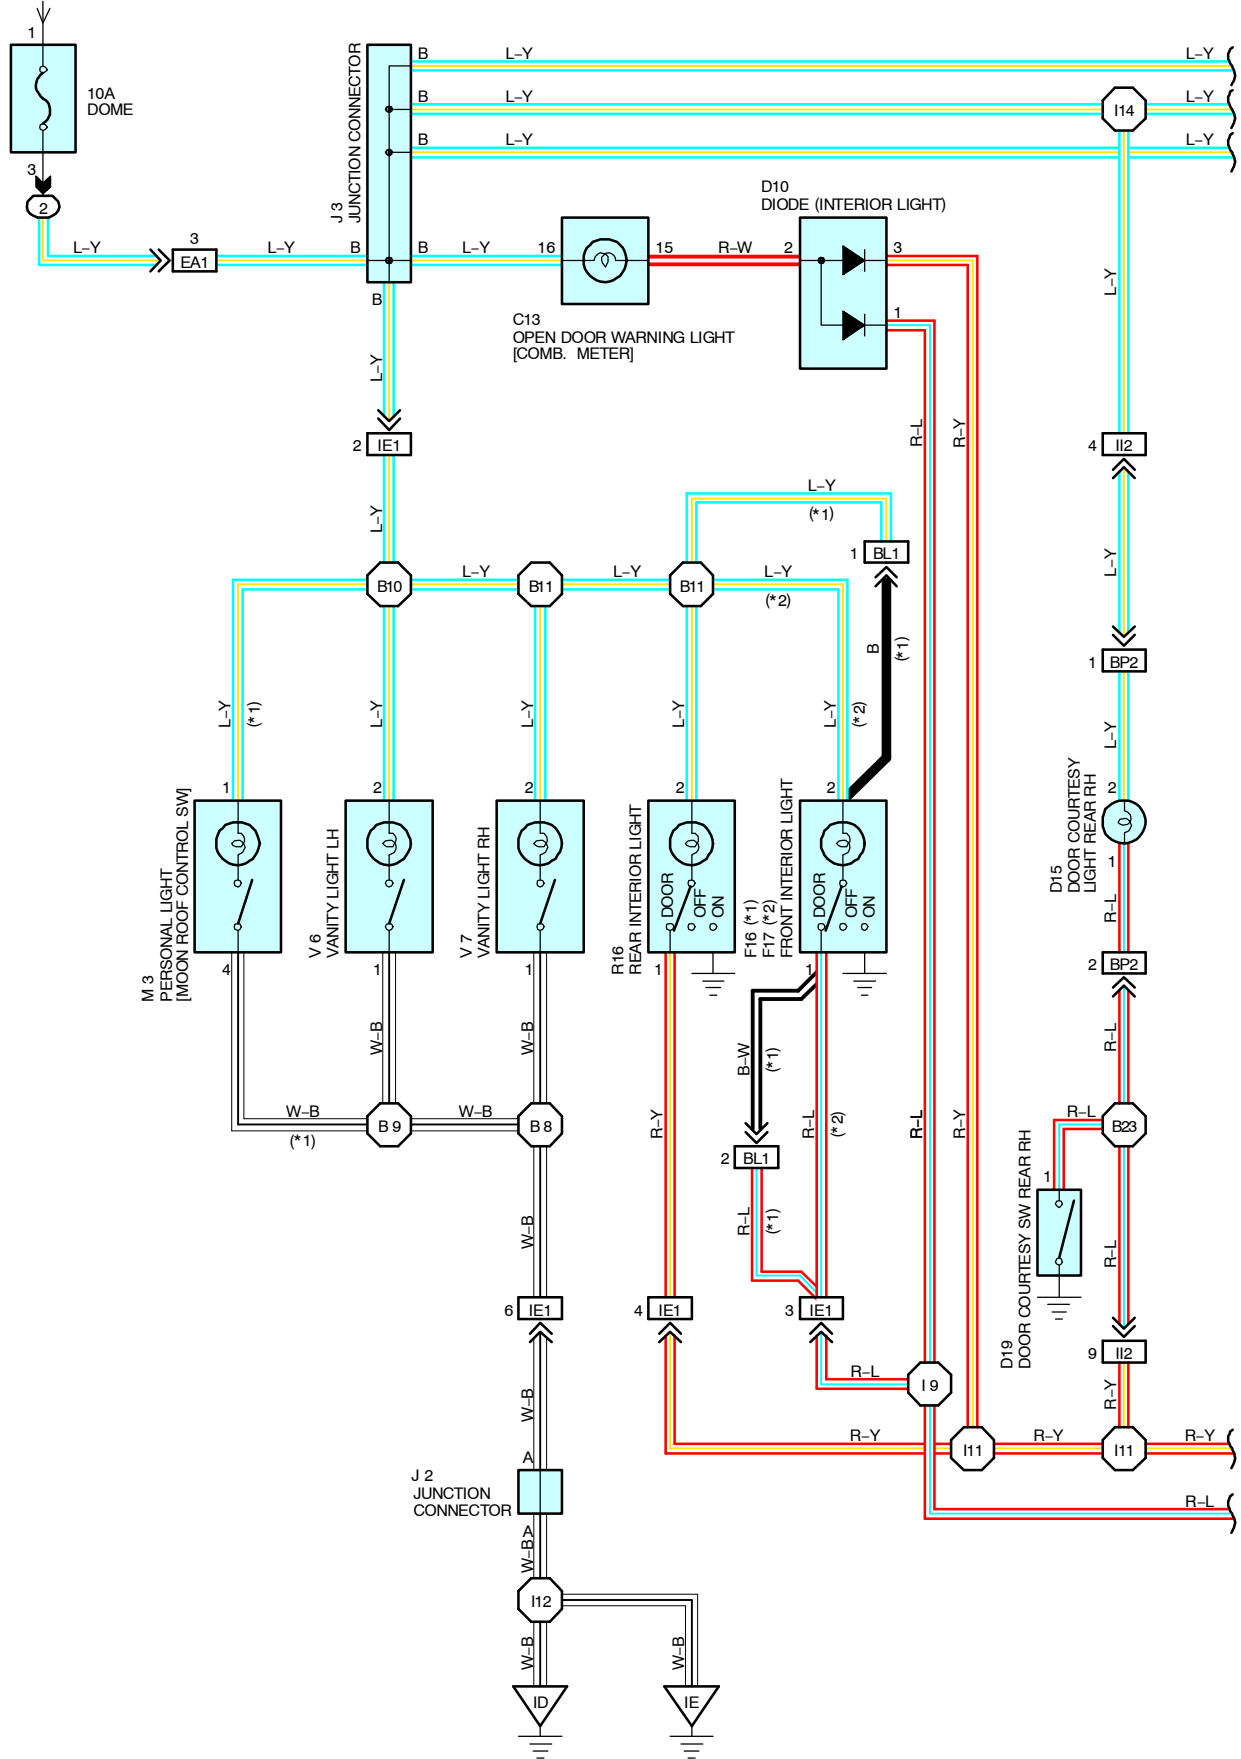

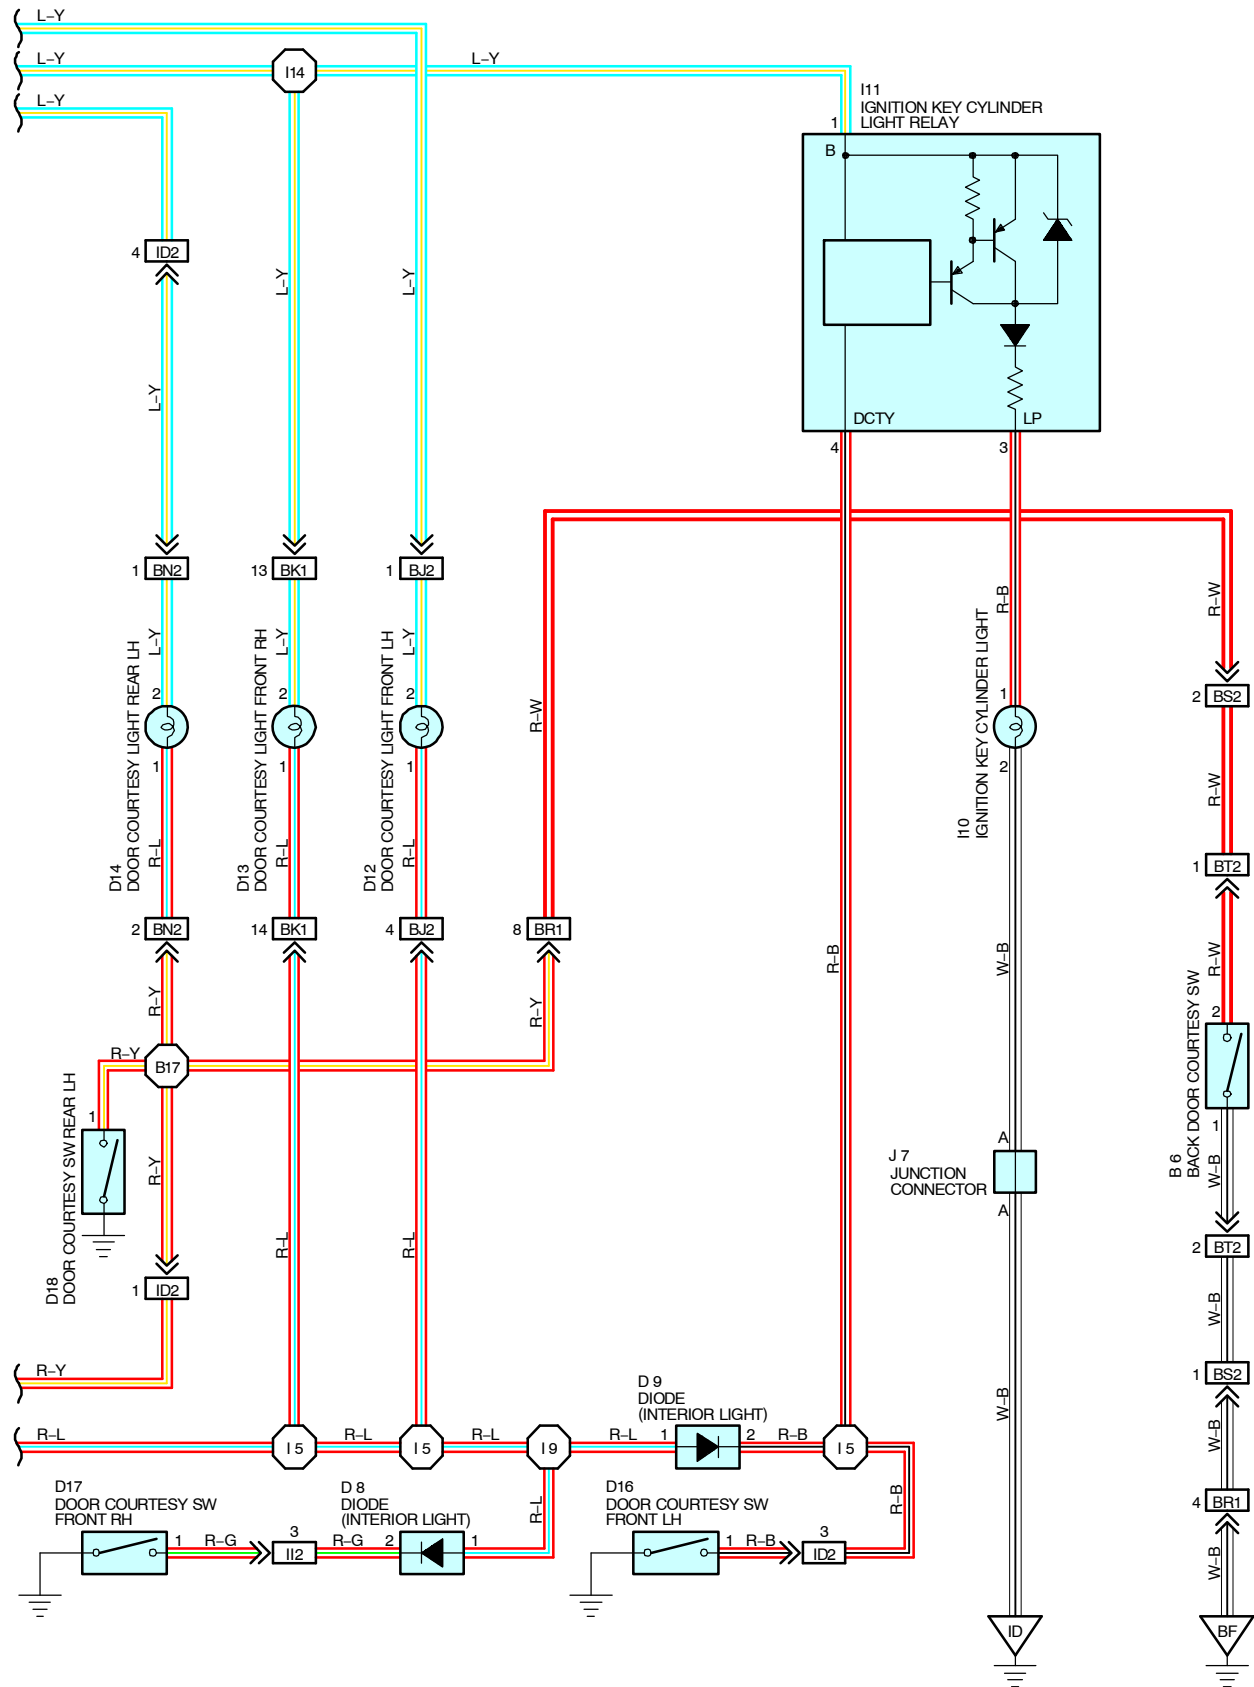



INTERIOR LIGHT

SERVICE HINTS

F16, F17 FRONT INTERIOR LIGHT

2-1:CLOSED WITH THE INTERIOR LIGHT POSITION SW AT **DOOR** POSITION

2-GROUND:ALWAYS APPROX. 12 VOLTS

D16, D17, D18, D19 DOOR COURTESY SW FRONT LH, RH, REAR LH, RH

1-GROUND:CLOSED WITH EACH OF THE DOOR OPEN

B 6 BACK DOOR COURTESY SW

2-1:CLOSED WITH THE BACK DOOR OPEN

: PARTS LOCATION

CODE	SEE PAGE	CODE	SEE PAGE	CODE	SEE PAGE
B 6	26	D15	26	I11	25
C13	24	D16	26	J 2	25
D 8	24	D17	26	J 3	25
D 9	24	D18	26	J 7	25
D10	24	D19	26	M 3	26
D12	26	F16	26	R16	27
D13	26	F17	26	V 6	27
D14	26	I10	25	V 7	27

: RELAY BLOCKS

CODE	SEE PAGE	RELAY BLOCKS (RELAY BLOCK LOCATION)
2	18	R/B NO. 2 (FRONT SIDE OF LEFT FENDER)

: CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

CODE	SEE PAGE	JOINING WIRE HARNESS AND WIRE HARNESS (CONNECTOR LOCATION)
EA1	30	COWL WIRE AND ENGINE ROOM MAIN WIRE (LEFT FENDER)
ID2	32	COWL WIRE AND FLOOR NO. 1 WIRE (LEFT KICK PANEL)
1E1	32	ROOF WIRE AND COWL WIRE (LEFT KICK PANEL)
II2	32	COWL WIRE AND FLOOR NO. 2 WIRE (RIGHT KICK PANEL)
BJ2	34	FRONT DOOR LH WIRE AND COWL WIRE (LEFT KICK PANEL)
BK1	34	FRONT DOOR RH WIRE AND COWL WIRE (RIGHT KICK PANEL)
BL1	34	ROOF WIRE AND ROOF NO. 3 WIRE (ROOF LEFT)
BN2	34	REAR DOOR LH WIRE AND FLOOR NO. 1 WIRE (LEFT CENTER PILLAR)
BP2	34	REAR DOOR RH WIRE AND FLOOR NO. 2 WIRE (RIGHT CENTER PILLAR)
BR1	34	LUGGAGE ROOM NO. 1 WIRE AND FLOOR NO. 1 WIRE (LEFT QUARTER PANEL INNER)
BS2	34	BACK DOOR NO. 1 WIRE AND LUGGAGE ROOM NO. 1 WIRE (LEFT REAR SIDE OF ROOF)
BT2	36	BACK DOOR NO. 1 WIRE AND BACK DOOR NO. 2 WIRE (BACK DOOR LEFT)

: GROUND POINTS

CODE	SEE PAGE	GROUND POINTS LOCATION
ID	32	LEFT KICK PANEL
IE	32	RIGHT KICK PANEL
BF	34	UNDER THE CENTER CONSOLE BOX

: SPLICE POINTS

CODE	SEE PAGE	WIRE HARNESS WITH SPLICE POINTS	CODE	SEE PAGE	WIRE HARNESS WITH SPLICE POINTS
I 5	32	COWL WIRE	B 9	36	ROOF WIRE
I 9			B10		
I11			B11		
I12			B17	36	FLOOR WIRE
I14			B23	36	FLOOR NO. 2 WIRE
B 8	36				

