




- *1 : SEPARATE TYPE AMPLIFIER
- *2 : BUILT-IN TYPE AMPLIFIER
- *3 : A/T INDICATOR ILLUMINATION
- *4 : METER ILLUMINATION

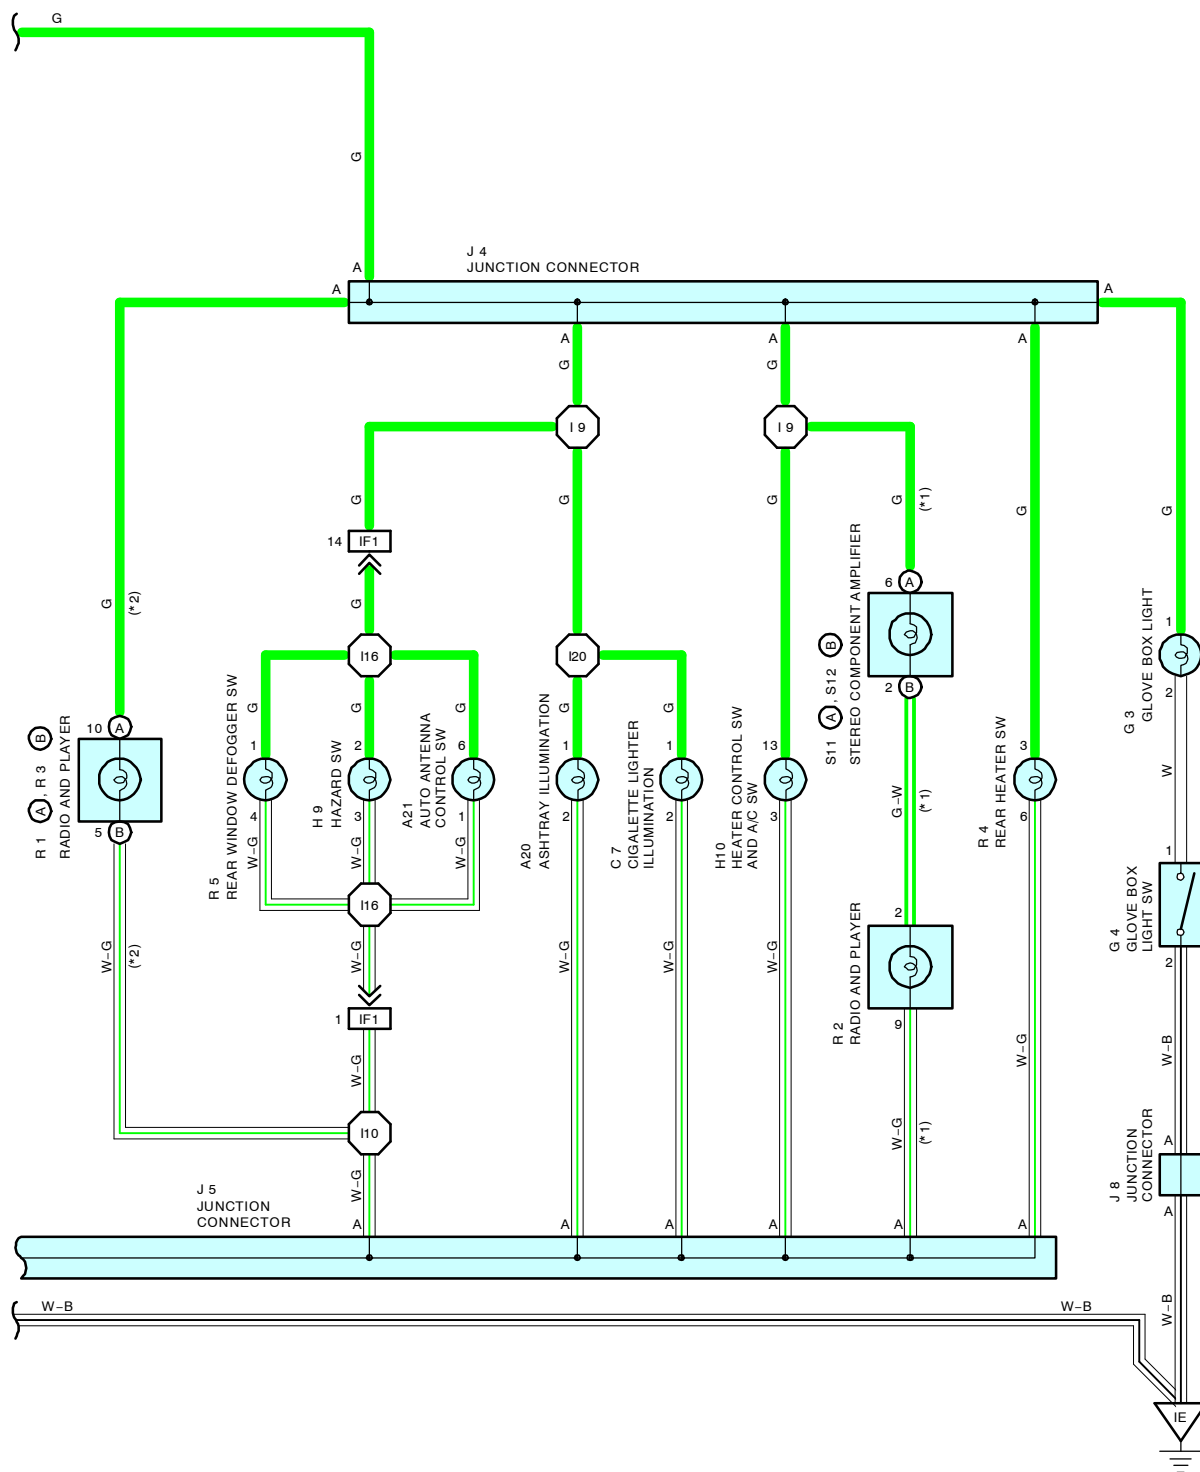



SERVICE HINTS

TAIL RELAY

(1) 2- (1) 3:CLOSED WITH THE LIGHT CONTROL SW AT **TAIL** OR **HEAD** POSITION (WHEN LIGHT AUTO TURN OFF SYSTEM DOES NOT OPERATE)

R-7 RHEOSTAT

1-2:APPROX. 12 VOLTS WITH THE RHEOSTAT FULLY TURNED COUNTERWISE AND 0 VOLTS WITH IT FULLY TURNED CLOCKWISE

○ : PARTS LOCATION

CODE	SEE PAGE	CODE	SEE PAGE	CODE	SEE PAGE
A20	24	G 3	25	L 1	25
A21	24	G 4	25	0 4	27
C 7	24	H 9	25	R 1	A 25
C11	B 24	H10	25	R 2	25
C12	D 24	J 1	25	R 3	B 25
C13	C 24	J 2	25	R 4	25
C14	24	J 4	25	R 5	25
E 9	26	J 5	25	R 7	25
F 8	22	J 7	25	S11	A 25
F11	25	J8	25	S12	B 25

○ : RELAY BLOCKS

CODE	SEE PAGE	RELAY BLOCKS (RELAY BLOCK LOCATION)
1	20	R/B NO. 1 (LEFT KICK PANEL)

□ : CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

CODE	SEE PAGE	JOINING WIRE HARNESS AND WIRE HARNESS (CONNECTOR LOCATION)
EA3	30	COWL WIRE AND ENGINE ROOM MAIN WIRE (LEFT FENDER)
ID1	32	COWL WIRE AND FLOOR NO. 1 WIRE (LEFT KICK PANEL)
ID2		
IF1	32	COWL WIRE AND INSTRUMENT PANEL WIRE (INSTRUMENT PANEL CENTER)

▽ : GROUND POINTS

CODE	SEE PAGE	GROUND POINTS LOCATION
ID	32	LEFT KICK PANEL
IE	32	RIGHT KICK PANEL

○ : SPLICE POINTS

CODE	SEE PAGE	WIRE HARNESS WITH SPLICE POINTS	CODE	SEE PAGE	WIRE HARNESS WITH SPLICE POINTS
I 9			I16	32	INSTRUMENT PANEL WIRE
I10	32	COWL WIRE	I20	32	COWL WIRE
I12			B13	36	FLOOR WIRE

