


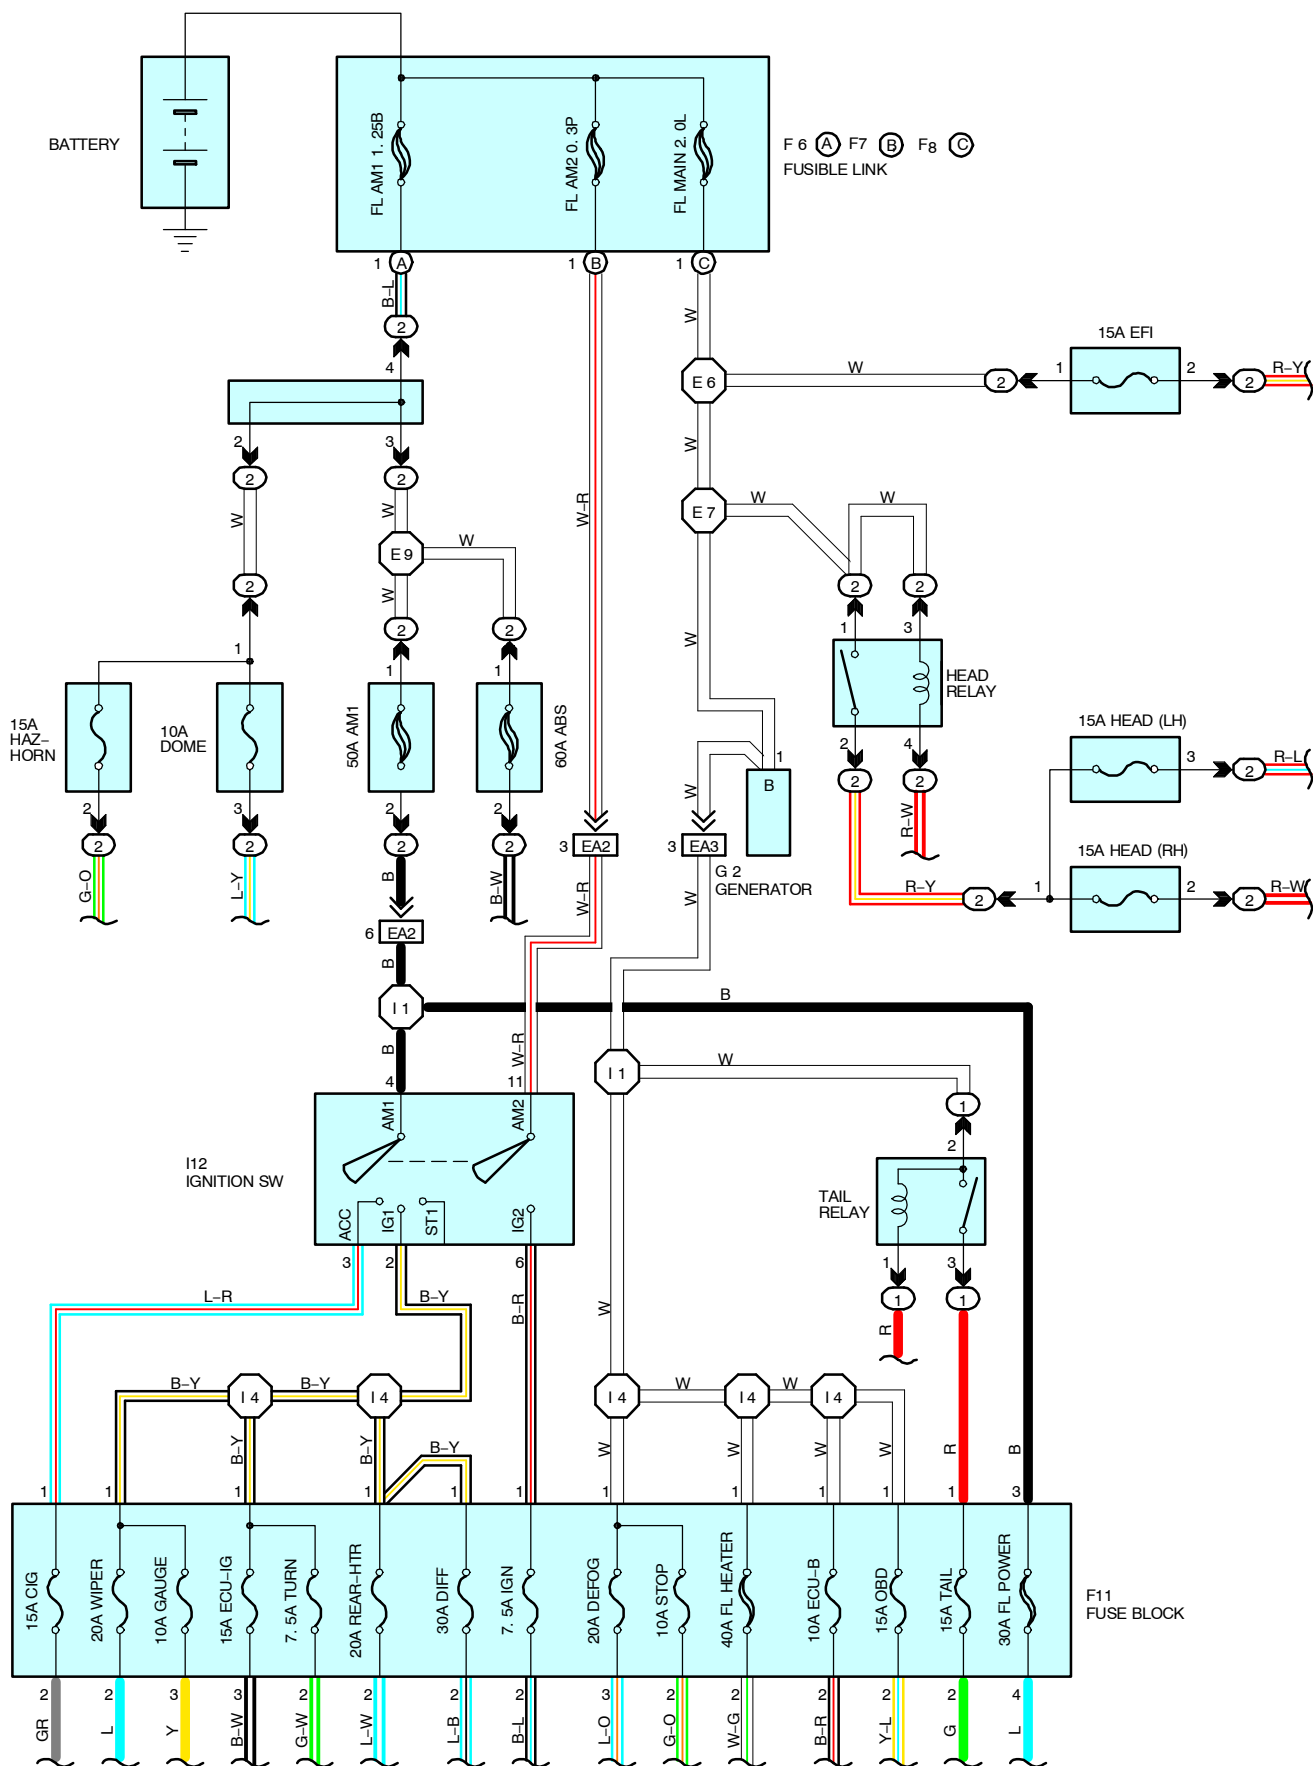

POWER SOURCE



SERVICE HINTS

HEAD RELAY

(2) 1- (2) 2:CLOSED WITH THE LIGHT CONTROL SW AT HEAD POSITION OR THE DIMMER SW AT FLASH POSITION
(WHEN THE LIGHT AUTO TURN OFF SYSTEM DOES NOT OPERATE)

I12 IGNITION SW

4-3:CLOSED WITH THE IGNITION SW AT ACC OR ON POSITION

4-2:CLOSED WITH THE IGNITION SW AT ON OR ST POSITION

11-6:CLOSED WITH THE IGNITION SW AT ON OR ST POSITION

TAIL RELAY:

(1) 2- (1) 2:CLOSED WITH THE LIGHT CONTROL SW ATTAIL OR HEAD POSITION
(WHEN THE LIGHT AUTO TURN OFF SYSTEM DOES NOT OPERATE)



: PARTS LOCATION

CODE		SEE PAGE	CODE		SEE PAGE	CODE	SEE PAGE
F 6	A	22	F 8	C	22	G 2	22
F 7	B	22	F11		25	I12	25



: RELAY BLOCKS

CODE	SEE PAGE	RELAY BLOCKS (RELAY BLOCK LOCATION)
1	20	R/B NO. 1 (LEFT BLOCK LOCATION)
2	18	R/B NO. 2 (FRONT SIDE OF LEFT FENDER)




: CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

CODE	SEE PAGE	JOINING WIRE HARNESS AND WIRE HARNESS (CONNECTOR LOCATION)
EA2	30	COWL WIRE AND ENGINE ROOM MAIN WIRE (LEFT FENDER)
EA3		



: SPLICE POINTS

CODE	SEE PAGE	WIRE HARNESS WITH SPLICE POINTS	CODE	SEE PAGE	WIRE HARNESS WITH SPLICE POINTS
E6	30	ENGINE ROOM MAIN WIRE	I 1	32	COWL WIRE
E 7			I 4		
E 9	30				

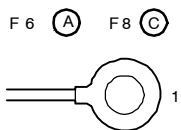

F11
(SEE PAGE 20)

