



SERVICE HINTS

DEFOG RELAY

(1)4-(1)2CLOSED WITH THE IGNITION SW ON AND THE REAR WINDOW DEFOGGER SW ON

R5 REAR WINDOW DEFOGGER SW

3-GROUND: ALWAYS CONTINUITY

2,6-GROUND: APPROX. 12 VOLTS WITH THE IGNITION SW AT ON POSITION

○ : PARTS LOCATION

CODE	SEE PAGE	CODE	SEE PAGE	CODE	SEE PAGE
F11	25	J8	25	R18 B	27
J1	25	R5	25		
J4	25	R17 A	27		

○ : RELAY BLOCKS

CODE	SEE PAGE	RELAY BLOCKS (RELAY BLOCK LOCATION)
1	20	R/B NO.1 (LEFT KICK PANEL)

□ : CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

CODE	SEE PAGE	JOINING WIRE HARNESS AND WIRE HARNESS (CONNECTOR LOCATION)
ID2	32	COWL WIRE AND FLOOR NO.1 WIRE (LEFT KICK PANEL)
IF1	32	COWL WIRE AND INSTRUMENT PANEL WIRE (INSTRUMENT PANEL CENTER)
BR1	34	LUGGAGE ROOM NO.1 WIRE AND FLOOR NO.1 WIRE (LEFT QUARTER PANEL INNER)
BR2		
BS1	34	BACK DOOR NO.1 WIRE AND LUGGAGE ROOM NO.1 WIRE (LEFT REAR SIDE OF ROOF)
BS2		
BT1	36	BACK DOOR NO.1 WIRE AND BACK DOOR NO.2 WIRE (BACK DOOR LEFT)
BT2		
BU1	36	REAR WINDOW NO.1 WIRE AND BACK DOOR NO.2 WIRE (BACK DOOR LEFT)
BX1	36	REAR WINDOW NO.1 WIRE AND BACK DOOR NO.2 WIRE (BACK DOOR RIGHT)


▽ : GROUND POINTS

CODE	SEE PAGE	GROUND POINTS LOCATION
IE	32	RIGHT KICK PANEL
BF	34	UNDER THE CENTER CONSOLE BOX

F11


(SEE PAGE 20)

J1

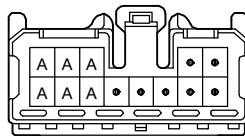


(HINT : SEE PAGE 7)

J4

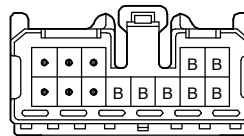

(HINT : SEE PAGE 7)

 J8 BLUE



(HINT : SEE PAGE 7)

R5 BLACK

R17 (A), R18 (B) BLACK

