



10A STOP

F11
FUSE BLOCK

S13
STOP LIGHT SW

ID2

B18

BR1

BS2

BQ1

B33

T4
TRAILER SOCKET
(TAIL AND STOP LIGHT)

B30

R8
STOP LIGHT LH
[REAR COMB. LIGHT LH]

R9
STOP LIGHT RH
[REAR COMB. LIGHT RH]

H12
HIGH MOUNTED
STOP LIGHT

BG

BF

Wiring Diagram Details:

- Power Source:** 10A STOP fuse (F11).
- Control:** Stop Light Switch (S13).
- Relays:** BR1 (Rear Stop Light Relay), BS2 (High Mounted Stop Light Relay).
- Trailer Socket:** T4 (TRAILER SOCKET).
- Lighting Components:**
 - R8: STOP LIGHT LH [REAR COMB. LIGHT LH]
 - R9: STOP LIGHT RH [REAR COMB. LIGHT RH]
 - H12: HIGH MOUNTED STOP LIGHT
- Wiring Colors and Labels:**
 - G-O: Green-Orange (Main Power)
 - G-W: Green-White (Ground/Power)
 - G-B: Green-Black (Ground/Power)
 - W-B: White-Black (Ground/Power)
- Terminal Numbers:** 1, 2, 3, 4.

SERVICE HINTS

S13 STOP LIGHT SW

2-1:CLOSED WITH THE BRAKE PEDAL DEPRESSED



: PARTS LOCATION

CODE	SEE PAGE	CODE	SEE PAGE	CODE	SEE PAGE
F11	25	R 8	27	S13	25
H12	26	R 9	27	T 4	27



: CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

CODE	SEE PAGE	JOINING WIRE HARNESS AND WIRE HARNESS (CONNECTOR LOCATION)
ID2	32	COWL WIRE AND FLOOR NO. 1 WIRE HARNESS (LEFT KICK PANEL)
BQ1	34	FLOOR NO.3 WIRE AND FLOOR NO. 1 (LEFT QUARTER PANEL TIMER)
BR1	34	LUGGAGE ROOM NO. 1 WIRE AND FLOOR NO. 1 WIRE(LEFT QUARTER PANEL INNER)
BS2	34	BACK DOOR NO. 1 WIRE AND LUGGAGE ROOM NO. 1 WIRE (LEFT REAR SIDE OF ROOF)



: GROUND POINTS

CODE	SEE PAGE	GROUND POINTS LOCATION
BF	34	UNDER THE CENTER CONSOLE BOX
BG	34	LOWER BACK PANEL CENTER



: SPLICE POINTS

CODE	SEE PAGE	WIRE HARNESS WITH SPLICE POINTS	CODE	SEE PAGE	WIRE HARNESS WITH SPLICE POINTS
B18	36	FLOOR WIRE	B33	36	FLOOR NO. 3 WIRE
B30	36	FLOOR NO. 3 WIRE			

F11

H12

R 8, R 9

S13 BLACK

T 4 BLACK

(SEE PAGE 20)

