



## SERVICE HINTS

### FLASH RELAY

- (1) 2-GROUND: APPROX. 12 VOLTS WITH THE IGNITION SW ON OR THE HAZARD SW ON  
 (1) 1-GROUND: CHANGES FROM 12 TO 0 VOLTS WITH THE IGNITION SW ON AND THE TURN SIGNAL SW LEFT OR RIGHT POSITION, AND WITH THE HAZARD SW ON  
 (1) 3-GROUND: ALWAYS CONTINUITY

### ○ : PARTS LOCATION

| CODE | SEE PAGE | CODE | SEE PAGE | CODE | SEE PAGE |
|------|----------|------|----------|------|----------|
| C11  | 24       | F11  | 25       | R 8  | 27       |
| C14  | 24       | H 9  | 25       | R 9  | 27       |
| F 1  | 22       | J 2  | 25       | T 5  | A 27     |
| F 2  | 22       | J 7  | 25       | T 6  | B 27     |

### ○ : RELAY BLOCKS

| CODE | SEE PAGE | RELAY BLOCKS (RELAY BLOCK LOCATION)   |
|------|----------|---------------------------------------|
| 1    | 20       | R/B NO. 1 (LEFT KICK PANEL)           |
| 2    | 18       | R/B NO. 2 (FRONT SIDE OF LEFT FENDER) |

### □ : CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

 
 


| CODE | SEE PAGE | JOINING WIRE HARNESS AND WIRE HARNESS (CONNECTOR LOCATION)       |
|------|----------|------------------------------------------------------------------|
| EA1  | 30       | COWL WIRE AND ENGINE ROOM MAIN WIRE (LEFT FENDER)                |
| ID2  | 32       | COWL WIRE AND FLOOR NO. 1 WIRE (LEFT KICK PANEL)                 |
| 1F1  | 32       | COWL WIRE AND INSTRUMENT PANEL WIRE (INSTRUMENT PANEL CENTER)    |
| BQ1  | 34       | FLOOR NO. 3 WIRE AND FLOOR NO. 1 WIRE (LEFT QUARTER PANEL INNER) |

### ▽ : GROUND POINTS





| CODE | SEE PAGE | GROUND POINTS LOCATION         |
|------|----------|--------------------------------|
| EA   | 30       | FRONT SIDE OF THE RIGHT FENDER |
| EB   | 30       | FRONT SIDE OF THE LEFT FENDER  |
| ID   | 32       | LEFT KICK PANEL                |
| IE   | 32       | RIGHT KICK PANEL               |
| BG   | 34       | LOWER BACK PANEL CENTER        |

### ○ : SPLICE POINTS

| CODE | SEE PAGE | WIRE HARNESS WITH SPLICE POINTS | CODE | SEE PAGE | WIRE HARNESS WITH SPLICE POINTS |
|------|----------|---------------------------------|------|----------|---------------------------------|
| I 1  | 32       | COWL WIRE                       | I12  | 32       | COWL WIRE                       |
| I 7  |          |                                 |      |          |                                 |

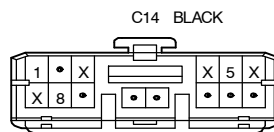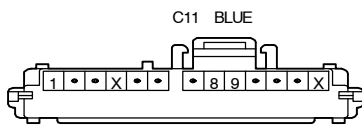

20)

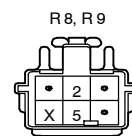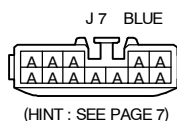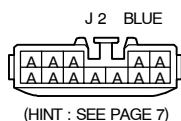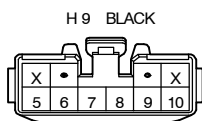

ACK

