



# AT Fluid Temperature Warning System

## A/T FLUID TEMPERATURE WARNING SYSTEM CIRCUIT

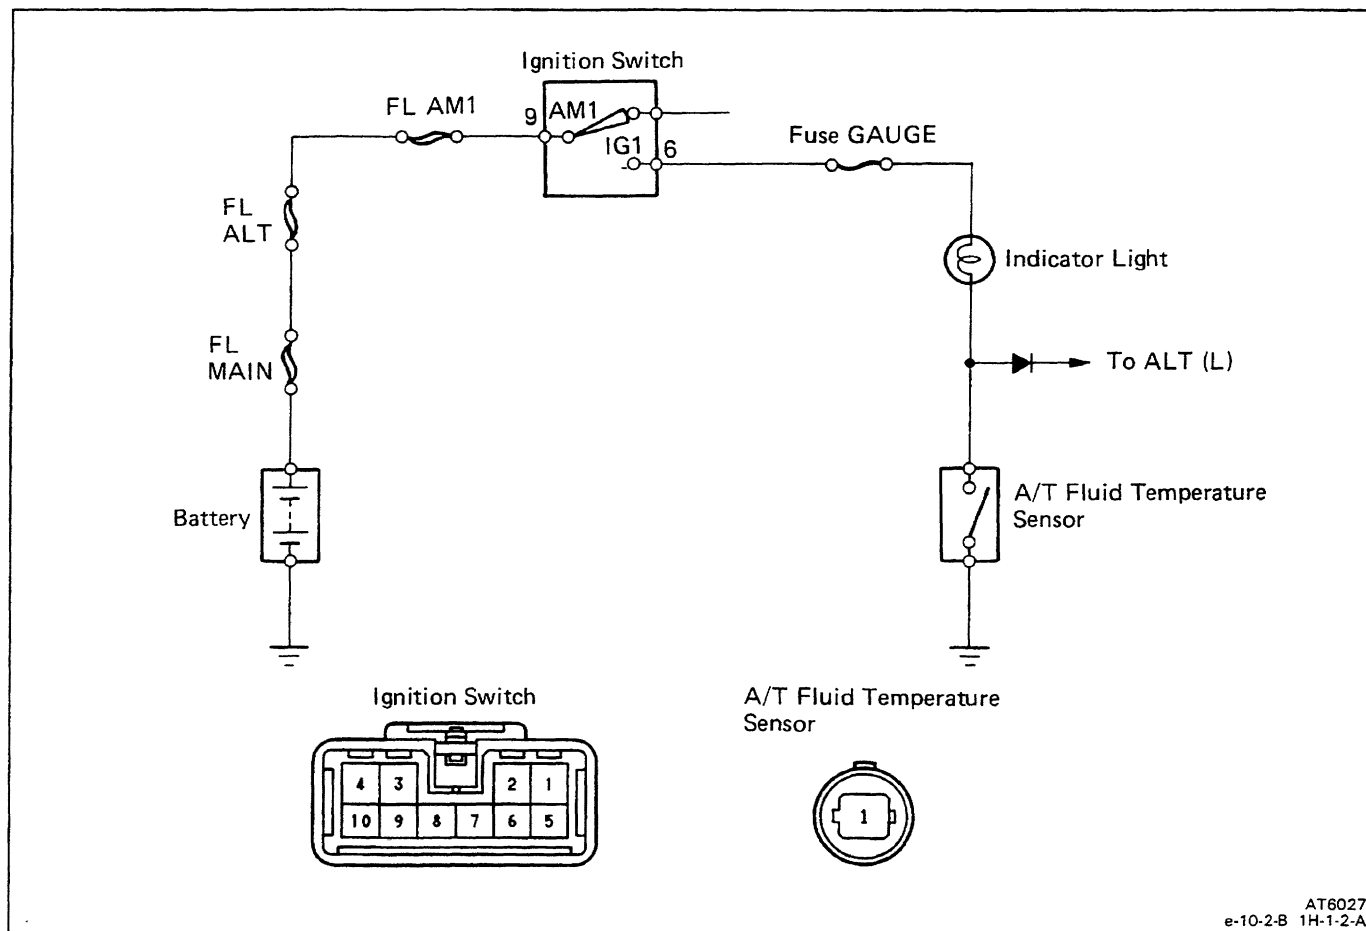

AT6027  
e-10-2-B 1H-1-2-A

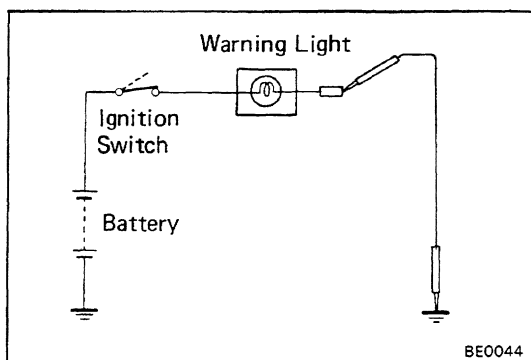

BE0044

### INSPECTION OF A/T FLUID TEMPERATURE WARNING SYSTEM COMPONENTS


#### 1. INSPECT A/T FLUID TEMPERATURE WARNING LIGHT

- Disconnect the connector from the temperature sensor. Connect terminal of the wire harness side connector and body ground.
- Turn the ignition switch ON, check that the light go on. If warning light does not light, test the bulb.

#### 2. INSPECT A/T FLUID TEMPERATURE SENSOR

Check that there is continuity at the temperature of  $145^{\circ}\text{C} - 155^{\circ}\text{C}$  ( $325^{\circ}\text{F} - 343^{\circ}\text{F}$ ).

If continuity is not as specified, replace the sensor.

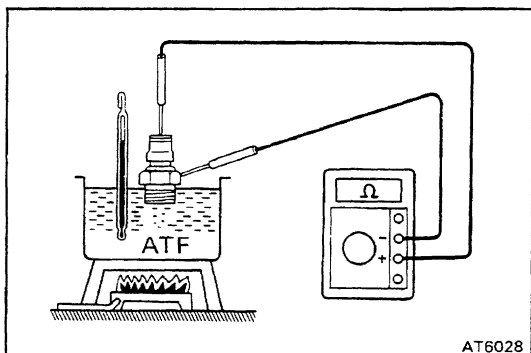

AT6028