



# Front Extension Housing Assembly COMPONENTS

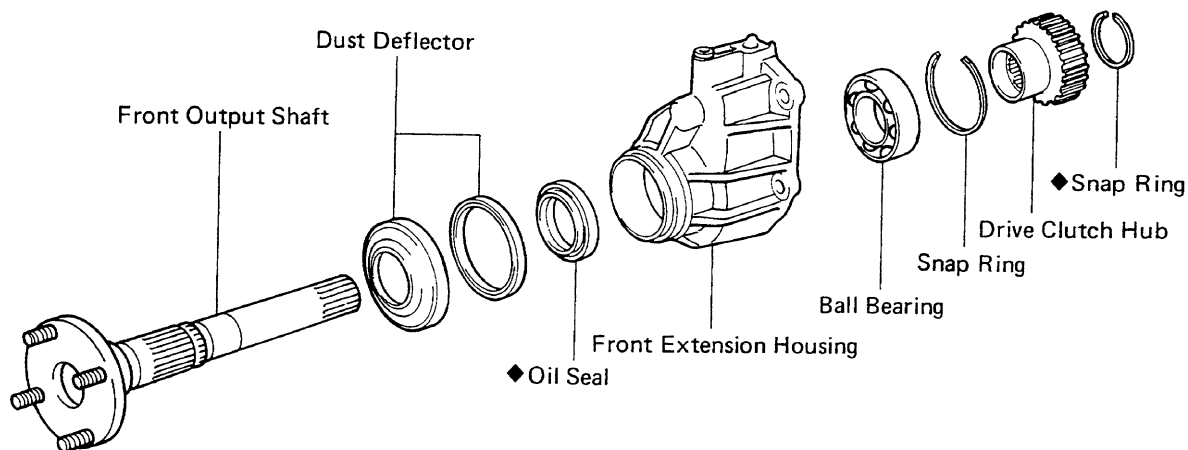

◆ Non-reusable part

TF0932

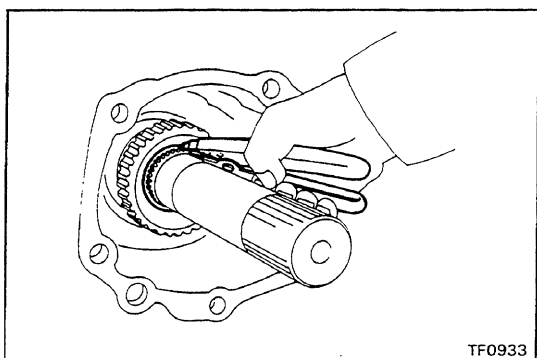


TF0933

## DISASSEMBLY OF FRONT EXTENSION HOUSING ASSEMBLY

### 1. REMOVE DRIVE CLUTCH HUB


(a) Using snap ring pliers, remove the snap ring.

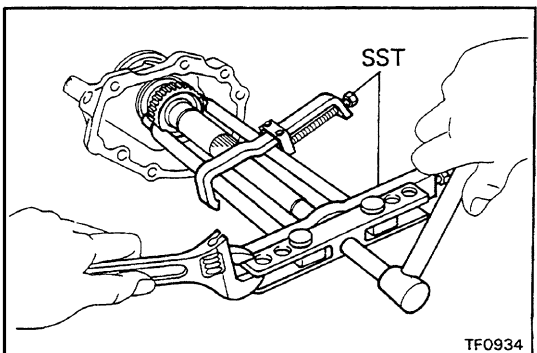

TF0934


(b) Using SST, remove the drive clutch hub.

SST 09950-20017

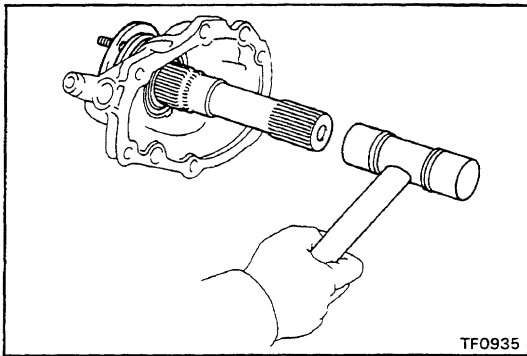


## 2. REMOVE FRONT OUTPUT SHAFT

. Using a plastic hammer, drive out the front output shaft.

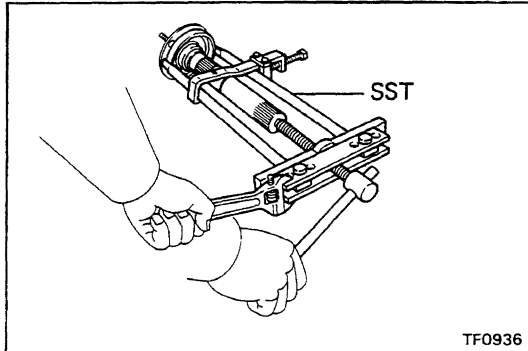


## 3. REMOVE DUST DEFLECTORS

- (a) Using SST, remove the dust deflector.  
SST 09950-20017

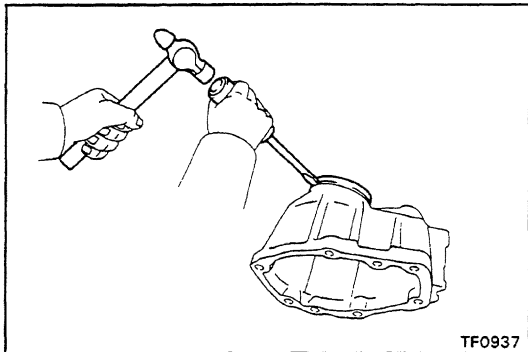


- (b) Using a screwdriver and hammer, tap the dust deflector and remove it.

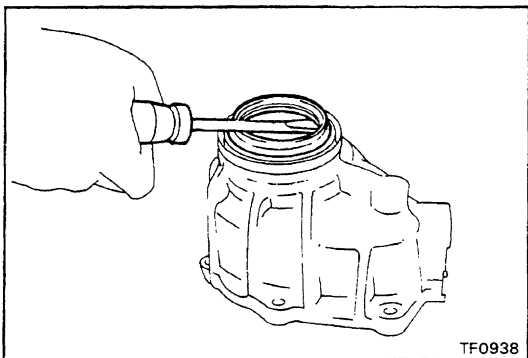


## 4. REMOVE OIL SEAL

Using a screwdriver, pry out the oil seal.

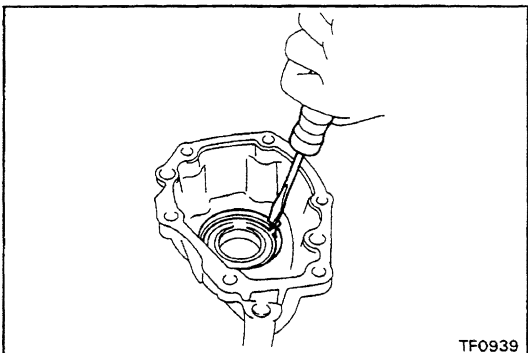

## 5. REMOVE BALL BEARING


- (a) Using a screwdriver, remove the snap ring.

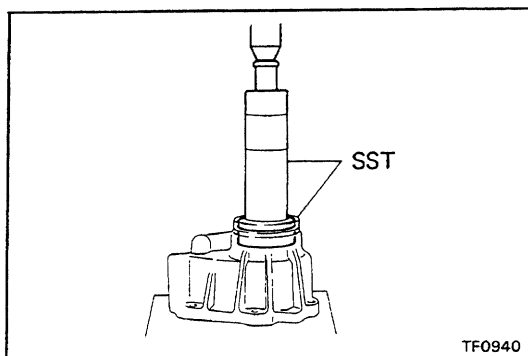


(b) Using SST and a press, remove the ball bearing.  
SST 09316-60010 (09316-00010, 09316-00070)

## ASSEMBLY OF FRONT EXTENSION HOUSING ASSEMBLY


### 1. INSTALL DUST DEFLECTORS

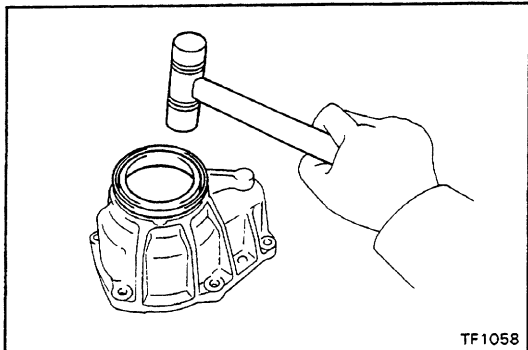

(a) Using plastic hammer, install the dust deflector.

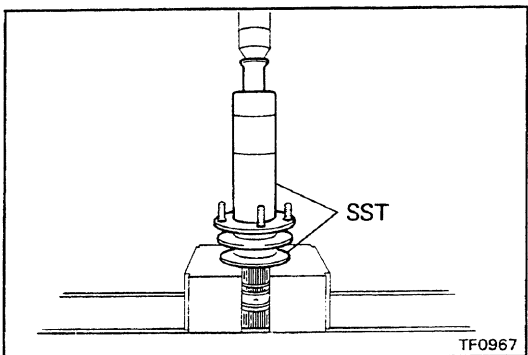


(b) Using SST and a press, install the dust deflector.  
SST 09316-60010 (09316-00010), 09316-20011

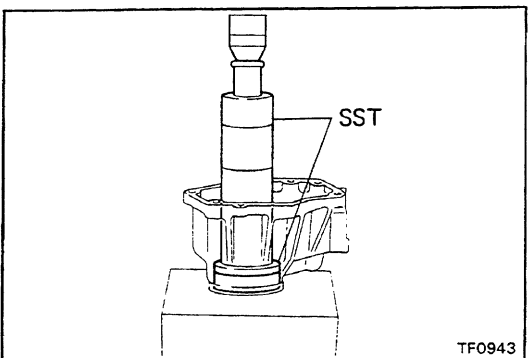


### 2. INSTALL BALL BEARING

(a) Using SST and a press, install the ball bearing.  
SST 09316-60010 (09316-00010, 09316-00030)

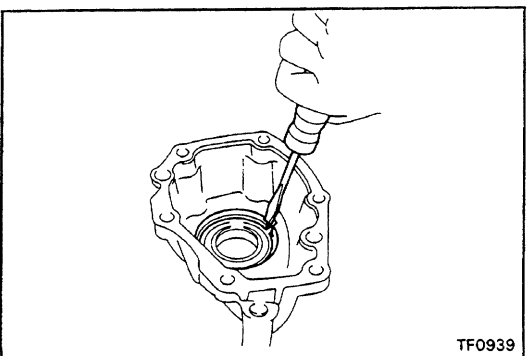


(b) Using a screwdriver, install the snap ring.

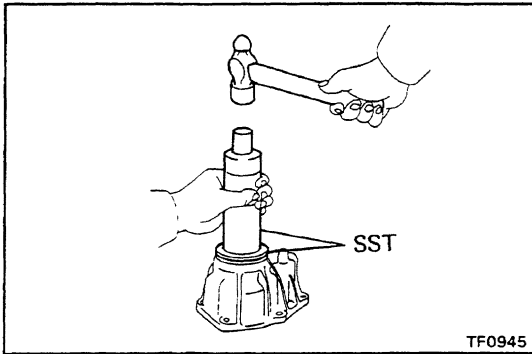

### 3. INSTALL OIL SEAL

Using SST and a hammer, drive in a new oil seal.


SST 09316-60010 (09316-00010, 09316-00060)

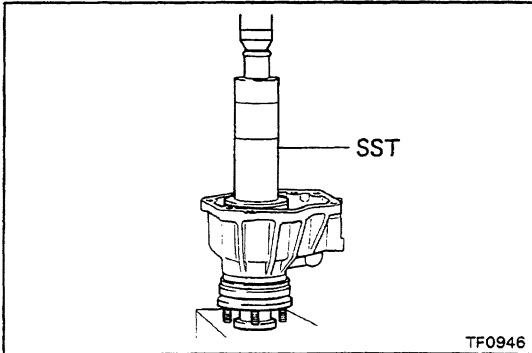

### 4. INSTALL FRONT OUTPUT SHAFT AND DRIVE CLUTCH HUB

(a) Using SST and press, install the front output shaft and drive clutch hub.

SST 09316-20011, 09316-60010 (09316-00010, 09316-00040, 09316-00070)

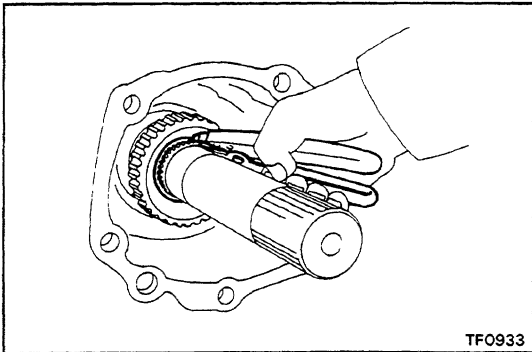

(b) Using snap ring pliers, install the snap ring.