

## A line drawing of a vehicle's center console. The console features a gear shift lever on the left, a handbrake in the center, and a parking brake on the right. A label 'Ignition Switch' with a leader line points to a small, cylindrical switch located on the left side of the console, near the gear shift lever.

Ignition Switch and Key  
Unlock Warning Switch

Battery

ACC 7  
IG1 6  
ST1 10  
IG2 4  
ST2 2

9 AM1  
3 AM2  
1  
5

\*: From Door Lock Control Relay and Seat Belt Warning Relay

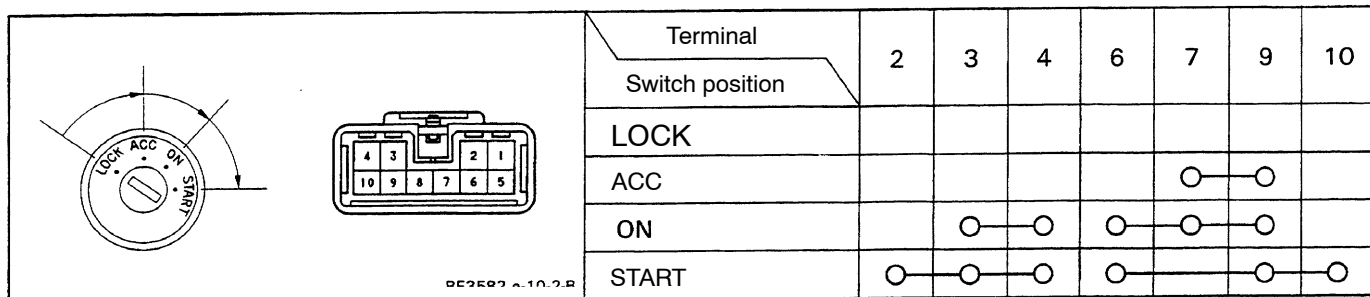
Refer to BE-10

Ignition Switch

4 3 2 1  
10 9 8 7 6 5

The POWER SOURCE CIRCUIT has been simplified. For– full details, see page [BE-10](#).

**(Ignition Switch/Continuity)**

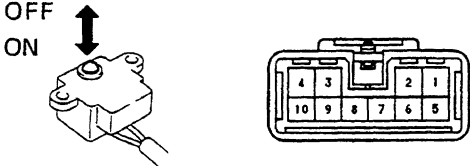
 
 


If continuity is not as specified, replace the switch.

# Key Confine Prevention System

## 1. INSPECT SWITCHES

(Key Unlock Warning Switch /Continuity)

|                                                                                   |                               |                                                                                     |                                                                                     |
|-----------------------------------------------------------------------------------|-------------------------------|-------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------|
|  | Terminal                      | 1                                                                                   | 5                                                                                   |
|                                                                                   | Switch position               |                                                                                     |                                                                                     |
|                                                                                   | OFF<br>(Ignition Key removed) |                                                                                     |                                                                                     |
|                                                                                   | ON<br>(Ignition Key set)      |  |  |

### (Door Courtesy Switch /Continuity)

See Step 2 on page [BE-41](#).

If continuity is not as specified, replace the switch.

## 2. INSPECT RELAY

See seat belt warning relay on page [BE-41](#).