




Circuit Opening Relay

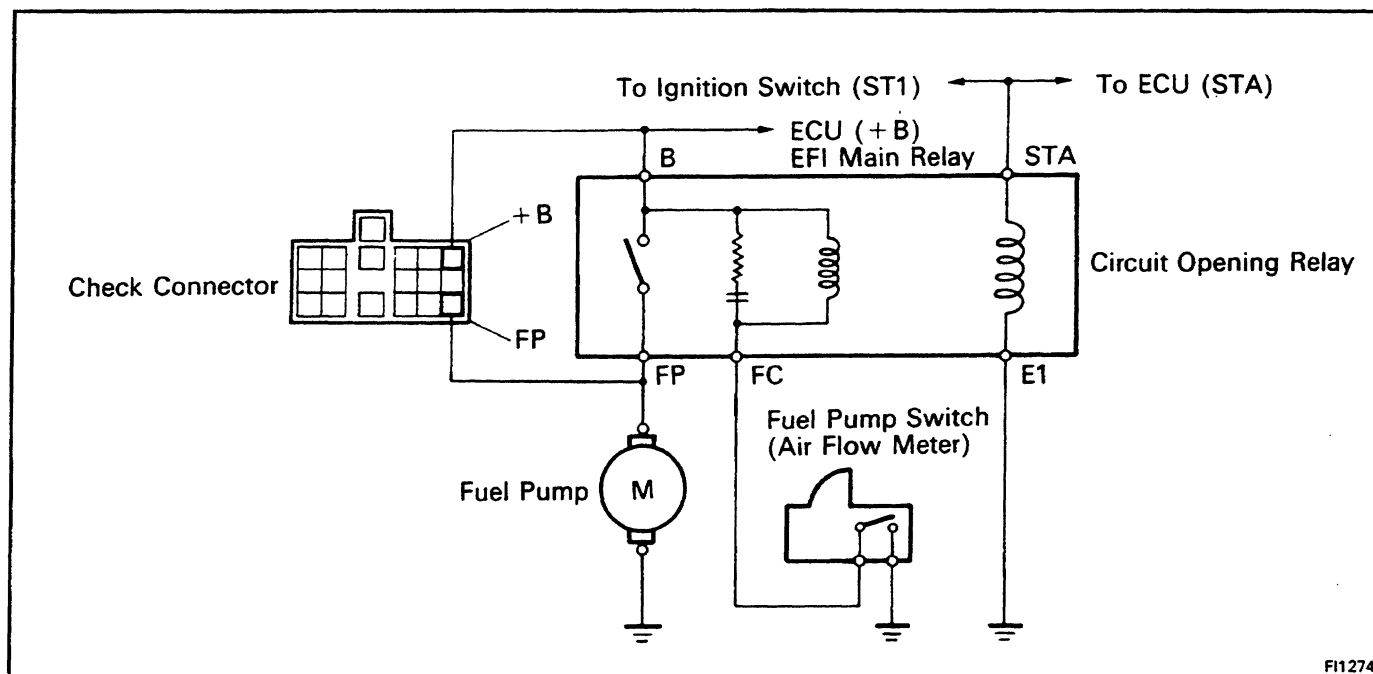


FI1274

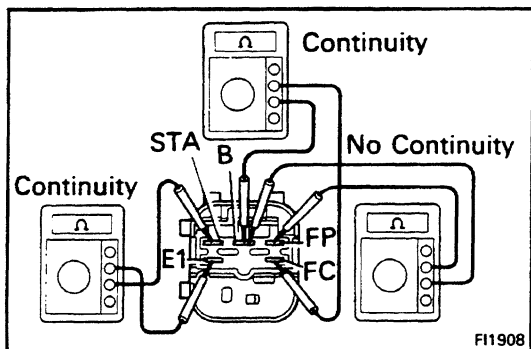

FI1908

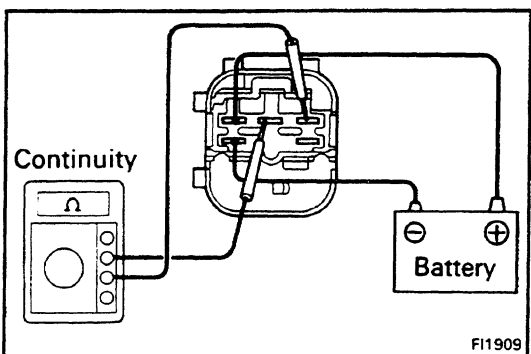

FI1909

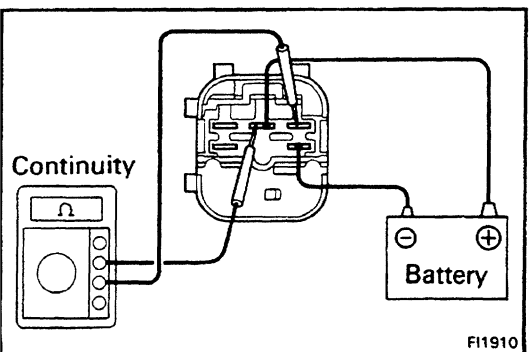

FI1910

INSPECTION OF CIRCUIT OPENING RELAY

1. INSPECT RELAY CONTINUITY

- Using an ohmmeter, check that there is continuity between terminals STA and E1.
- Check that there is continuity between terminals B and FC.
- Check that there is no continuity between terminals B and FP.

If continuity is not as specified, replace the relay.

2. INSPECT RELAY OPERATION

- Apply battery voltage across terminals STA and E1.
- Using an ohmmeter, check that there is continuity between terminals B and FP.

- Apply battery voltage across terminals B and FC.
- Check that there is continuity between terminals B and FP.

If operation is not as specified, replace the relay.