

Fuel Tank Breather Tube

35 (30 in.-lb, 3.4)

Fuel Pump w/ Sender Gauge

◆ Gasket

◆ Gasket

Fuel Cut Off Valve

15 (13 in.-lb, 1.5)

◆ Gasket

Hose

Fuel Inlet Hose

35 (30 in.-lb, 3.4)

Fuel Tank Filler Pipe

Fuel Tank Cap

115 (8, 11)

Fuel Tank Inlet Pipe

Fuel Tank

Fuel Tank Cushion (No. 3)

(No. 4)

(No. 2)

(No. 4)

(No. 1)

Moulding

◆ Gasket

Drain Plug

65 (56 in.-lb, 6.4)

No. 1 Fuel Tank Protector

No. 2 Fuel Tank Protector

Fuel Tank Band

50 (43 in.-lb, 4.9)

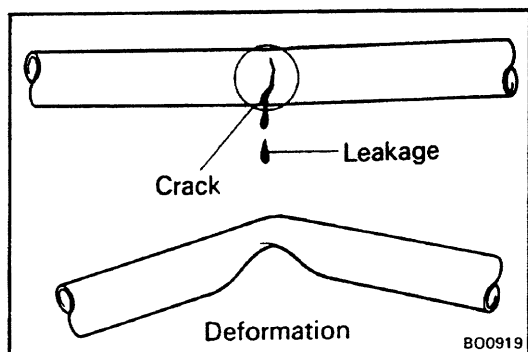
400 (29, 39)

kg-cm (ft-lb, N.m) : Specified torque

◆ Non-reusable part

**PRECAUTIONS**

1. Always use new gaskets when replacing the fuel tank or component parts.
2. Apply the proper torque to all parts tightened.

**INSPECT FUEL LINES AND CONNECTIONS**

- (a) Check the fuel lines for cracks or leakage, and all connections for deformation.
  - (b) Check the fuel tank vapor vent system hoses and connections for looseness, kinks or damage.
  - (c) Check the fuel tank for deformation, cracks, fuel leakage or tank band looseness.
  - (d) Check the filler neck for damage or fuel leakage.
  - (e) Hose and tube connections are as shown in the illustration.
- If a problem is found, repair or replace the parts as necessary.

