

PRECAUTIONS

1. Before working on the Fuel System, disconnect the cable from the negative (-) terminal of the battery.
HINT: Any diagnostic code retained by the computer will be erased when the battery terminal is removed.
Therefore, if necessary, read the diagnosis before removing the battery terminal.
2. Do not smoke or work open flame when working the Fuel System.
3. Keep gasoline off rubber or leather parts.

INSPECTION PRECAUTIONS


MAINTENANCE PRECAUTIONS

1. CHECK CORRECT ENGINE TUNE-UP


(See page [EM-8](#))

2. PRECAUTIONS WHEN CONNECTING GAUGE

- (a) Use the battery as the power source for the timing light, tachometer, etc.
- (b) Connect the test probe of a tachometer to the terminal IG 6 of the check connector.

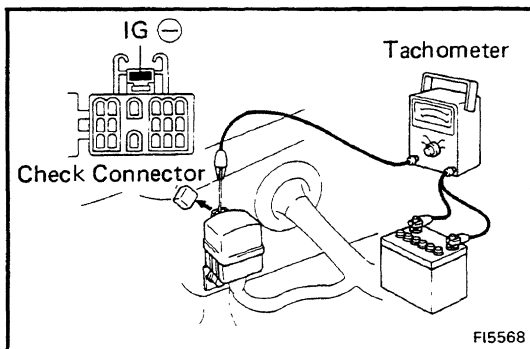

FI5568

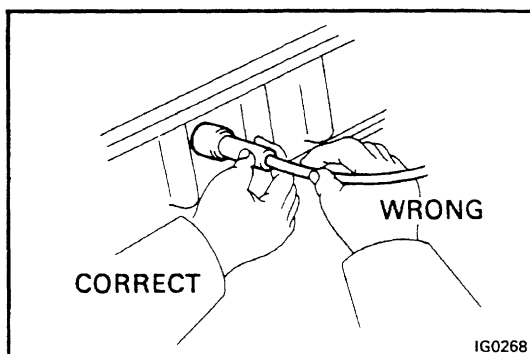


IG0268

3. IN EVENT OF ENGINE MISFIRE FOLLOWING PRECAUTIONS SHOULD BE TAKEN

- (a) Check proper connection of battery terminals, etc.
- (b) Handle high-tension cords carefully.
- (c) After repair work, check that the ignition coil terminals and all other ignition system lines are reconnected securely.
- (d) When cleaning the engine compartment, be especially careful to protect the electrical system from water.

4. PRECAUTIONS WHEN HANDLING OXYGEN SENSORS

- (a) Do not allow oxygen sensor to drop or hit against an object.
- (b) Do not allow the sensor to come into contact with water.

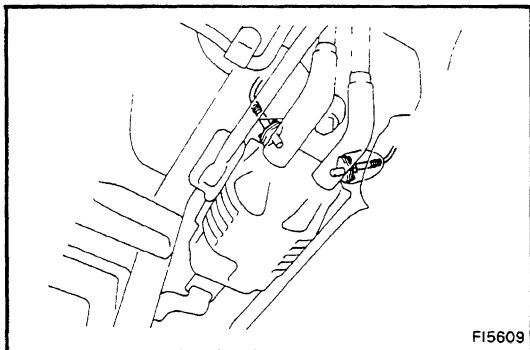

F15609