


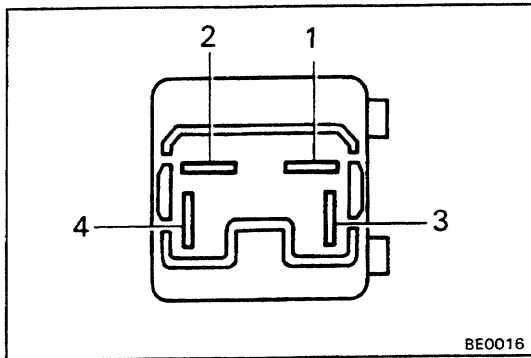


CHARGE LIGHT RELAY

INSPECTION OF CHARGE LIGHT RELAY

LOCATION: In the engine room relay block.

1. INSPECT RELAY CONTINUITY


- (a) Using an ohmmeter, check that there is no continuity between terminals 1 and 2.

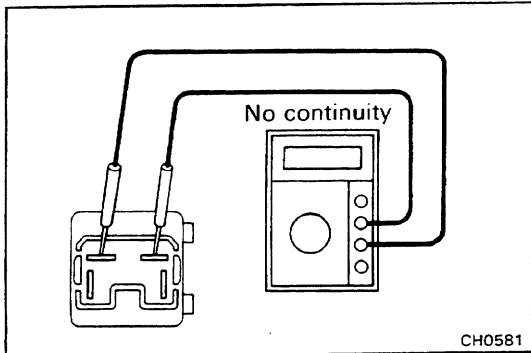

- (b) Connect the one test probe to terminal 3 and the other to terminal 4.

- (c) Reverse the polarity of test probes, and repeat step (b).

- (d) Check that one shows continuity and other shows no continuity. If continuity is not as specified, replace the relay.

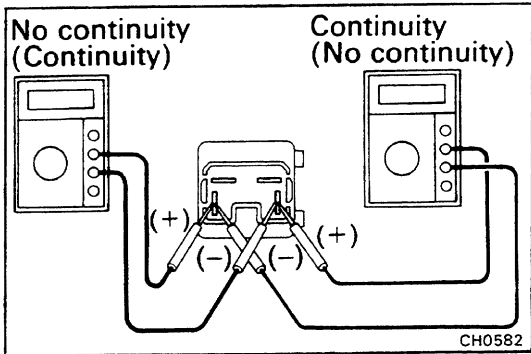

2. INSPECT RELAY OPERATION

- (a) Connect a positive (+) lead from the battery to terminal 3.
- (b) Connect a negative (-) lead from the battery to terminal 4.
- (c) Using an ohmmeter, check for continuity between terminals 1 and 2.

If operation is not as specified, replace the relay.

