


STEERING COLUMN


REMOVAL AND INSTALLATION OF STEERING COLUMN

Remove and install the parts as shown.

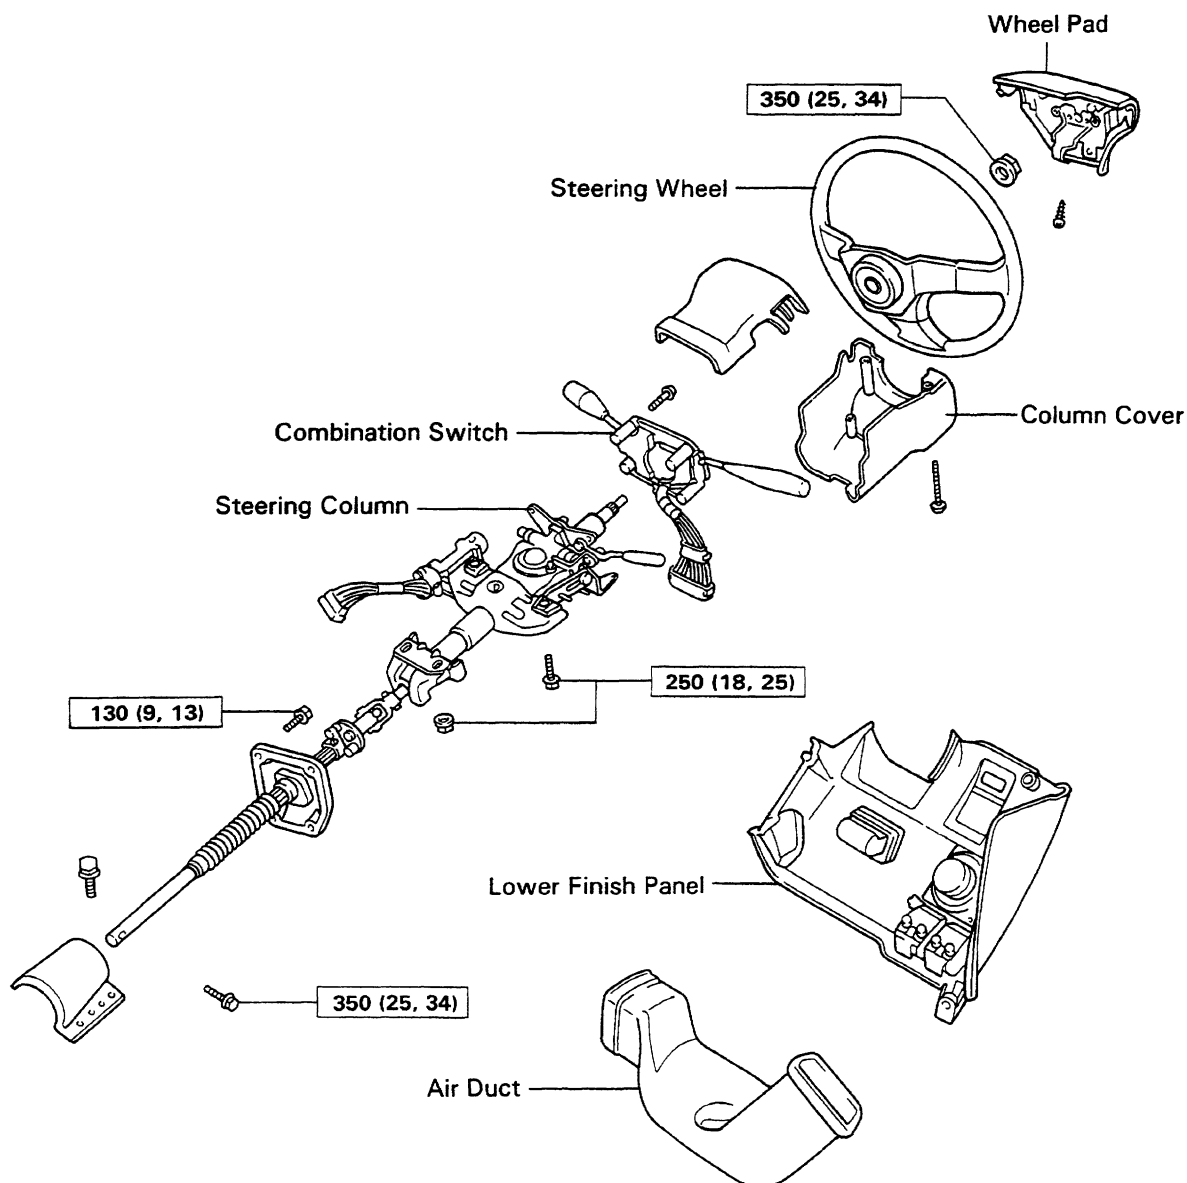

kg-cm (ft-lb, N·m) : Specified torque

SR3928

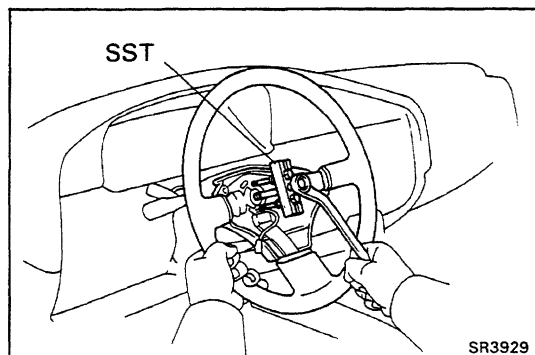


SR3929

(MAIN POINT OF REMOVAL)

1. REMOVE STEERING WHEEL

Using SST, remove the steering wheel.

SST 09609-20011

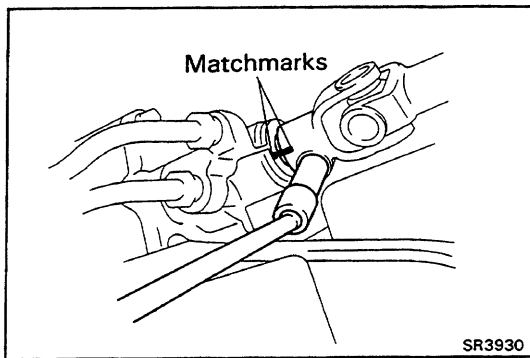

2. DISCONNECT MAIN SHAFT

- (a) Place matchmarks on the worm shaft and main shaft.
- (b) Disconnect the main shaft from the worm shaft.