
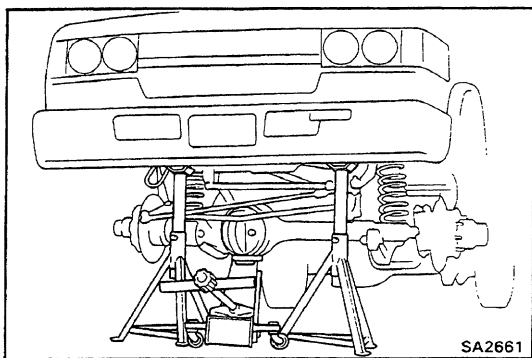



# FRONT SUSPENSION COMPONENTS

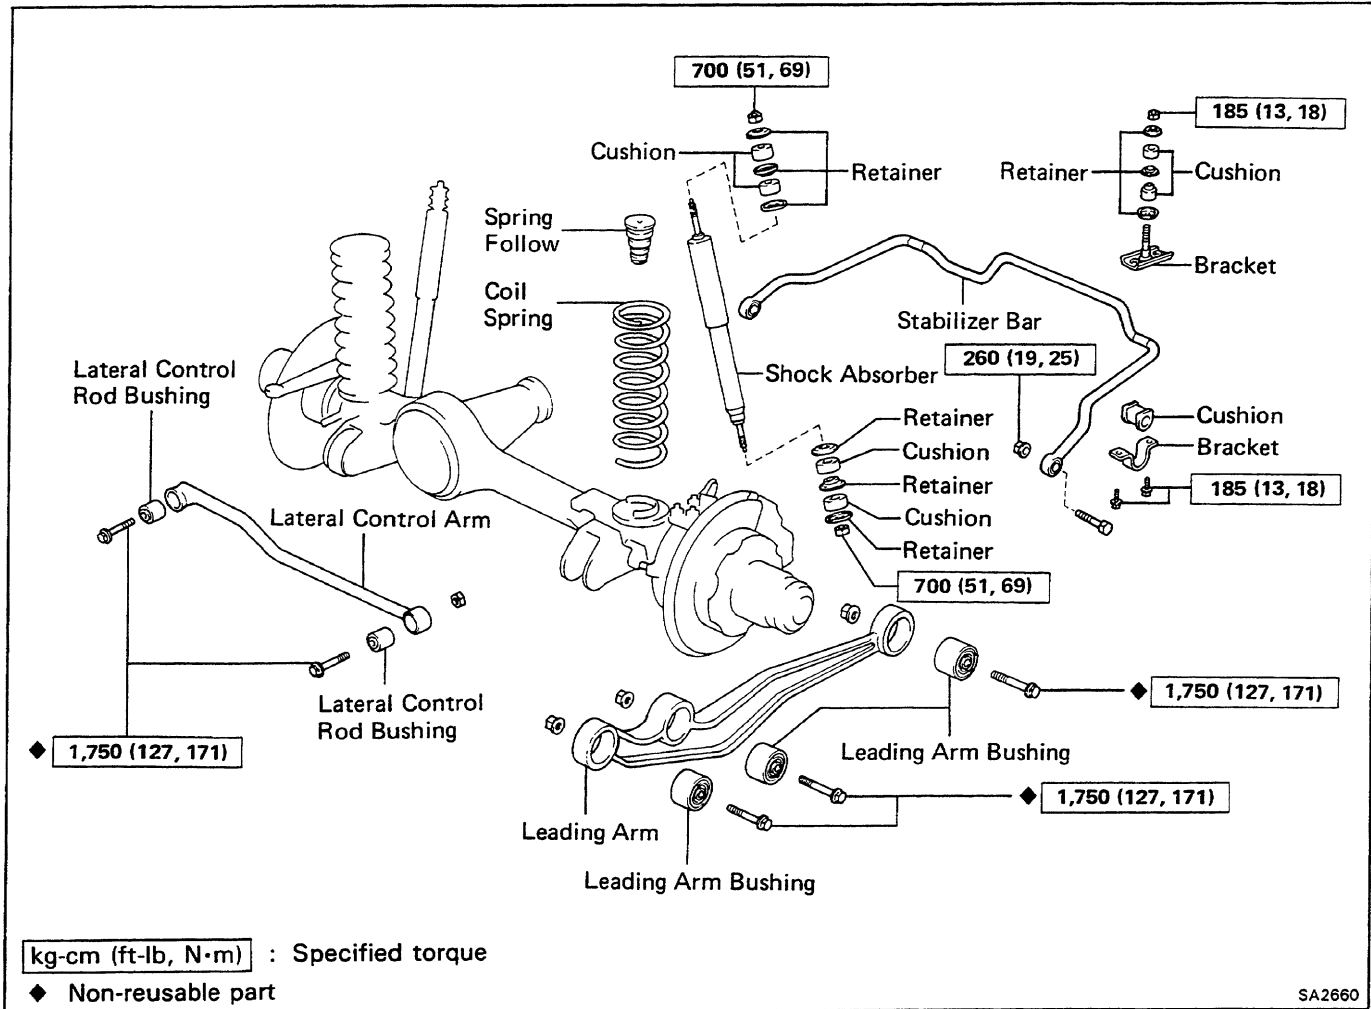

## Coil Spring and Shock Absorber REMOVAL OF COIL SPRING AND SHOCK ABSORBER

### 1. JACK UP AND SUPPORT BODY

Jack up and support the body on stands.

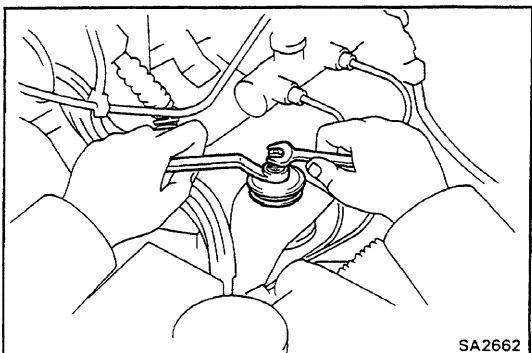

### 2. REMOVE FRONT SHOCK ABSORBER

- Jack up and support the axle housing.
- Hold the piston rod, and remove the upper mounting nut.