



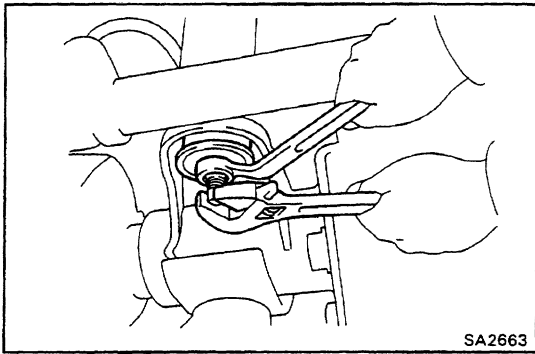

#### 4. INSTALL SHOCK ABSORBER


- (a) Install the retainers, cushions and the shock absorber.
- (b) Hold the shock absorber to the axle housing with the lower mounting nut.

**Torque: 700 kg-cm (51 ft-lb, 69 N-m)**

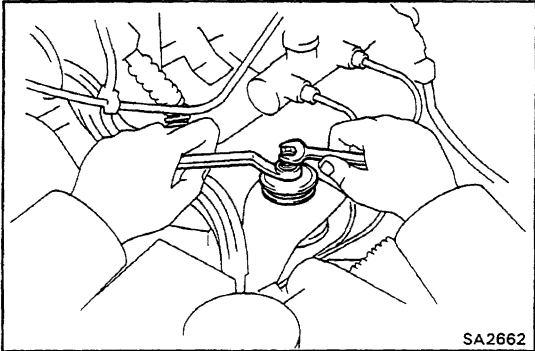

- (c) Install the cushion and the retainers.
- (d) Hold the piston rod to the body with the upper mounting nut.

**Torque: 700 kg-cm (51 ft-lb, 69 N-m)**

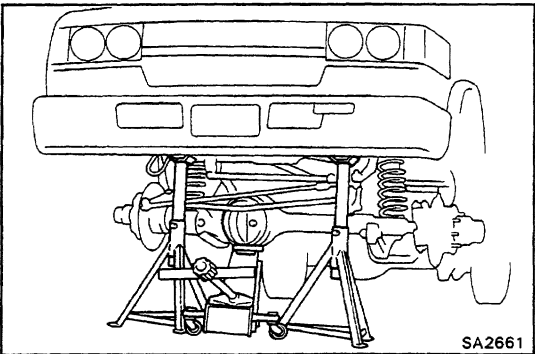


## Stabilizer Bar

### REMOVAL OF STABILIZER BAR


(See page [SA-47](#))

#### 1. JACK UP AND SUPPORT VEHICLE WITH FRAME

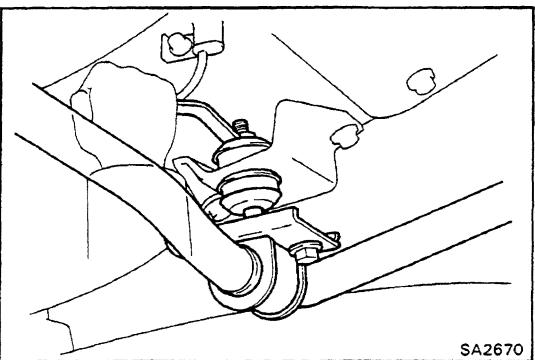


#### 2. REMOVE STABILIZER BAR


- (a) Remove the nut and disconnect the stabilizer bar with the bracket and cushion from the frame.

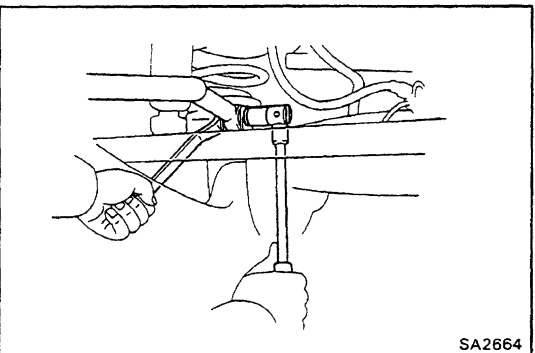

- (b) Remove the bolt and nut, and remove the stabilizer bar from the axle housing.

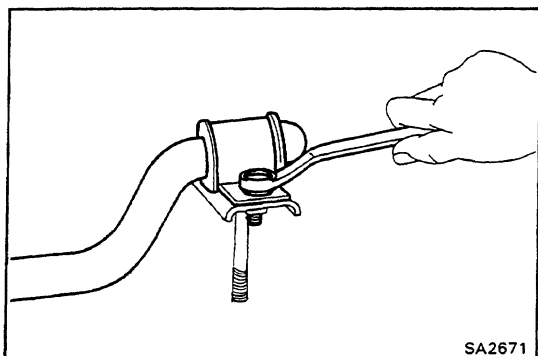

- (c) Remove the two bolts, bracket and cushion from the stabilizer bar.

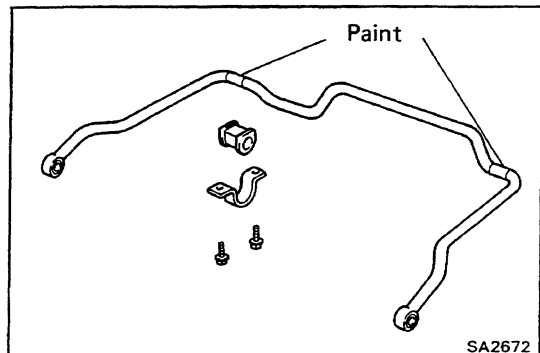


## INSTALLATION OF STABILIZER BAR


(See page [SA-47](#) )

### 1. INSTALL STABILIZER BAR


- (a) Install the cushions on the lines painted on the stabilizer bar and install the brackets onto cushions.

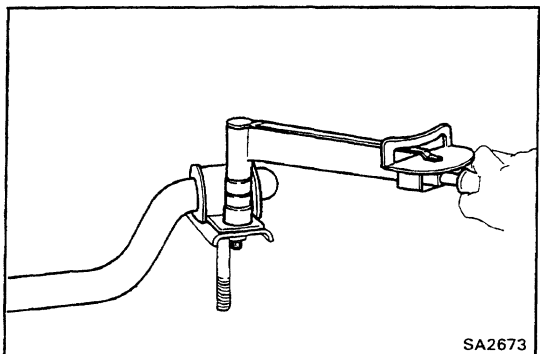


- (b) Install the two bolts and the bracket to stabilizer bar.  
**Torque: 185 kg-cm (13 ft-lb, 18 N-m)**

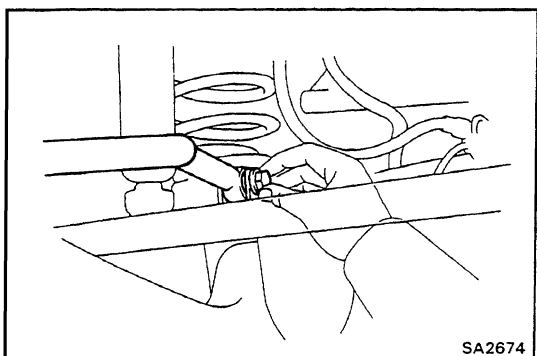

- (c) Install the stabilizer bar with bracket and cushion to the axle housing with the bolt and nut.

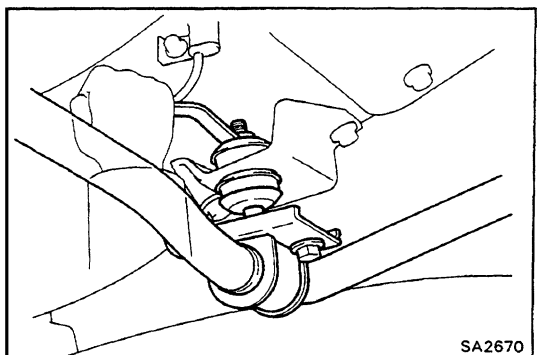


- (d) Connect the cushions, retainers and nut to the bracket to the frame.

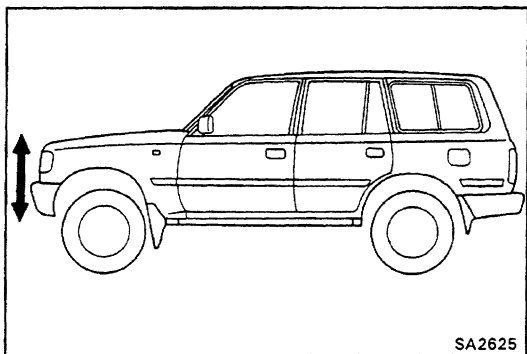

## 2. STABILIZE SUSPENSION


Bounce the vehicle up and down to stabilize the suspension.

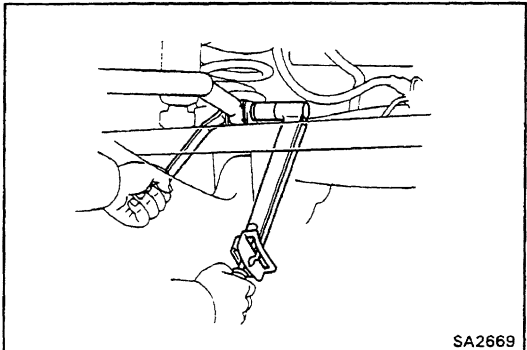

## 3. TORQUE STABILIZER MOUNTING BOLT AND NUT

(a) Torque the bolt and nut.

**Torque: 260 kg-cm (19 ft-lb, 25 N-m)**

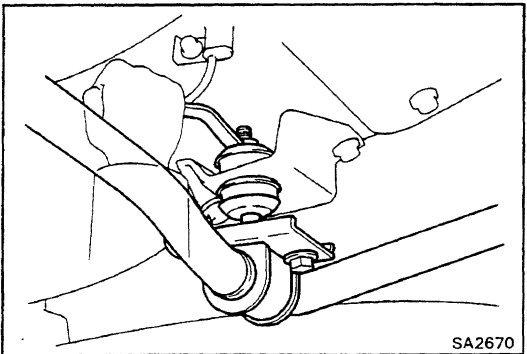

(b) Torque the nut.

**Torque: 185 kg-cm (13 ft-lb, 18 N-m)**