

9. IF EVAPORATOR WAS REPLACED, ADD COMPRESSOR OIL TO COMPRESSOR
Add 40 – 50 cc (1.4 – 1.7 fl. oz.)
Compressor oil: DENSO OIL 6,
SUNISO No. 5GS or equivalent
10. INSTALL CHARCOAL CANISTER WITH BRACKET
11. CONNECT NEGATIVE CABLE TO BATTERY
12. EVACUATE AIR FROM AIR CONDITIONING SYSTEM
13. CHARGE AIR CONDITIONING SYSTEM WITH REFRIGERANT AND CHECK FOR GAS LEAKAGE
Specified amount: 900 ± 50 g (31.74 ± 1.76 oz)

EVAPORATOR

REMOVAL OF EVAPORATOR

See Disassembly of Cooling Unit on page [AC-27](#).

INSPECTION OF EVAPORATOR

1. INSPECT EVAPORATOR FINS FOR BLOCKAGE
If the fins are clogged, clean them with compressed air.
NOTICE: Never use water to clean the evaporator.
2. INSPECT FITTINGS FOR CRACKS OR SCRATCHES
Repair as necessary.

INSTALLATION OF EVAPORATOR

See Assembly of Cooling Unit on page [AC-28](#).