




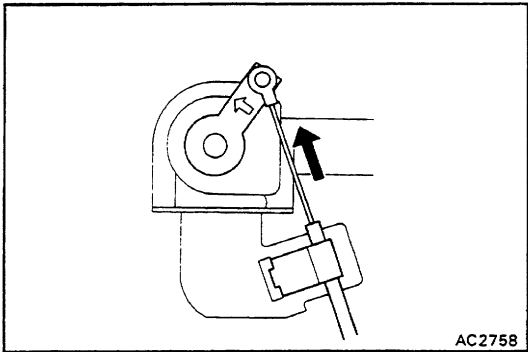

- 3. ADJUST WATER VALVE CONTROL CABLE**  
Set the water valve and the control lever to "COOL" position, install the control cable and lock the clamp.

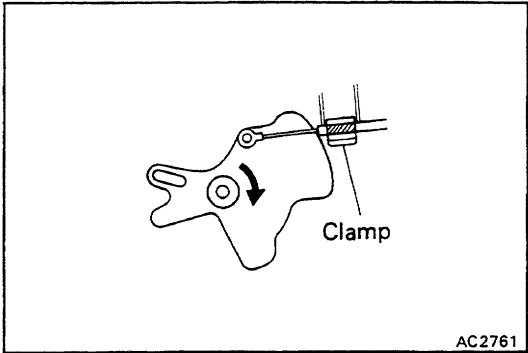

- 4. ADJUST MODE DAMPER CONTROL CABLE**  
(a) Set the mode damper and the control lever to "DEF" position.  
(b) Clamp the white section of the control cable and install the cable to damper control lever.

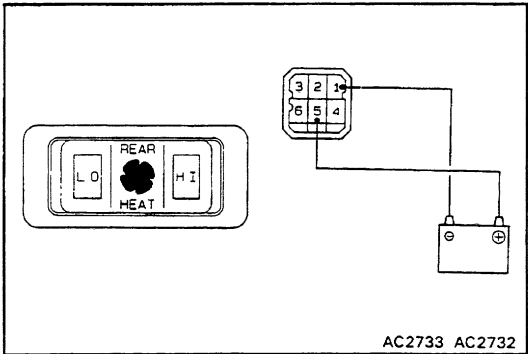

## REAR HEATER SWITCH INSPECTION OF SWITCH

- 1. INSPECT INDICATOR**  
(a) Connect the positive (+) lead from the battery to terminal 5 and the negative (-) lead to terminal 1.  
(b) Push each of the rear heater switch knob in and check that their indicators light up.

If indicator operation is not as specified, replace the switch.

**2. INSPECT SWITCH CONTINUITY**

| Terminal<br>Switch position | 1 | 2 | 4 | 5 | Illumination |   |
|-----------------------------|---|---|---|---|--------------|---|
|                             |   |   |   |   | 3            | 6 |
| HI                          | ○ | — | ○ |   |              |   |
| OFF                         |   |   |   |   |              |   |
| LO                          | ○ | ○ |   |   |              |   |

AC2733 S-6-2-B

If continuity is not as specified, replace the switch.