



J POWER SOURCE (Current Flow Chart)

The chart below shows the route by which current flows from the battery to each electrical source (Fusible Link, Circuit Breaker, Fuse, etc.) and other parts.

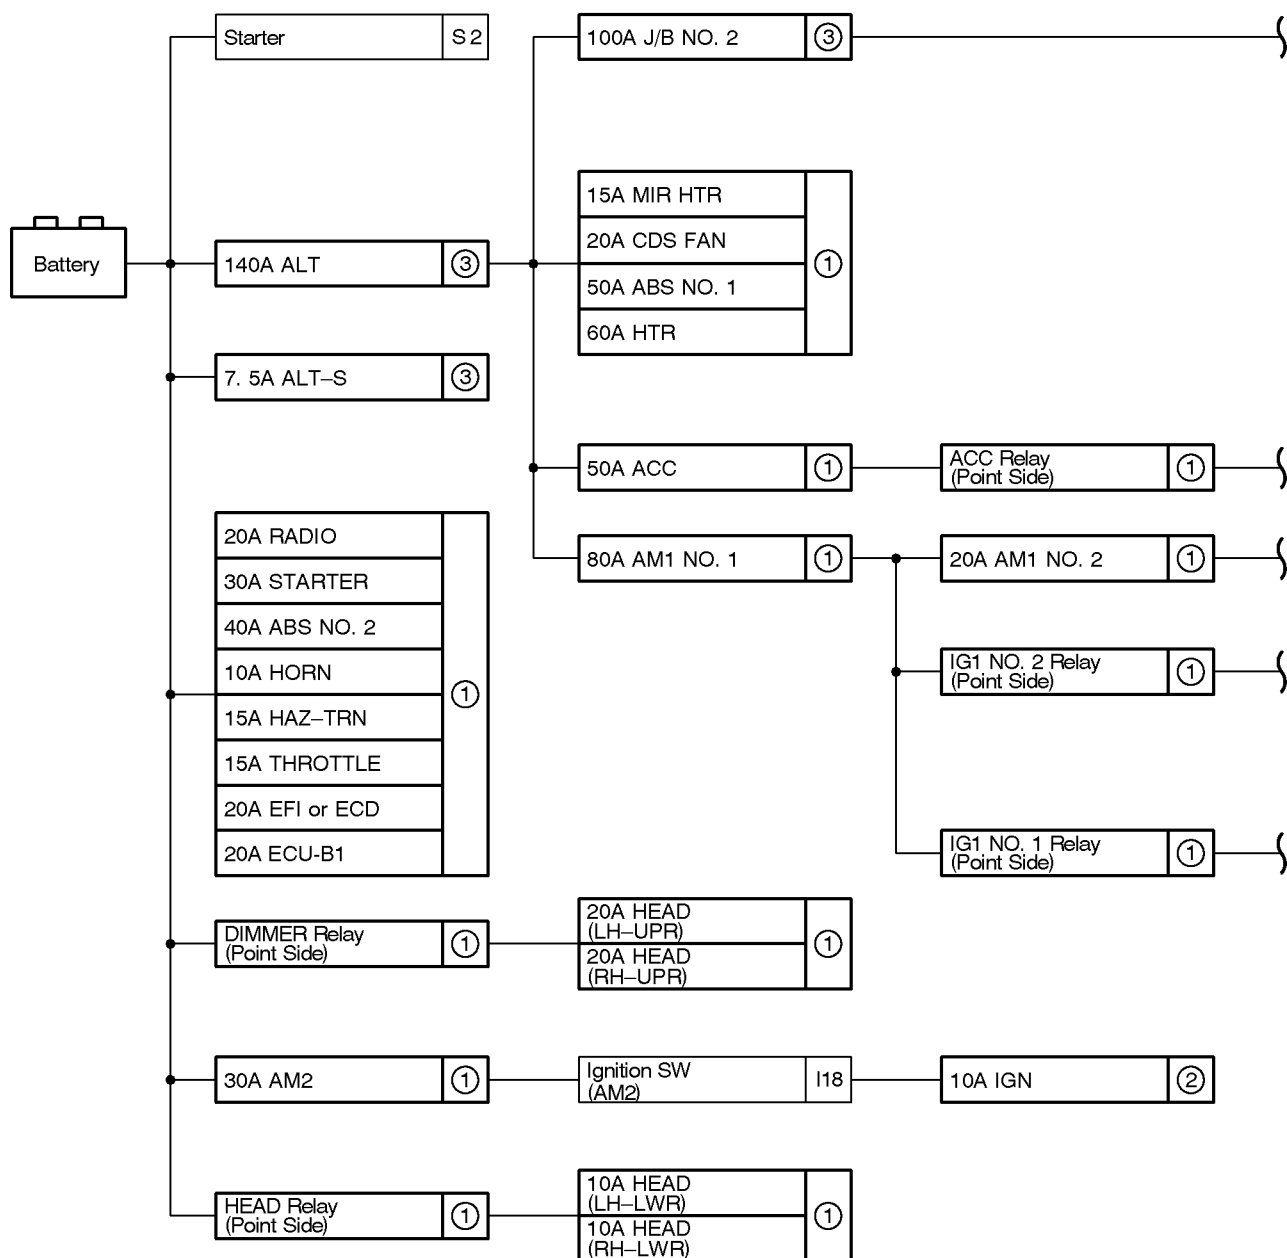

[LOCATION] ① : Engine Room J/B (See Page 22)

② : Cowl Side J/B LH (See Page 26)

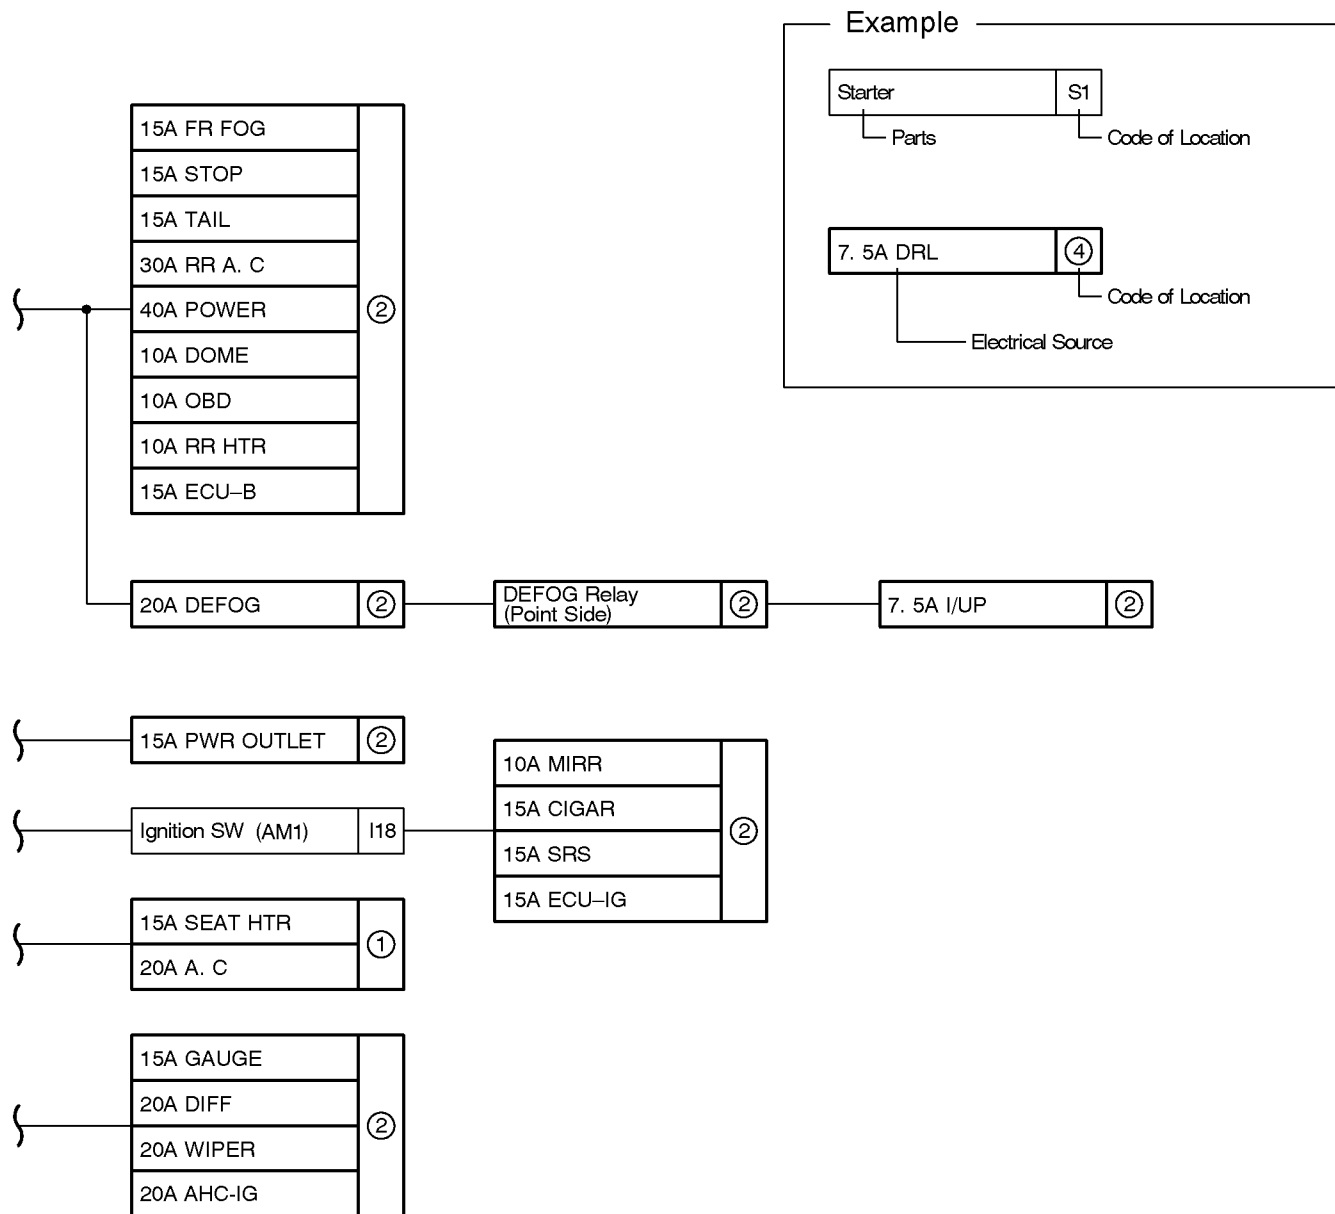

③ : Fusible Link Block (F 6 on See Page 36)

J POWER SOURCE (Current Flow Chart)

Engine Room J/B (See Page 22)

Fuse		System	Page
20A	ECU-B1	Automatic Light Control	118
		Combination Meter	242
		Condenser Fan and Front Air Conditioning	248
		Door Lock Control	194
		Interior Light	106
		Key Reminder and Seat Belt Warning	232
		Light Auto Turn Off	122
		Moon Roof	190
		Power Window	184
		Theft Deterrent	210
		Wireless Door Lock Control	200
10A	HEAD (LH-LWR)	Front Fog Light	92
		Headlight	86
10A	HEAD (RH-LWR)	Headlight	86
10A	HORN	Horn	140
		Theft Deterrent	210
15A	HAZ-TRN	Theft Deterrent	210
		Turn Signal and Hazard Warning Light	94
15A	MIR HTR	Rear Window Defogger and Mirror Heater	230
15A	SEAT HTR	Seat Heater	228
15A	THROTTLE	Cruise Control	150
		Electronically Controlled Transmission and A/T Indicator	142
		Engine Control and Engine Immobiliser System	76
20A	A.C	Condenser Fan and Front Air Conditioning	248
		Key Reminder and Seat Belt Warning	232
		Rear Air Conditioning	254
		Rear Heater (w/o Rear Air Conditioning)	240
20A	AM1 NO.2	Turn Signal and Hazard Warning Light	94
20A	CDS FAN	Condenser Fan and Front Air Conditioning	248
20A	EFI or ECD	Cruise Control	150
		Electronically Controlled Transmission and A/T Indicator	142
		Engine Control and Engine Immobiliser System	76
20A	HEAD (LH-UPR)	Headlight	86
20A	HEAD (RH-UPR)	Headlight	86
20A	RADIO	Auto Antenna	234
		Radio and Player	236
30A	AM2	Electronically Controlled Transmission and A/T Indicator	142
		Engine Control and Engine Immobiliser System	76
		Ignition	70
		Starting	68
30A	STARTER	Starting	68

* These are the page numbers of the first page on which the related system is shown.

Fuse		System	Page
40A	ABS NO.2	ABS	164
		VSC	156
50A	ABS NO.1	ABS	164
		VSC	156
60A	HTR	Condenser Fan and Front Air Conditioning	248
80A	AM1 NO.1	Rear Window Defogger and Mirror Heater	230
		Turn Signal and Hazard Warning Light	94

Cowl Side J/B LH (See Page 26)

Fuse		System	Page
7.5A	I/UP	Rear Window Defogger and Mirror Heater	230
10A	DOME	Interior Light	106
10A	IGN	ABS	164
		Charging	74
		Combination Meter	242
		Cruise Control	150
		Electronically Controlled Transmission and A/T Indicator	142
		Engine Control and Engine Immobiliser System	76
		SRS	169
		VSC	156
10A	MIRR	Remote Control Mirror	224
10A	OBD	Cruise Control	150
		Engine Control and Engine Immobiliser System	76
10A	RR HTR	Rear Air Conditioning	254
		Rear Heater (w/o Rear Air Conditioning)	240
15A	CIGAR	Auto Antenna	234
		Cigarette Lighter	136
		Clock	134
		Condenser Fan and Front Air Conditioning	248
		Radio and Player	236
		Rear Air Conditioning	254
		Shift Lock	174
15A	ECU-B	Clock	134
		Combination Meter	242
		Condenser Fan and Front Air Conditioning	248
		Headlight	86
		Power Tilt and Power Telescopic	220
		Rear Air Conditioning	254
		SRS	169
		Theft Deterrent	210
15A	ECU-IG	ABS	164
		Auto Antenna	234
		Automatic Light Control	118
		Door Lock Control	194

* These are the page numbers of the first page on which the related system is shown.

J POWER SOURCE (Current Flow Chart)

Fuse		System	Page
15A	ECU-IG	Interior Light	106
		Light Auto Turn Off	122
		Moon Roof	190
		Power Tilt and Power Telescopic	220
		Power Window	184
		Shift Lock	174
		Theft Deterrent	210
		VSC	156
		Wireless Door Lock Control	200
15A	FR FOG	Front Fog Light	92
15A	GAUGE	ABS	164
		Back-Up Light	116
		Center Differential Lock	176
		Charging	74
		Combination Meter	242
		Cruise Control	150
		Electronically Controlled Transmission and A/T Indicator	142
		Engine Control and Engine Immobiliser System	76
		Headlight	86
		Key Reminder and Seat Belt Warning	232
		Power Rear Quarter Window	226
		Rear Differential Lock	180
		Rear Window Defogger and Mirror Heater	230
		VSC	156
		Wireless Door Lock Control	200
15A	PWR OUTLET	Power Outlet	138
15A	SRS	SRS	169
15A	STOP	ABS	164
		Cruise Control	150
		Electronically Controlled Transmission and A/T Indicator	142
		Engine Control and Engine Immobiliser System	76
		Shift Lock	174
		Stop Light	114
		VSC	156
15A	TAIL	Automatic Light Control	118
		Illumination	102
		Light Auto Turn Off	122
		Taillight	98
		Theft Deterrent	210
		Wireless Door Lock Control	200
20A	AHC-IG	VSC	156
20A	DEFOG	Rear Window Defogger and Mirror Heater	230
20A	DIFF	Center Differential Lock	176
		Rear Differential Lock	180

* These are the page numbers of the first page on which the related system is shown.

Fuse		System	Page
20A	WIPER	Front Wiper and Washer	126
		Rear Wiper and Washer	130
30A	RR A.C	Rear Air Conditioning	254
40A	POWER	Door Lock Control	194
		Moon Roof	190
		Power Seat	216
		Power Tilt and Power Telescopic	220
		Power Window	184
		Wireless Door Lock Control	200

Fusible Link Block (F6 on See Page 36)

Fuse		System	Page
7.5A	ALT-S	Charging	74
100A	J/B NO.2	Automatic Light Control	118
		Light Auto Turn Off	122
140A	ALT	Automatic Light Control	118
		Charging	74
		Light Auto Turn Off	122
		Turn Signal and Hazard Warning Light	94

* These are the page numbers of the first page on which the related system is shown.