


Engine Control (1KD-FTV) , Dynamic Radar Cruise Control or Cruise Control (1KD-FTV) , ECT and A/T Indicator (1KD-FTV)

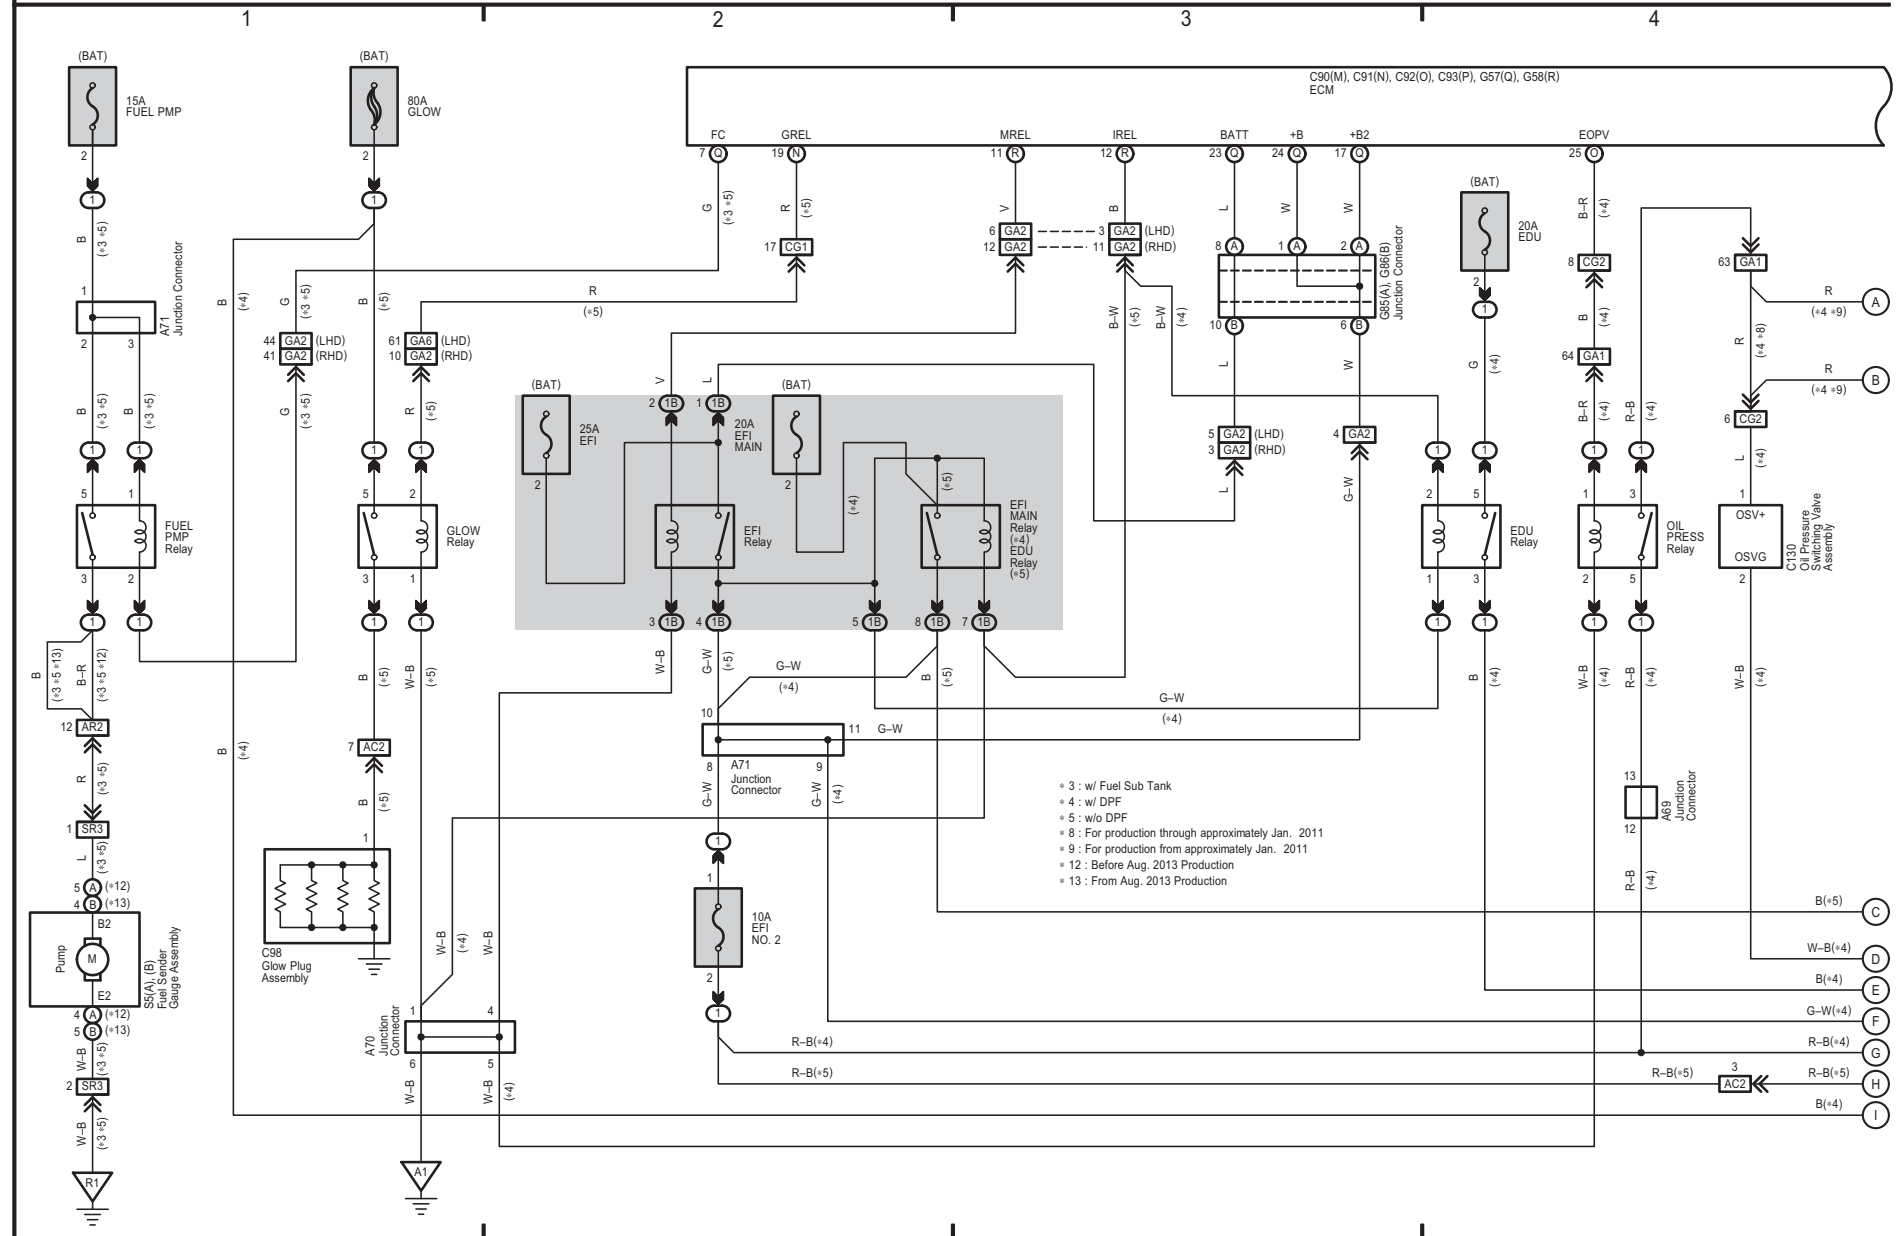

LAND CRUISER / LAND CRUISER PRADO (EM24NOE)



Wiring diagram for the 2008 Ford F-150 3.5L V6 engine, showing connections for the Glow Plug Controller, Glow Plug Assembly, Injector Driver, and Fuel Injectors.

 
Legend:

- W-B(+4)
- B(+4)
- G-W(+4)
- R-B(+4)
- B(+4)
- B(+5)


Legend:

- * 4 : w/ DPF
- * 5 : w/o DPF


16




Engine Control (1KD-FTV), Dynamic Radar Cruise Control or Cruise Control (1KD-FTV), ECT and A/T Indicator (1KD-FTV)

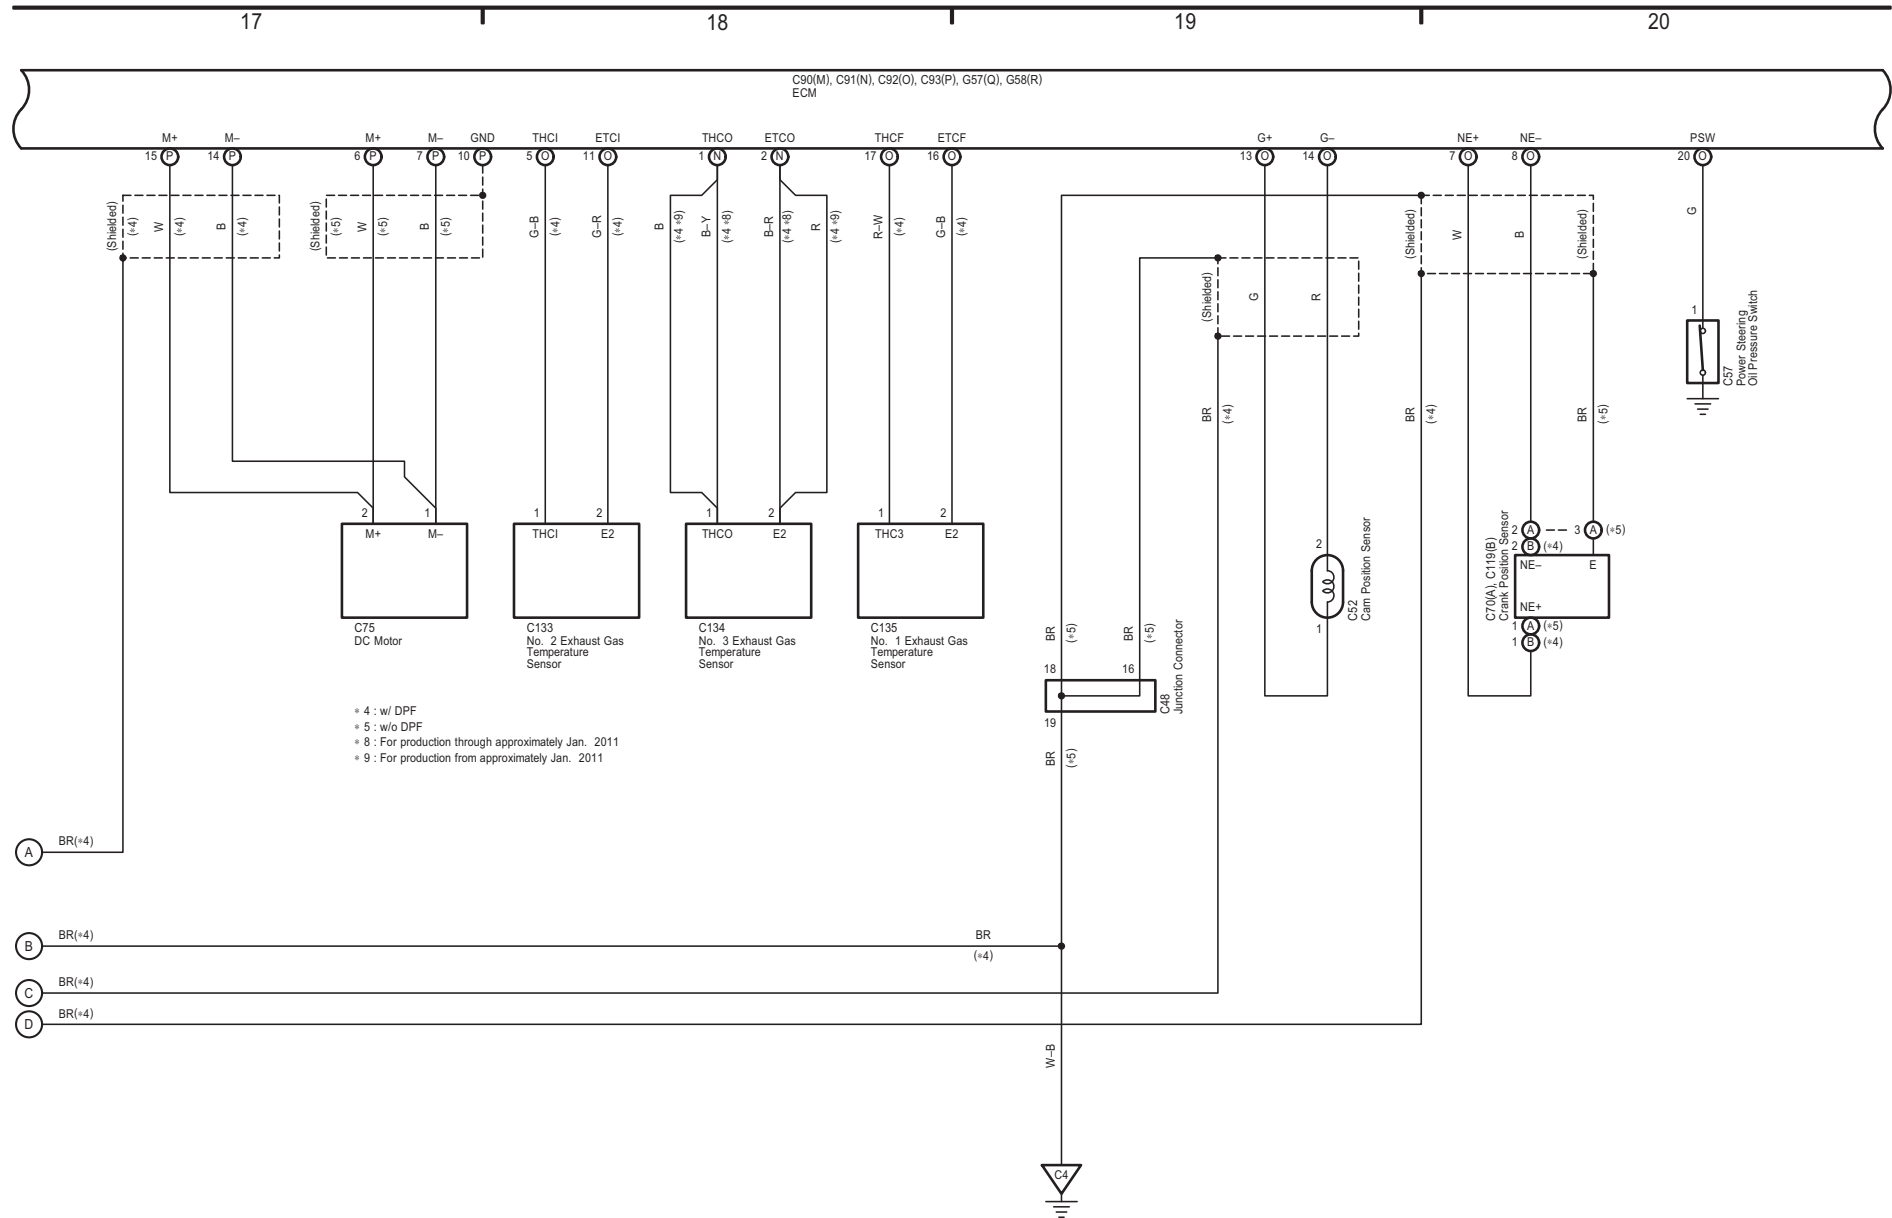


Engine Control (1KD-FTV) , Dynamic Radar Cruise Control or Cruise Control (1KD-FTV) , ECT and A/T Indicator (1KD-FTV)

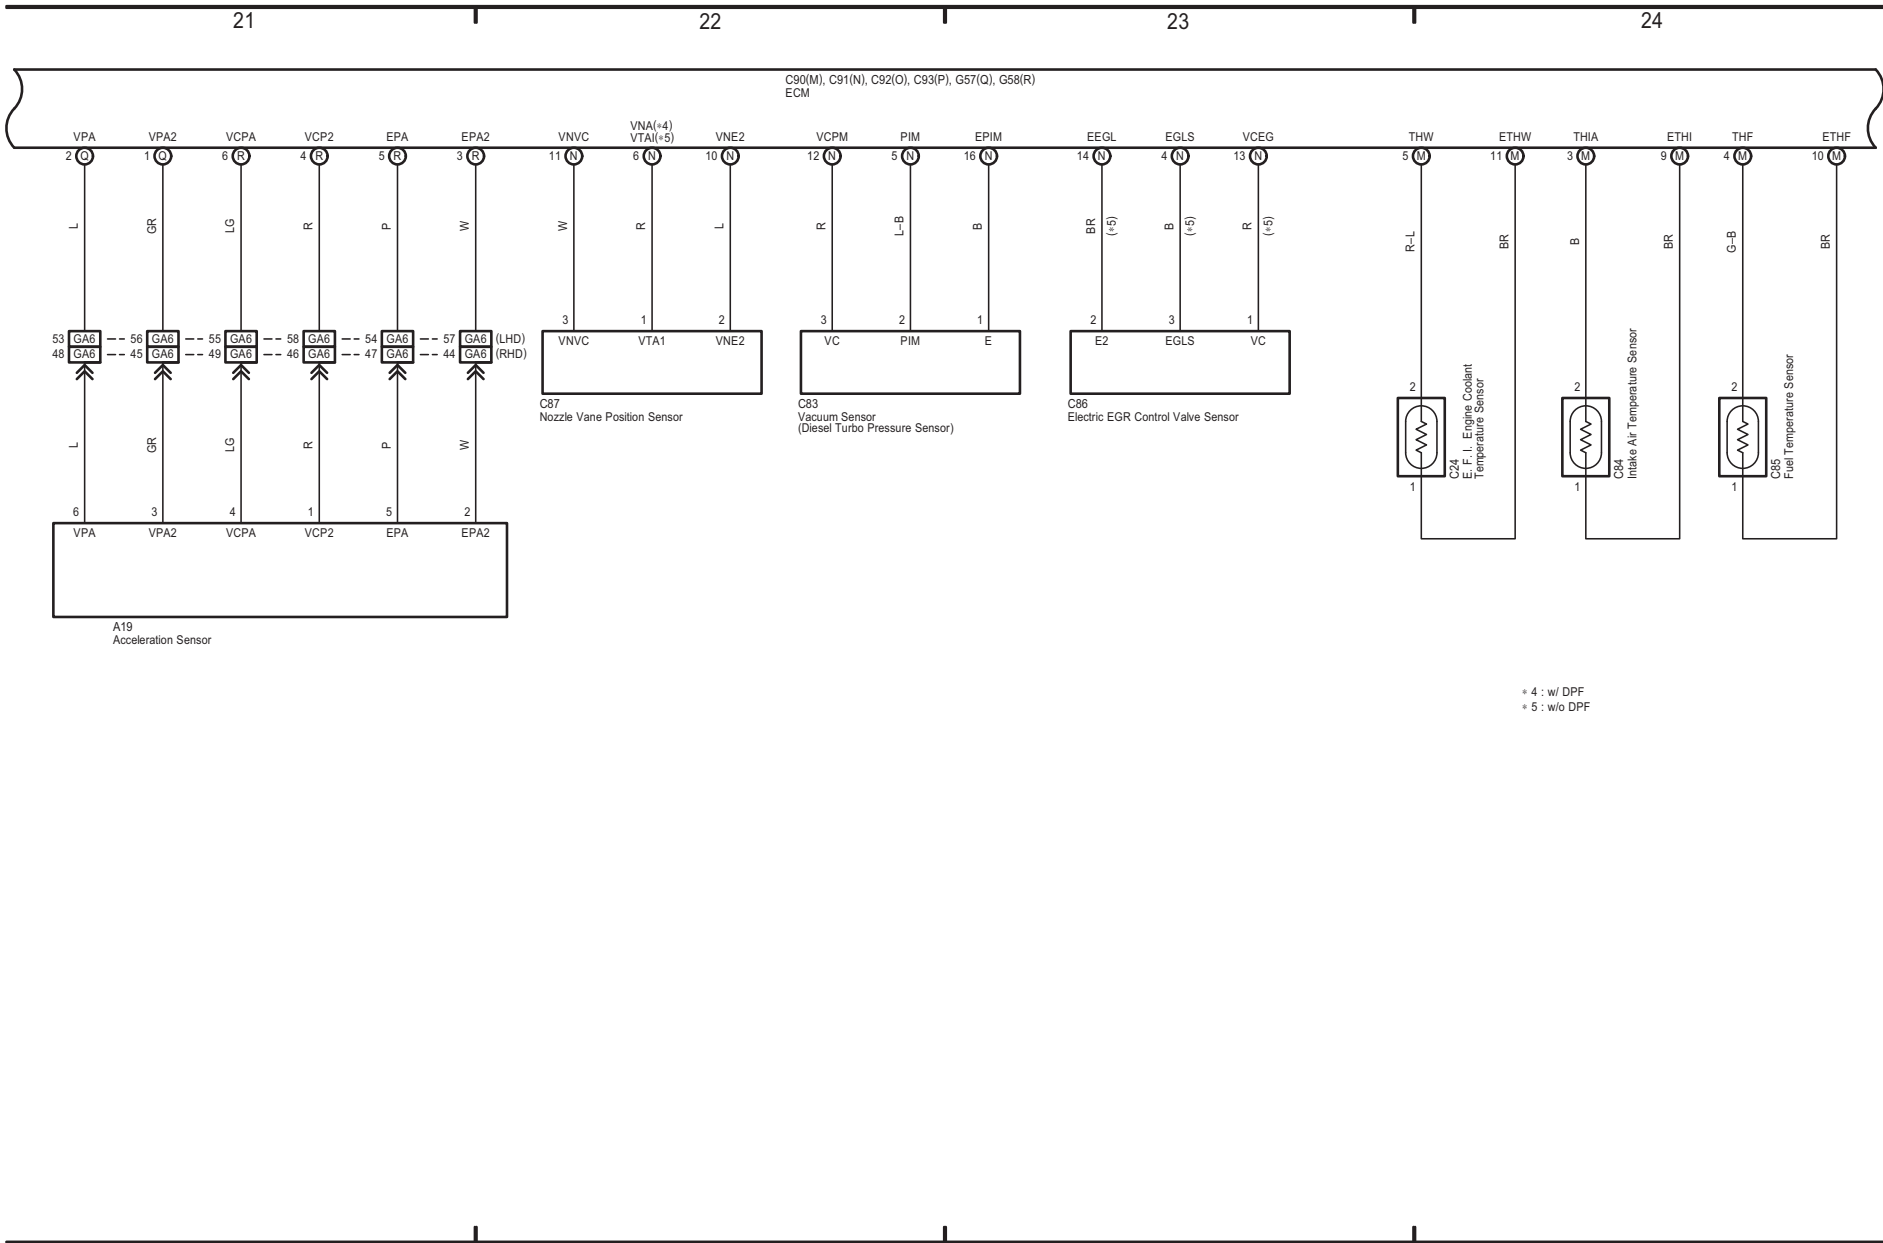

Engine Control (1KD-FTV) , Dynamic Radar Cruise Control or Cruise Control (1KD-FTV) , ECT and A/T Indicator (1KD-FTV)

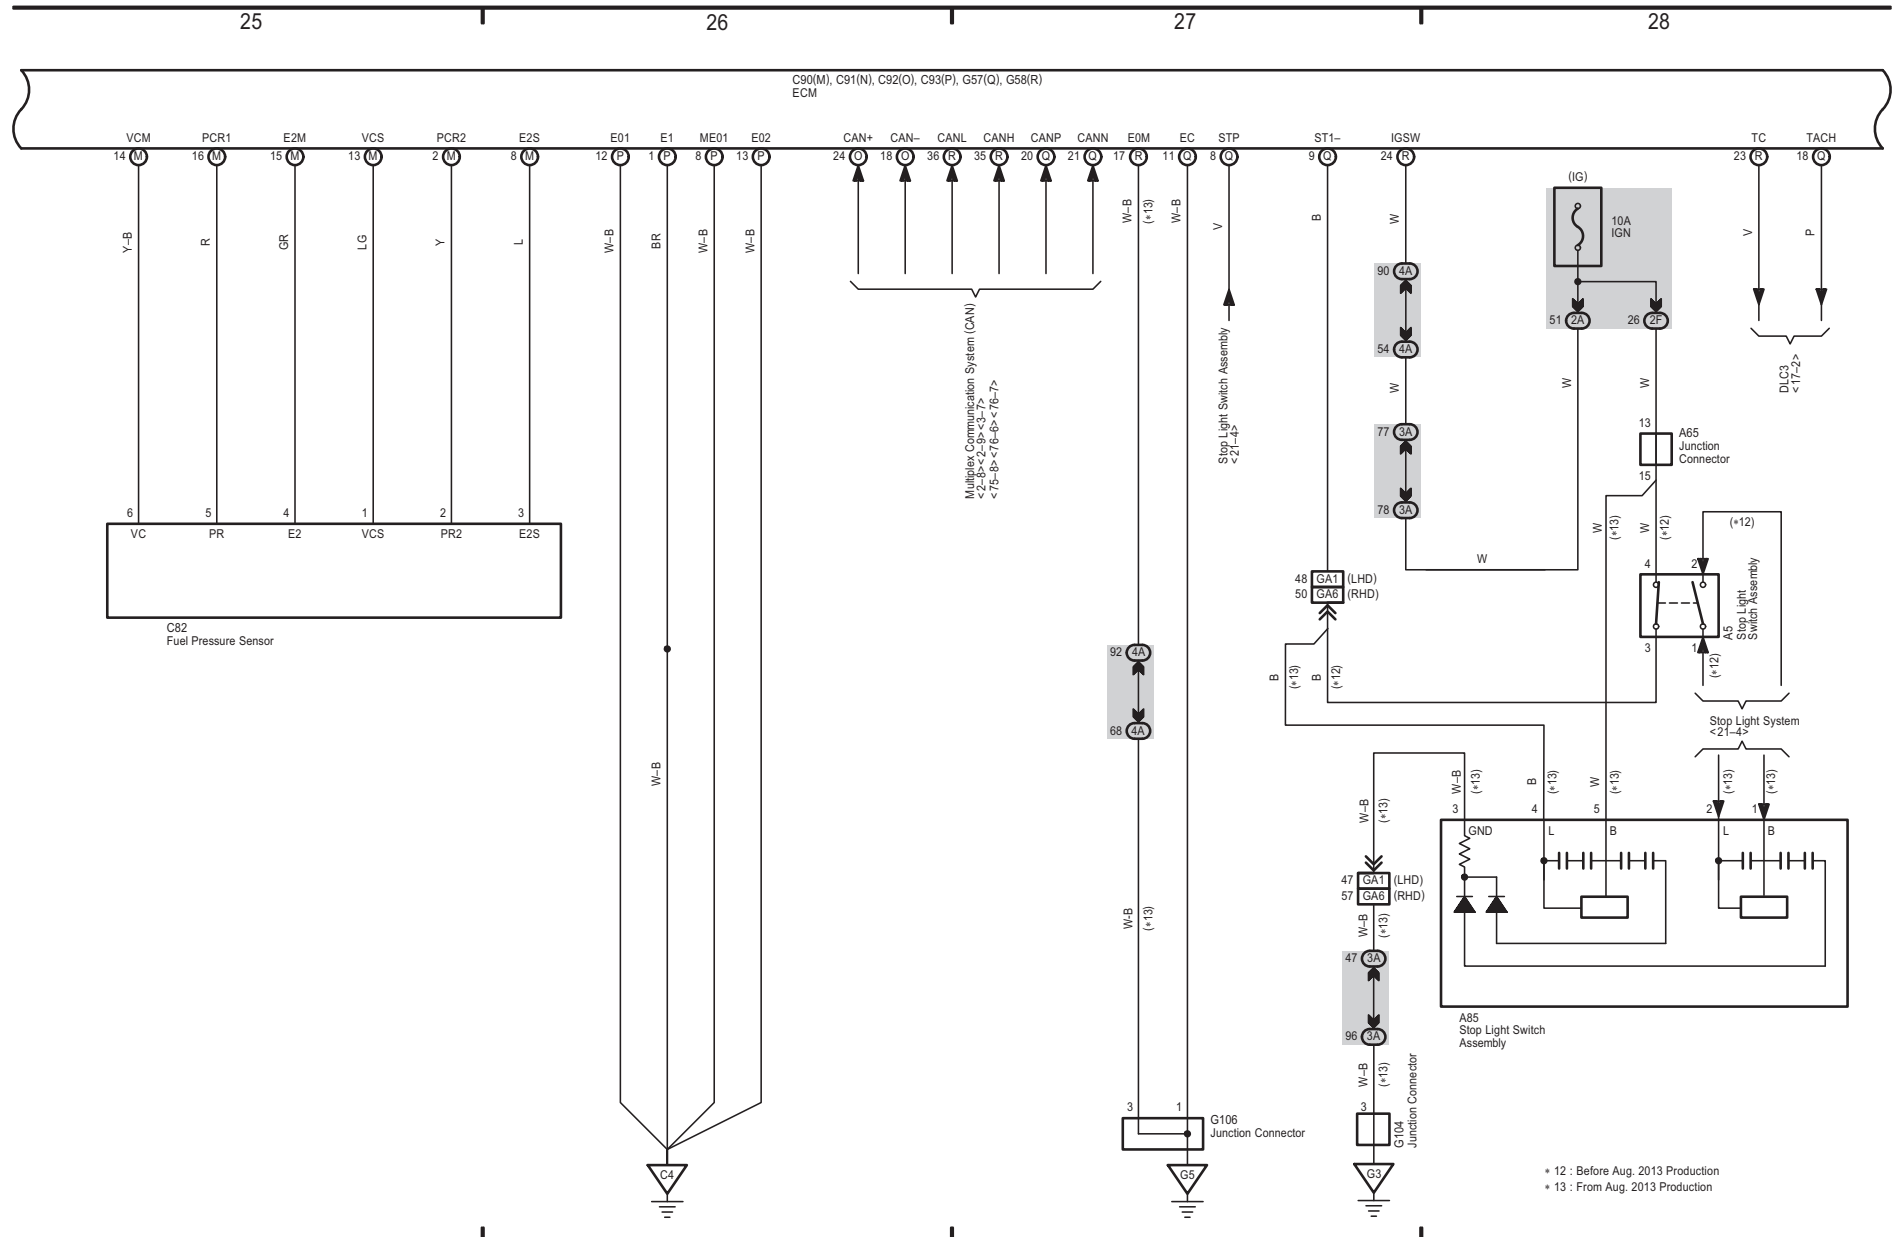


Engine Control (1KD-FTV) , Dynamic Radar Cruise Control or Cruise Control (1KD-FTV) , ECT and A/T Indicator (1KD-FTV)

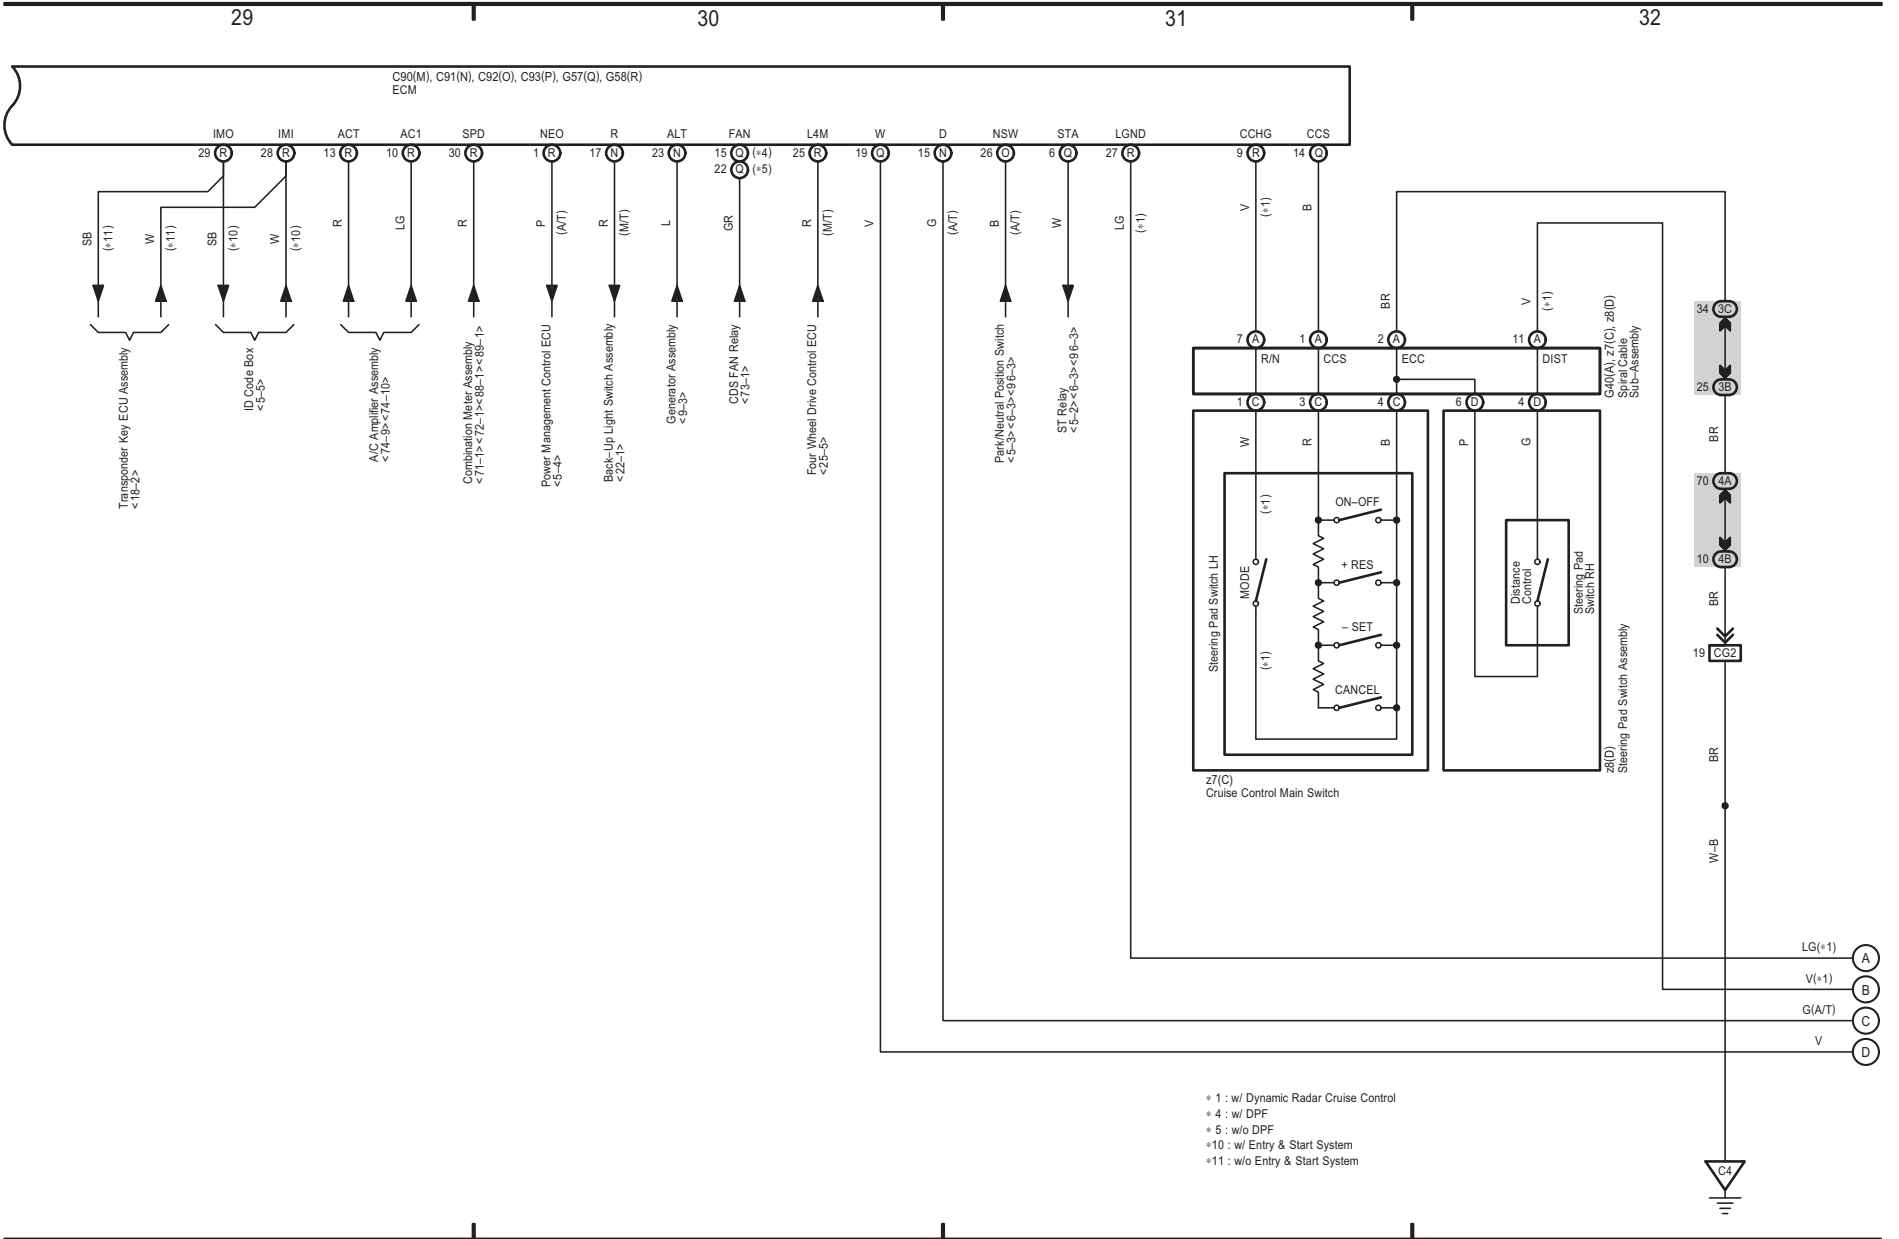

LAND CRUISER / LAND CRUISER PRADO (EM24NOE)



Engine Control (1KD-FTV) , Dynamic Radar Cruise Control or Cruise Control (1KD-FTV) , ECT and A/T Indicator (1KD-FTV)

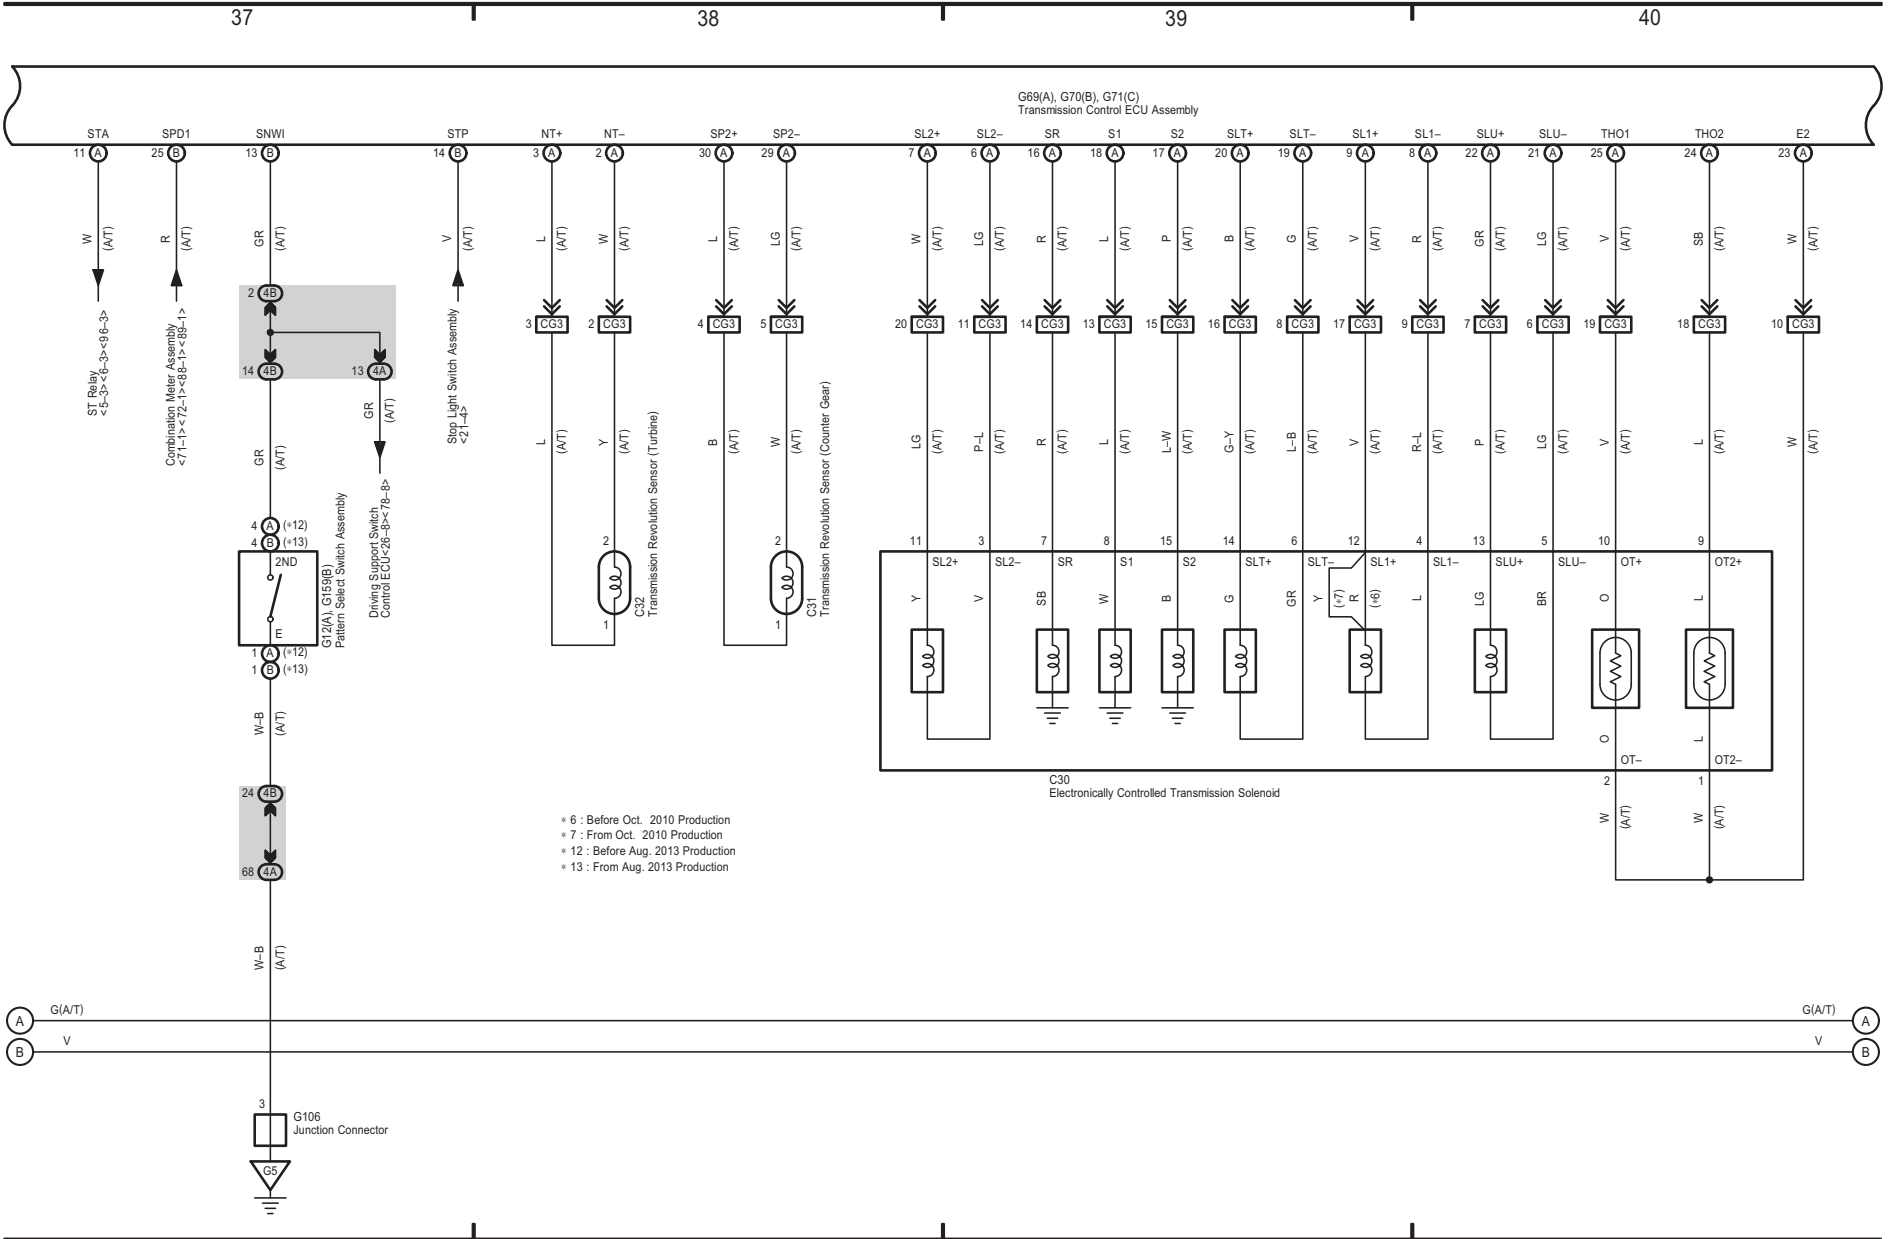

LAND CRUISER / LAND CRUISER PRADO (EM24N0E)



15 LAND CRUISER / LAND CRUISER PRADO (Cont'd)

Engine Control (1KD-FTV) , Dynamic Radar Cruise Control or Cruise Control (1KD-FTV) , ECT and A/T Indicator (1KD-FTV)

