
 
 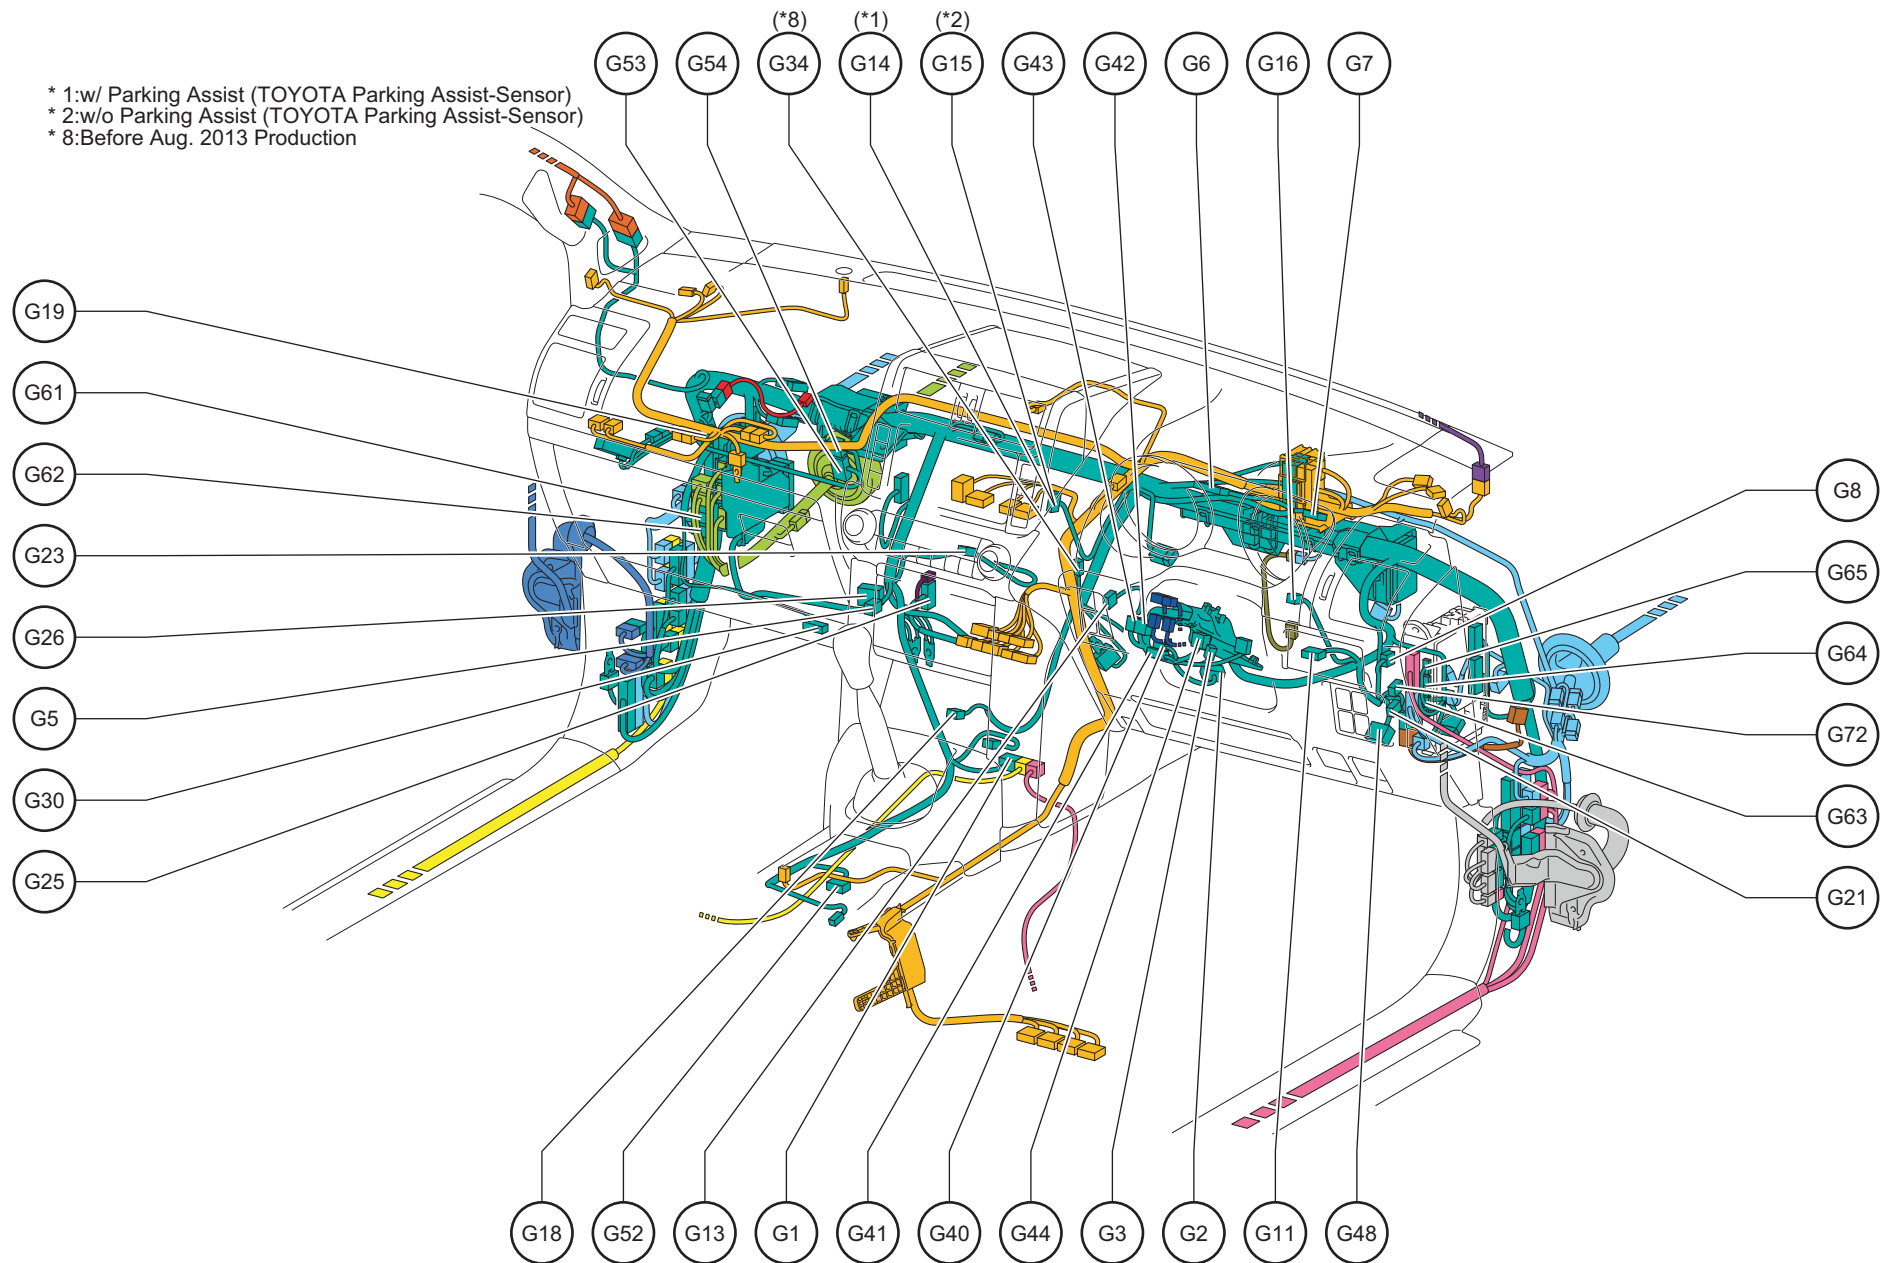


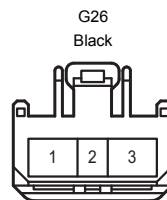
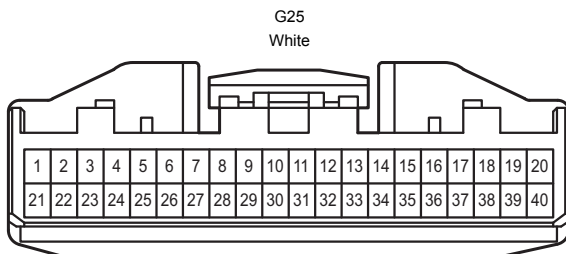
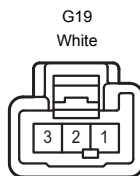
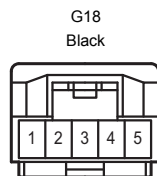
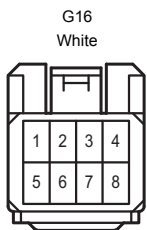
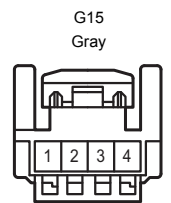
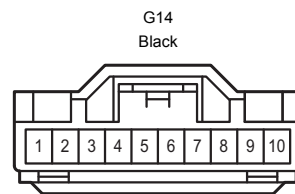
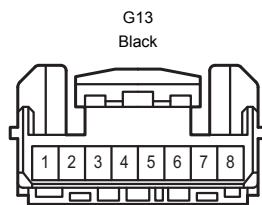
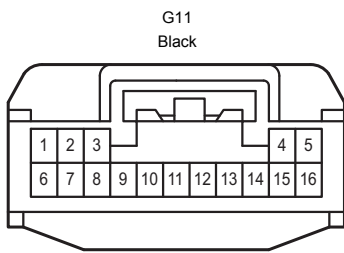
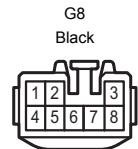
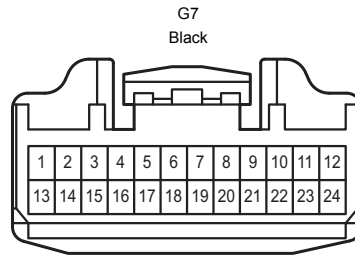
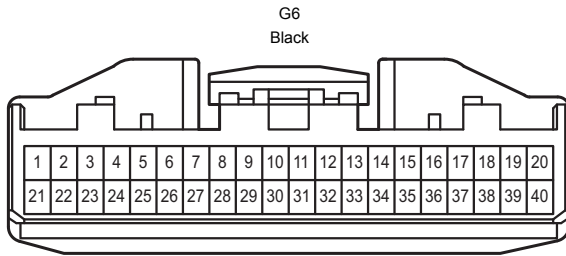


Position of Parts in Instrument Panel <RHD Front Bench Seat>

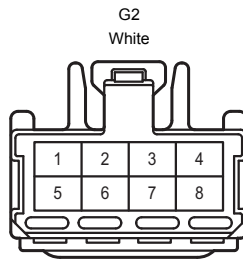


- G 1 Airbag Sensor Assembly
- G 2 Ignition or Starter Switch Assembly
- G 3 Un-Lock Warning Switch Assembly
- G 5 Telltale Light Assembly
- G 6 Combination Meter Assembly
- G 7 Combination Meter Assembly
- G 8 Turn Signal Flasher Assembly
- G 11 Outer Mirror Switch Assembly
- G 13 Back Sonar or Clearance Sonar Switch Assembly
- G 14 Clearance Warning Indicator Assembly
- G 15 Hazard Warning Signal Switch Assembly
- G 16 Trip Switch
- G 18 Transfer Position Switch
- G 19 Option Connector
- G 21 Headlight Leveling Switch
- G 23 Integration Control and Panel Assembly
- G 25 A/C Amplifier Assembly
- G 26 Front Blower with Fan Motor Sub-Assembly
- G 30 Glove Box Light
- G 34 No. 1 Clearance Warning Buzzer
- G 40 Spiral Cable Sub-Assembly
- G 41 Spiral Cable Sub-Assembly
- G 42 Windshield Wiper Switch Assembly
- G 43 Windshield Wiper Switch Assembly
- G 44 Headlight Dimmer Switch Assembly
- G 48 DLC3
- G 52 Yaw Rate Sensor Assembly
- G 53 Four Wheel Drive Control ECU
- G 54 Four Wheel Drive Control ECU
- G 61 ECM
- G 62 ECM
- G 63 Main Body ECU
- G 64 Main Body ECU
- G 65 Main Body ECU
- G 72 Headlight Cleaner Switch Assembly


Position of Parts in Instrument Panel <RHD Front Bench Seat>

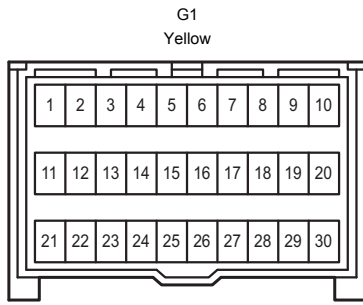


G44
White

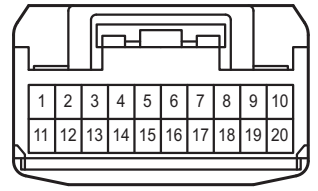


G52
Black

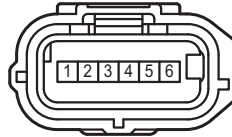

G61
White

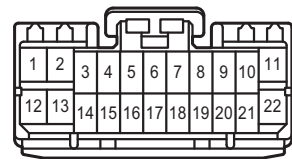


G63
White

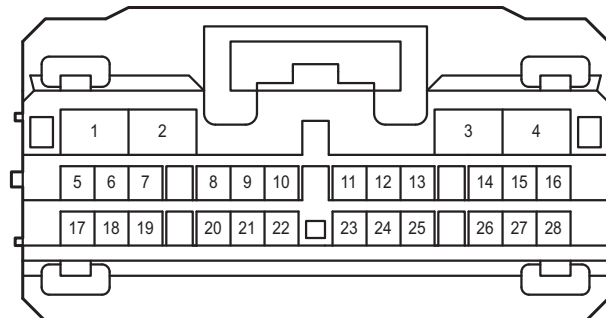


Position of Parts in Instrument Panel <RHD Front Bench Seat>

G64
White

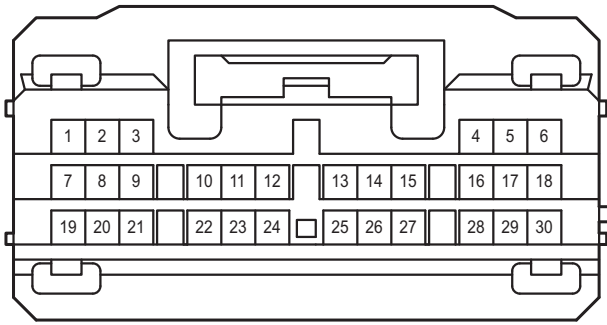

G65
White

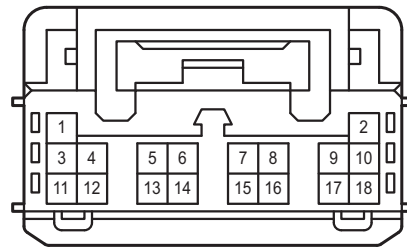

G72
Black

