




Position of Parts in Instrument Panel <RHD Front Bench Seat>

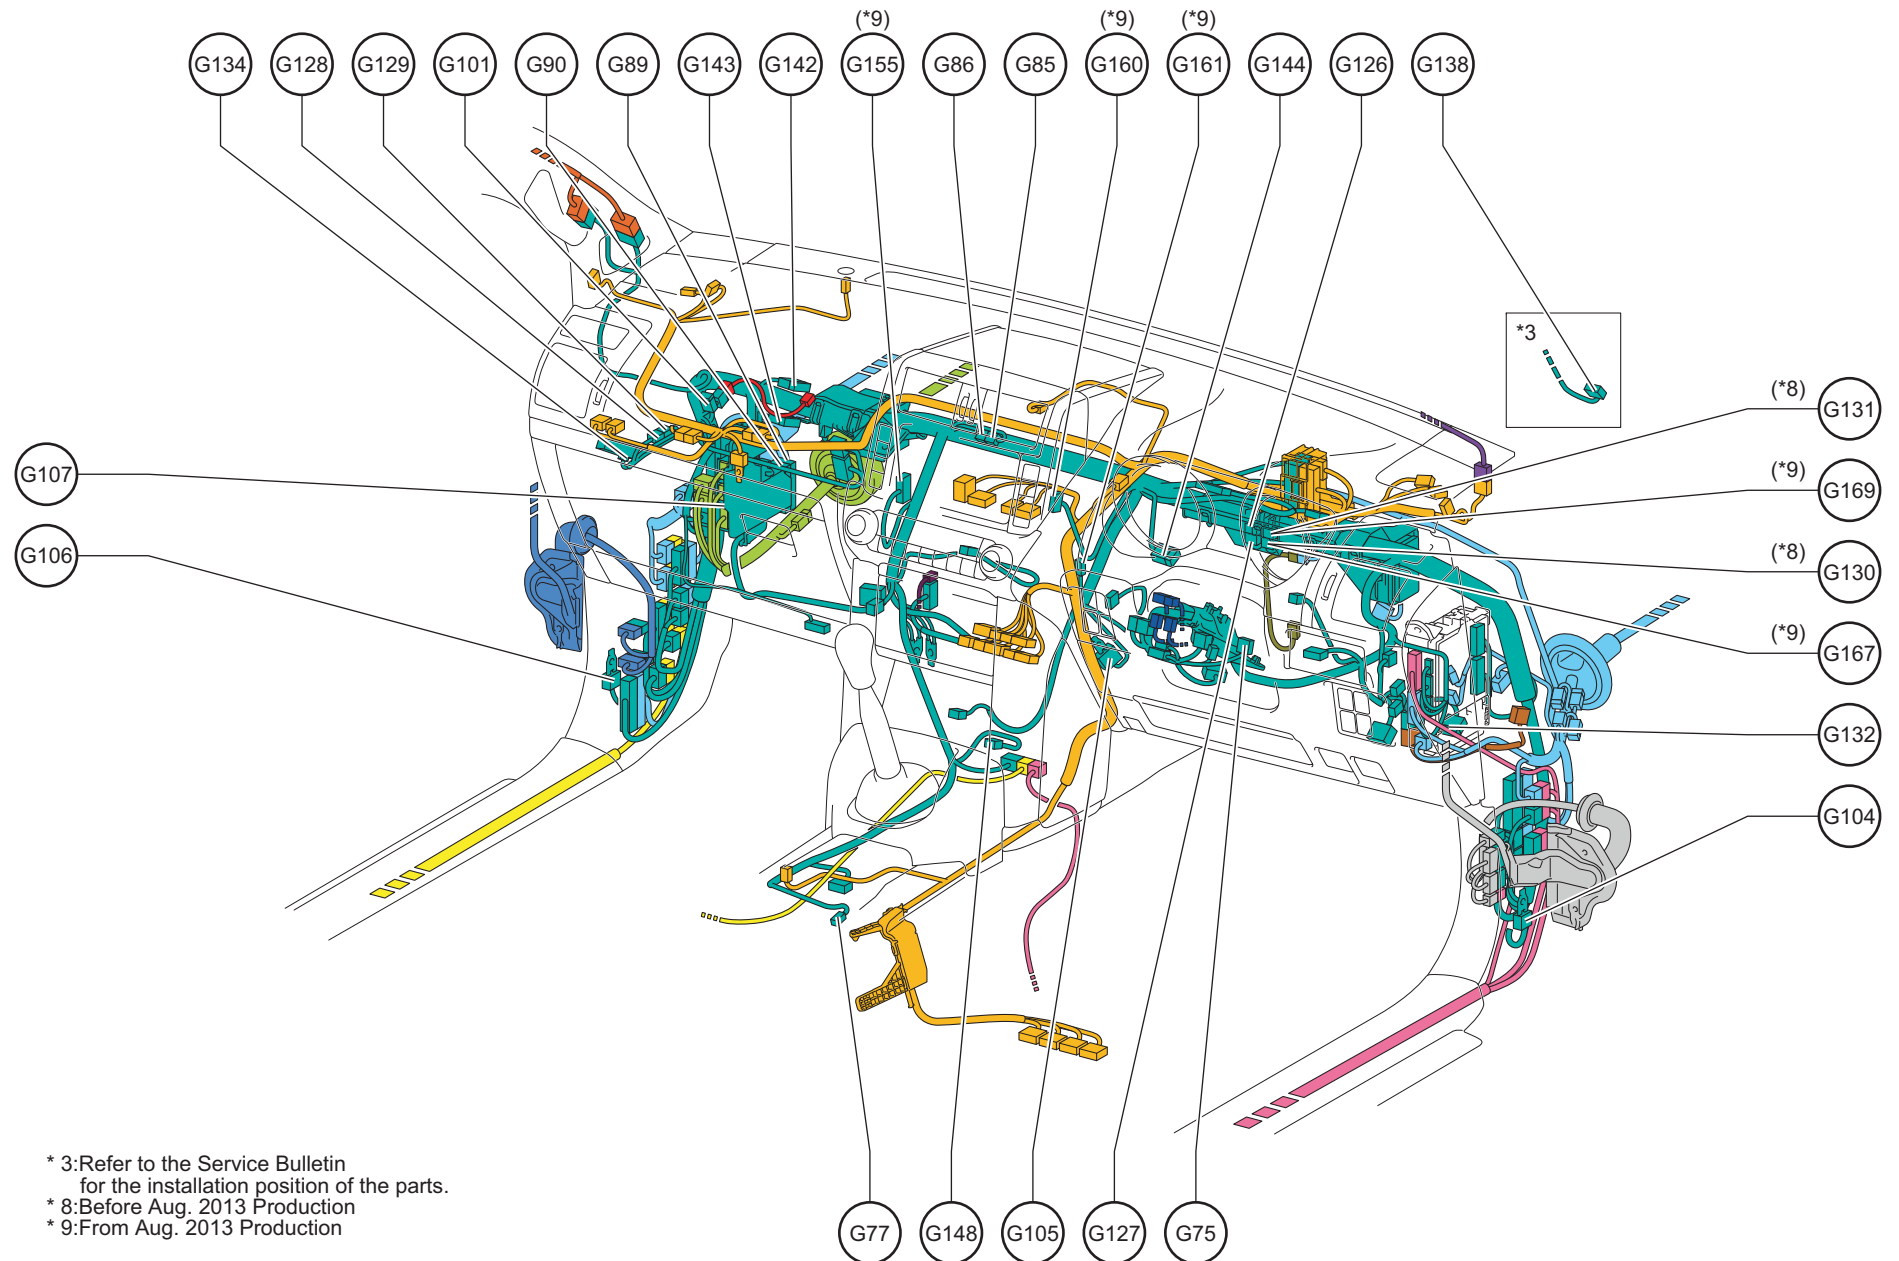


G 75	Transponder Key Amplifier
G 77	Parking Brake Switch Assembly
G 85	Junction Connector
G 86	Junction Connector
G 89	Junction Connector
G 90	Junction Connector
G101	Junction Terminal
G104	Junction Connector
G105	Junction Connector
G106	Junction Connector
G107	Junction Connector
G126	Junction Connector
G127	Junction Connector
G128	Junction Connector
G129	Junction Connector
G130	Junction Connector
G131	Junction Connector
G132	Junction Connector
G134	Junction Connector
G138	Transponder Key ECU Assembly
G142	Junction Connector
G143	Junction Connector
G144	Junction Connector
G148	Power Point Socket Assembly
G155	Network Gateway ECU
G160	Clearance Warning Indicator Assembly
G161	No. 1 Clearance Warning Buzzer
G167	Junction Connector
G169	Junction Connector

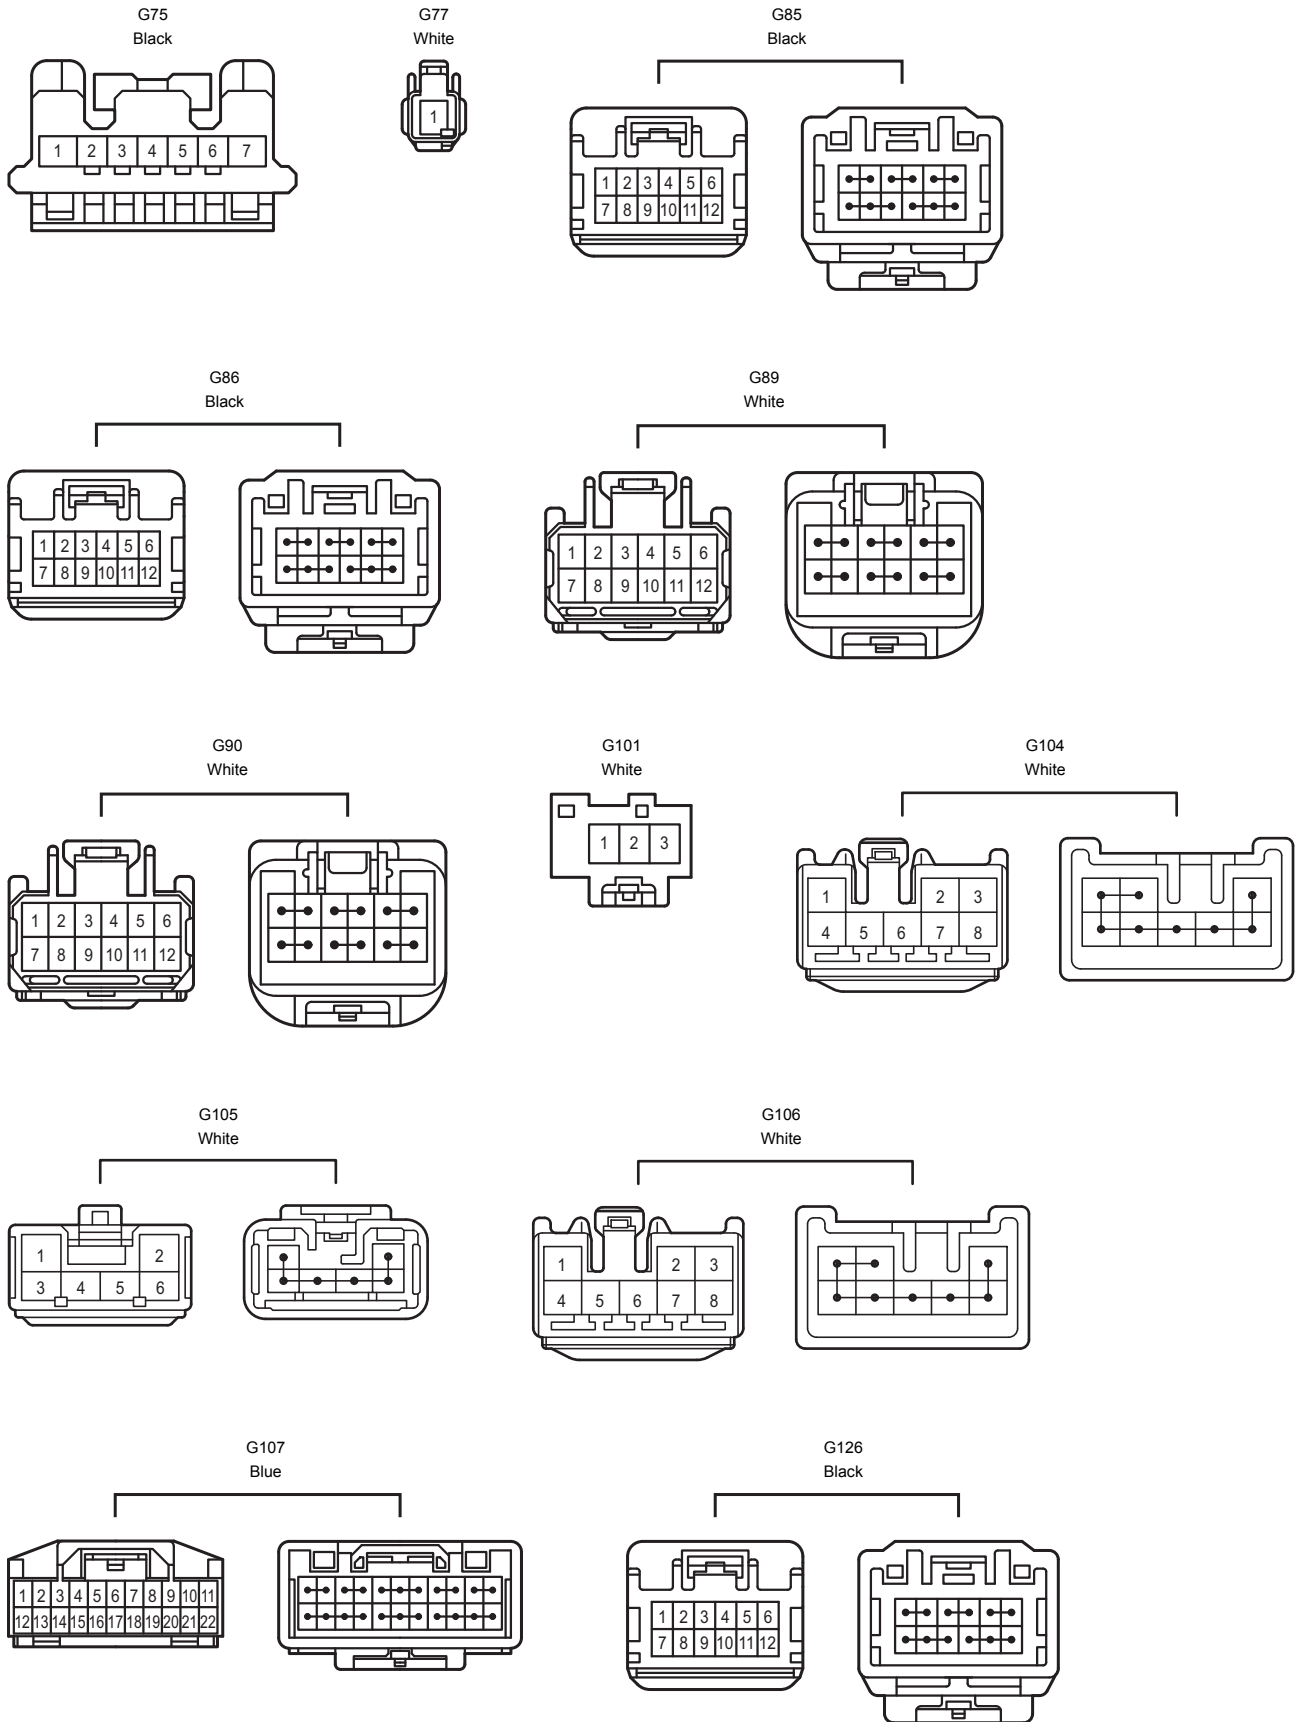


G127
Black

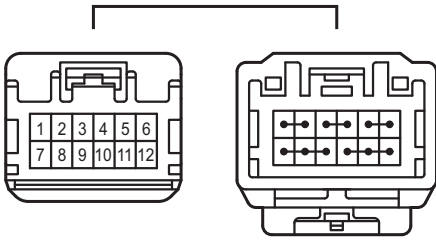


G128
Black

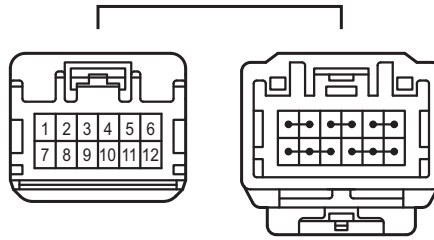


G129
Black

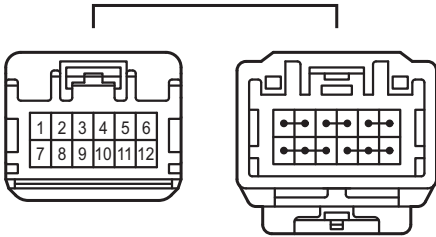


G130
White

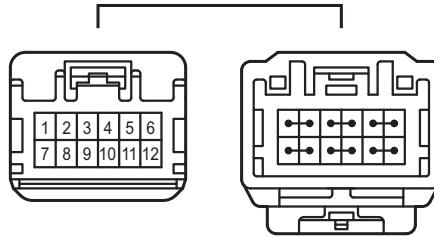


G131
White

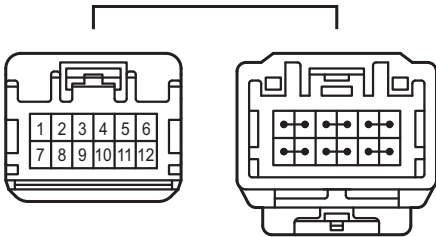


G132
Gray

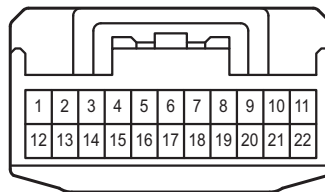


G134
Gray

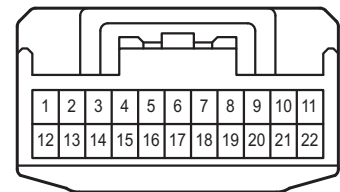


G138
White

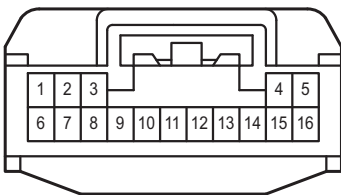

G142
White

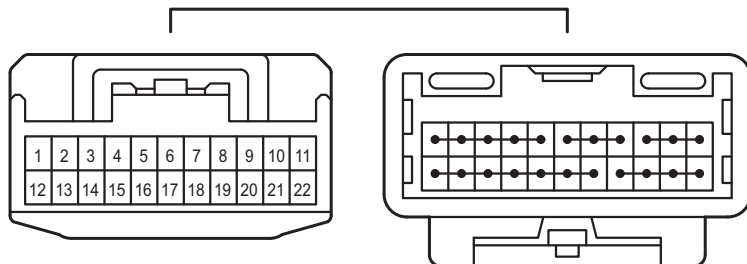

G143
Black

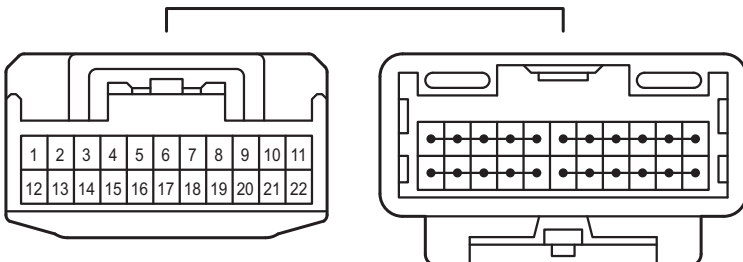

Position of Parts in Instrument Panel <RHD Front Bench Seat>

