



Position of Parts in Instrument Panel <LHD Front Separate Seat>

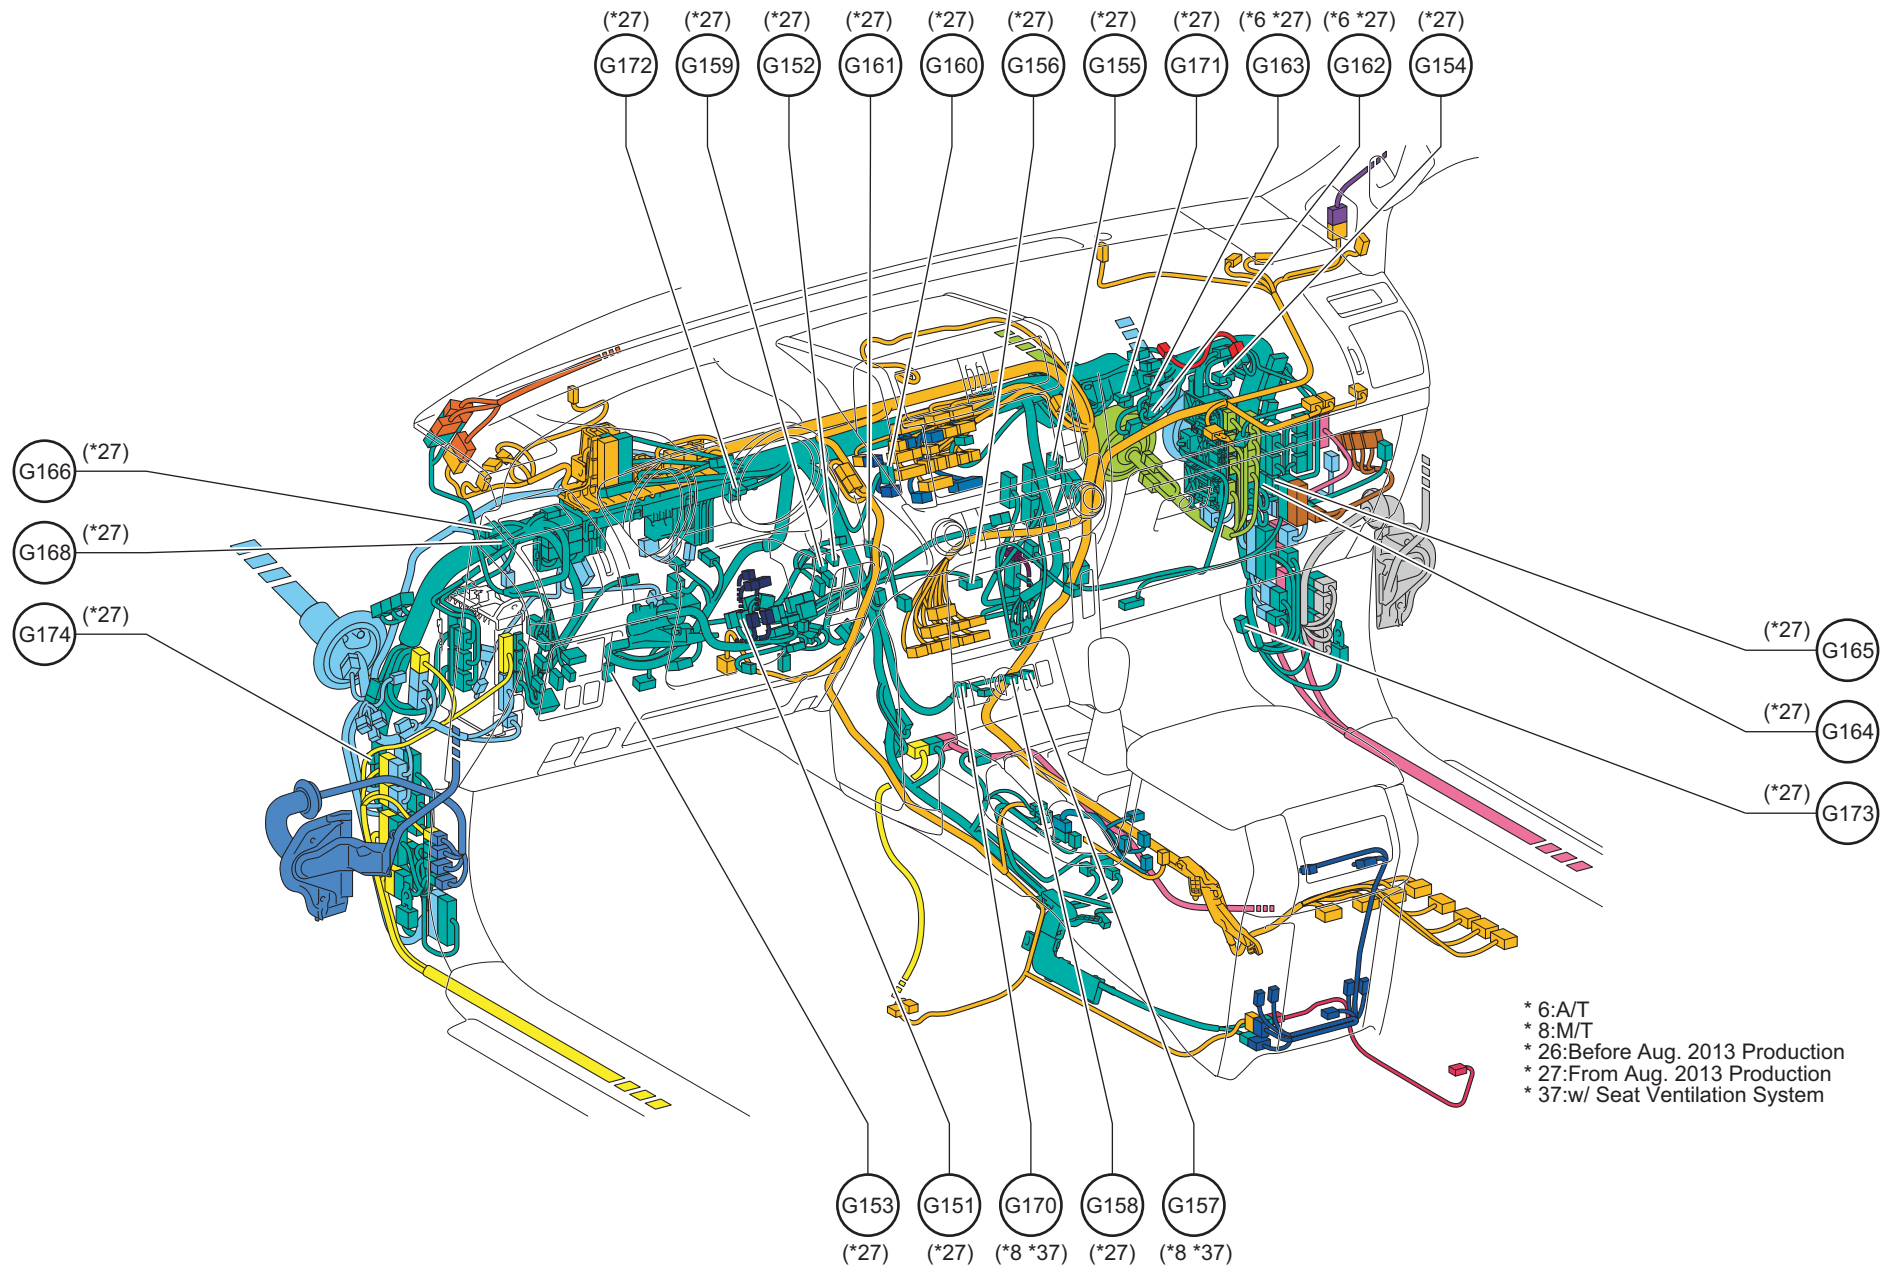

G151	Spiral Cable Sub-Assembly
G152	Steering Wheel Heater Control Assembly
G153	Tire Pressure Warning Reset Switch
G154	Clearance Warning ECU Assembly
G155	Network Gateway ECU
G156	Combination Switch Assembly
G157	Refreshing Seat Switch LH
G158	Downhill Assist Control Switch
G159	Pattern Select Switch Assembly
G160	Clearance Warning Indicator Assembly
G161	No. 1 Clearance Warning Buzzer
G162	Driving Support Switch Control ECU
G163	Driving Support Switch Control ECU
G164	Junction Connector
G165	Junction Connector
G166	Junction Connector
G168	Junction Connector
G170	Refreshing Seat Switch RH
G171	Diode (Shift Position No. 1)
G172	Diode (Shift Position No. 2)
G173	Diode (Oil Pressure)
G174	Diode (Viscous Relay)

Position of Parts in Instrument Panel <LHD Front Separate Seat>

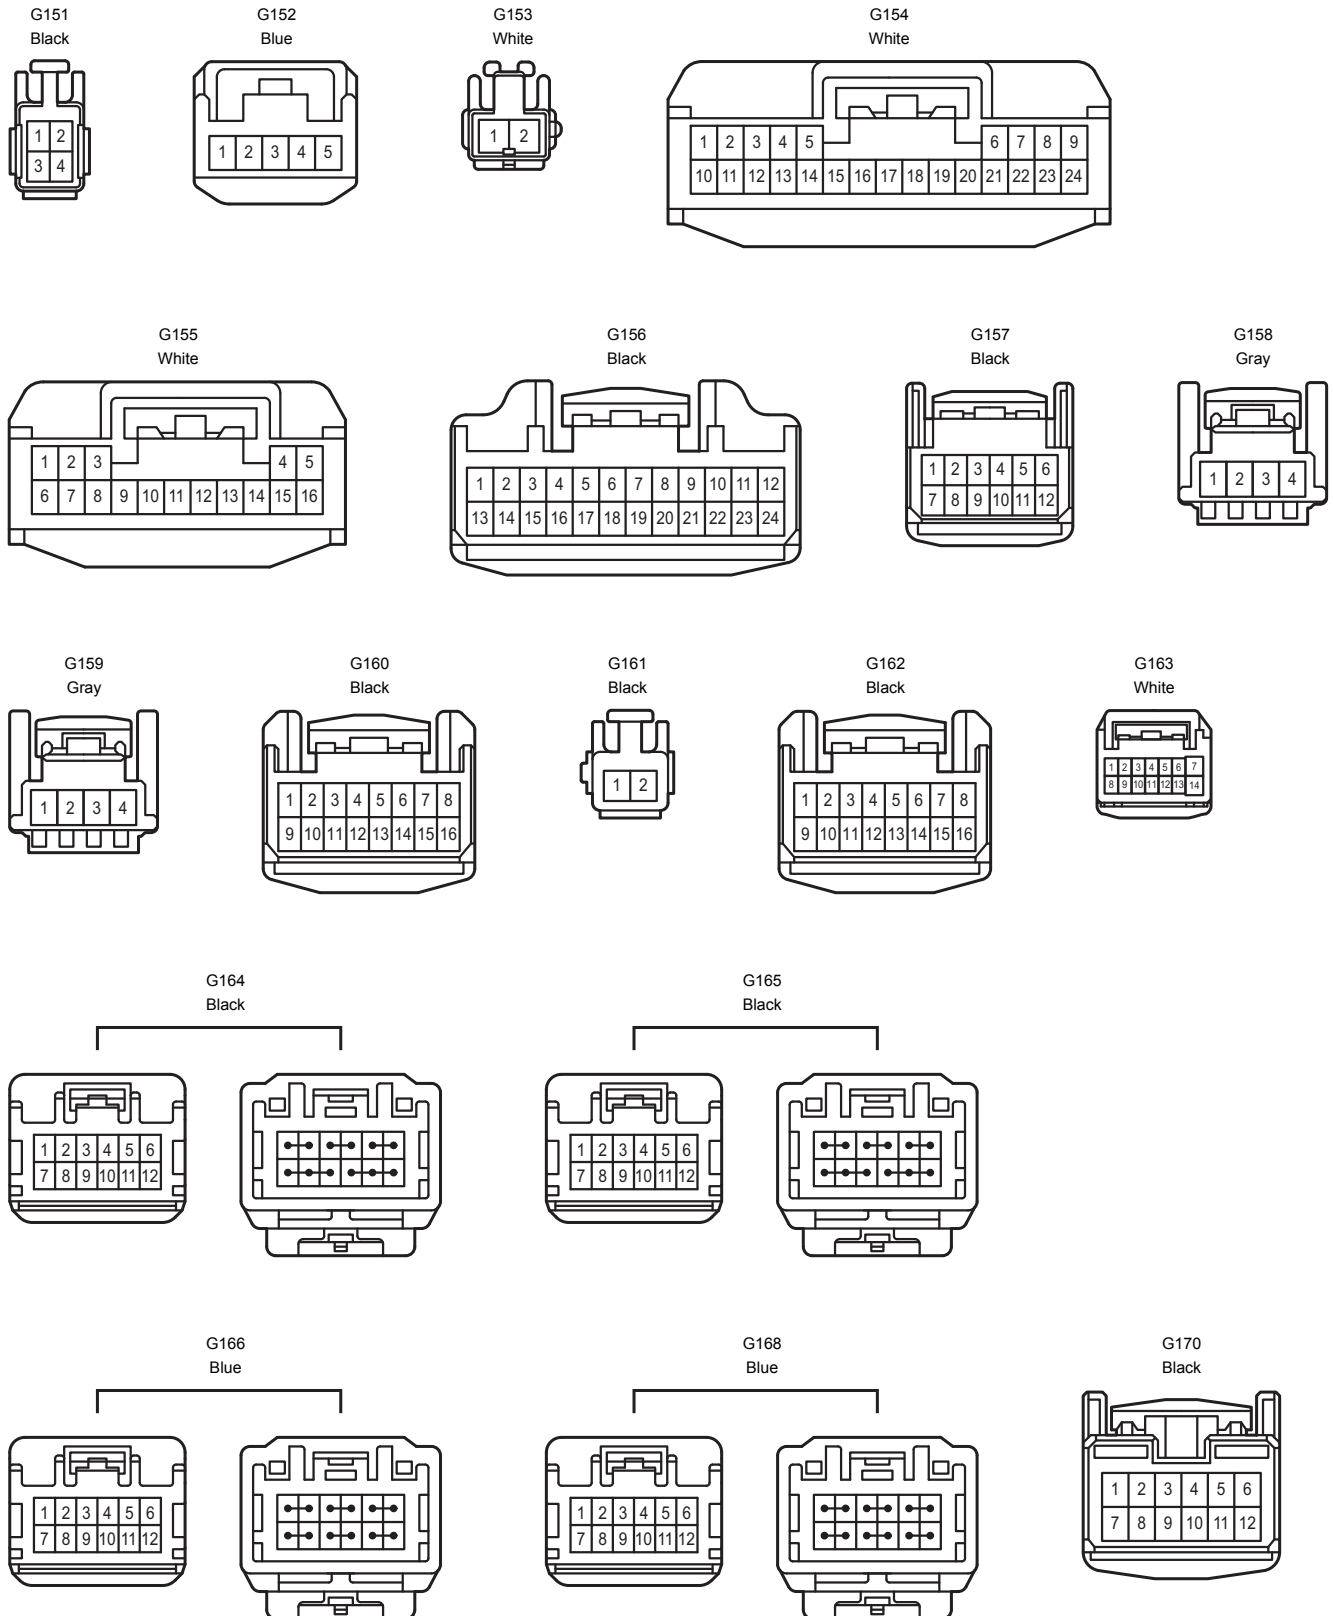

Position of Parts in Instrument Panel <LHD Front Separate Seat>

G171
Gray



G172
Gray



G173
Gray



G174
Gray

