

NOTICE :When inspecting or repairing the SRS, perform service in accordance with the following precautionary instructions and the procedure, and precautions in the Repair Manual applicable for the model year.

* Malfunction symptoms of the SRS are difficult to confirm, so the DTCs become the most important source of information when troubleshooting. When troubleshooting the SRS, always inspect the DTCs before disconnecting the battery.

* Work must be started more than 90 seconds after the ignition or starter switch assembly is turned to the "LOCK" Position (Ignition switch Type) or the engine switch is Pushed to the "OFF" position (engine switch type) and the negative (-) terminal cable is disconnected from the battery.
(The SRS is equipped with a back-up power source so that if work is started within 90 seconds from disconnecting the negative (-) terminal cable of the battery, the SRS may deploy.)

* When the negative (-) terminal cable is disconnected from the battery, the memory of the clock and audio system will be cleared. So before starting work, make a record of the contents in the audio memory system. When work is finished, reset the audio systems as they were before and adjust the clock. Some vehicles have power tilt steering, power telescopic steering, power seat and power outside rear view mirror which are all equipped with memory function. However, it is not possible to make a record of these memory contents. So when the work is finished, it will be necessary to explain it to your customer, and ask the customer to adjust the features and reset the memory. To avoid erasing the memory in each system, never use a back-up power supply from outside the vehicle.

* Before repair, remove the airbag sensor if shocks are likely to be applied to the sensor during repair.

* Do not expose the following parts directly to hot air or flame;

* Even in cases of a minor collision where the SRS does not deploy, the following parts should be inspected;

* Never use SRS parts from another vehicle. When replacing parts, replace with new parts.

* For the purpose of reuse, never disassemble and repair the following parts.

* If the following parts have been dropped, or have cracks, dents and other defects in their case, bracket, and connector replace with new one.

* Use a volt/ohmmeter with high impedance (10 k Ω minimum) for troubleshooting electrical circuits of the system.

* Information labels are attached to the periphery of the SRS components. Follow the instructions of the notice.


* After work on the SRS is completed, check the SRS warning light.


* If the vehicle is equipped with a mobile communication system, refer to the precaution in the IN section of the Repair Manual.

- * Steering wheel pad
- * Front passenger airbag assembly
- * Side airbag assembly
- * Curtain shield airbag assembly
- * Knee airbag assembly
- * Seat belt pretensioner
- * Center airbag sensor assembly
- * Front airbag sensor assembly
- * Side airbag sensor assembly
- * Rear airbag sensor assembly
- * Rear floor side airbag sensor


SRS <w/ Curtain Shield Airbag>


- * 1 :w/ Airbag Cut Off Switch Cylinder Sub-Assembly
- * 2 :RHD 5-Door
- * 3 :LHD
- * 4 :5-Door
- * 5 :3-Door
- *15 :Before Oct. 2011 Production
- *16 :From Oct. 2011 Production
- *17 :Before Aug. 2013 Production
- *18 From Aug. 2013 Production:

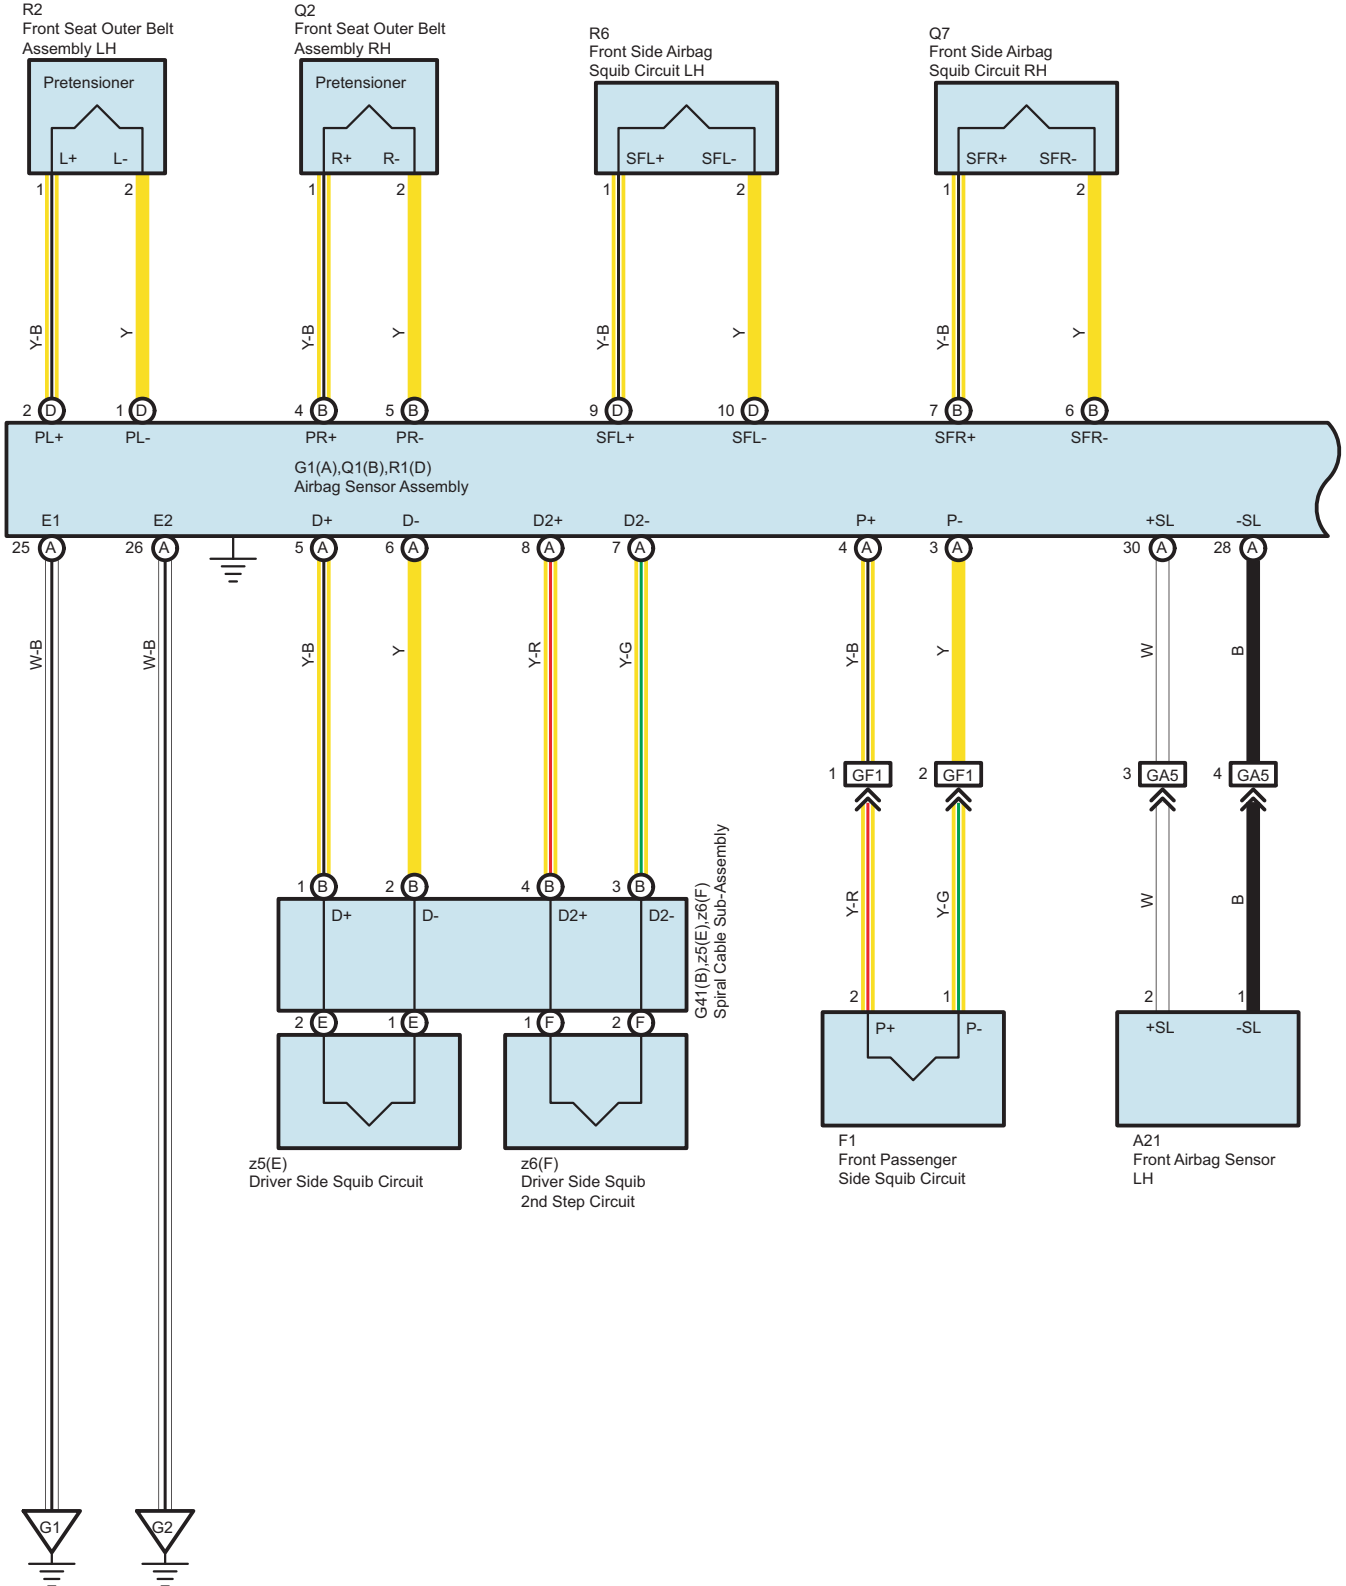


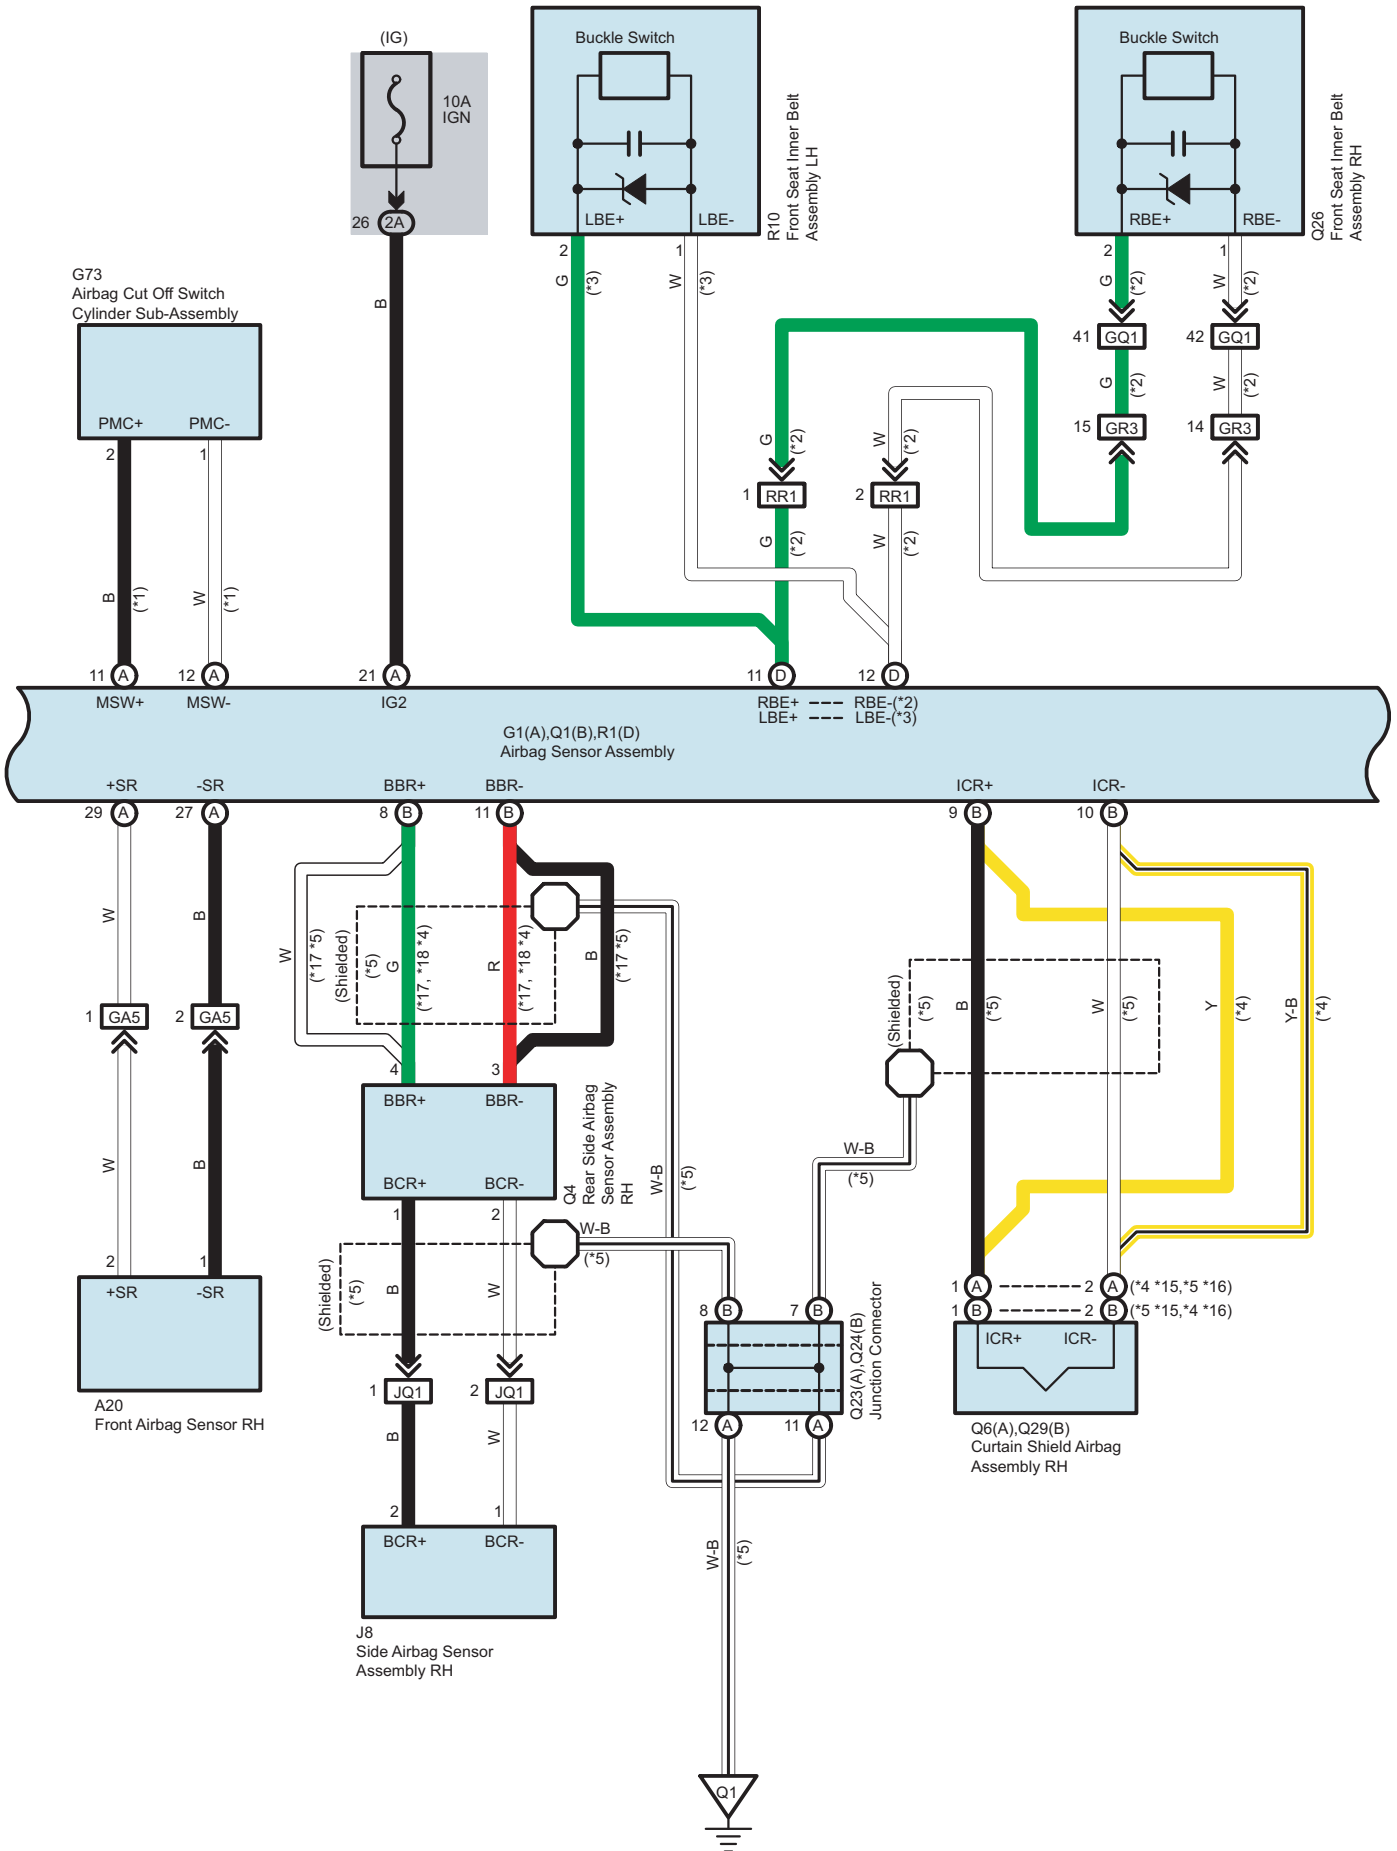


- * 1 :w/ Airbag Cut Off Switch Cylinder Sub-Assembly
- * 4 :5-Door
- * 5 :3-Door
- * 6 :RHD 3-Door
- *11 :LHD 1GR-FE, LHD 1KD-FTV
- *12 :LHD 2TR-FE, LHD 5L-E
- *17 :Before Aug. 2013 Production
- *18 From Aug. 2013 Production:

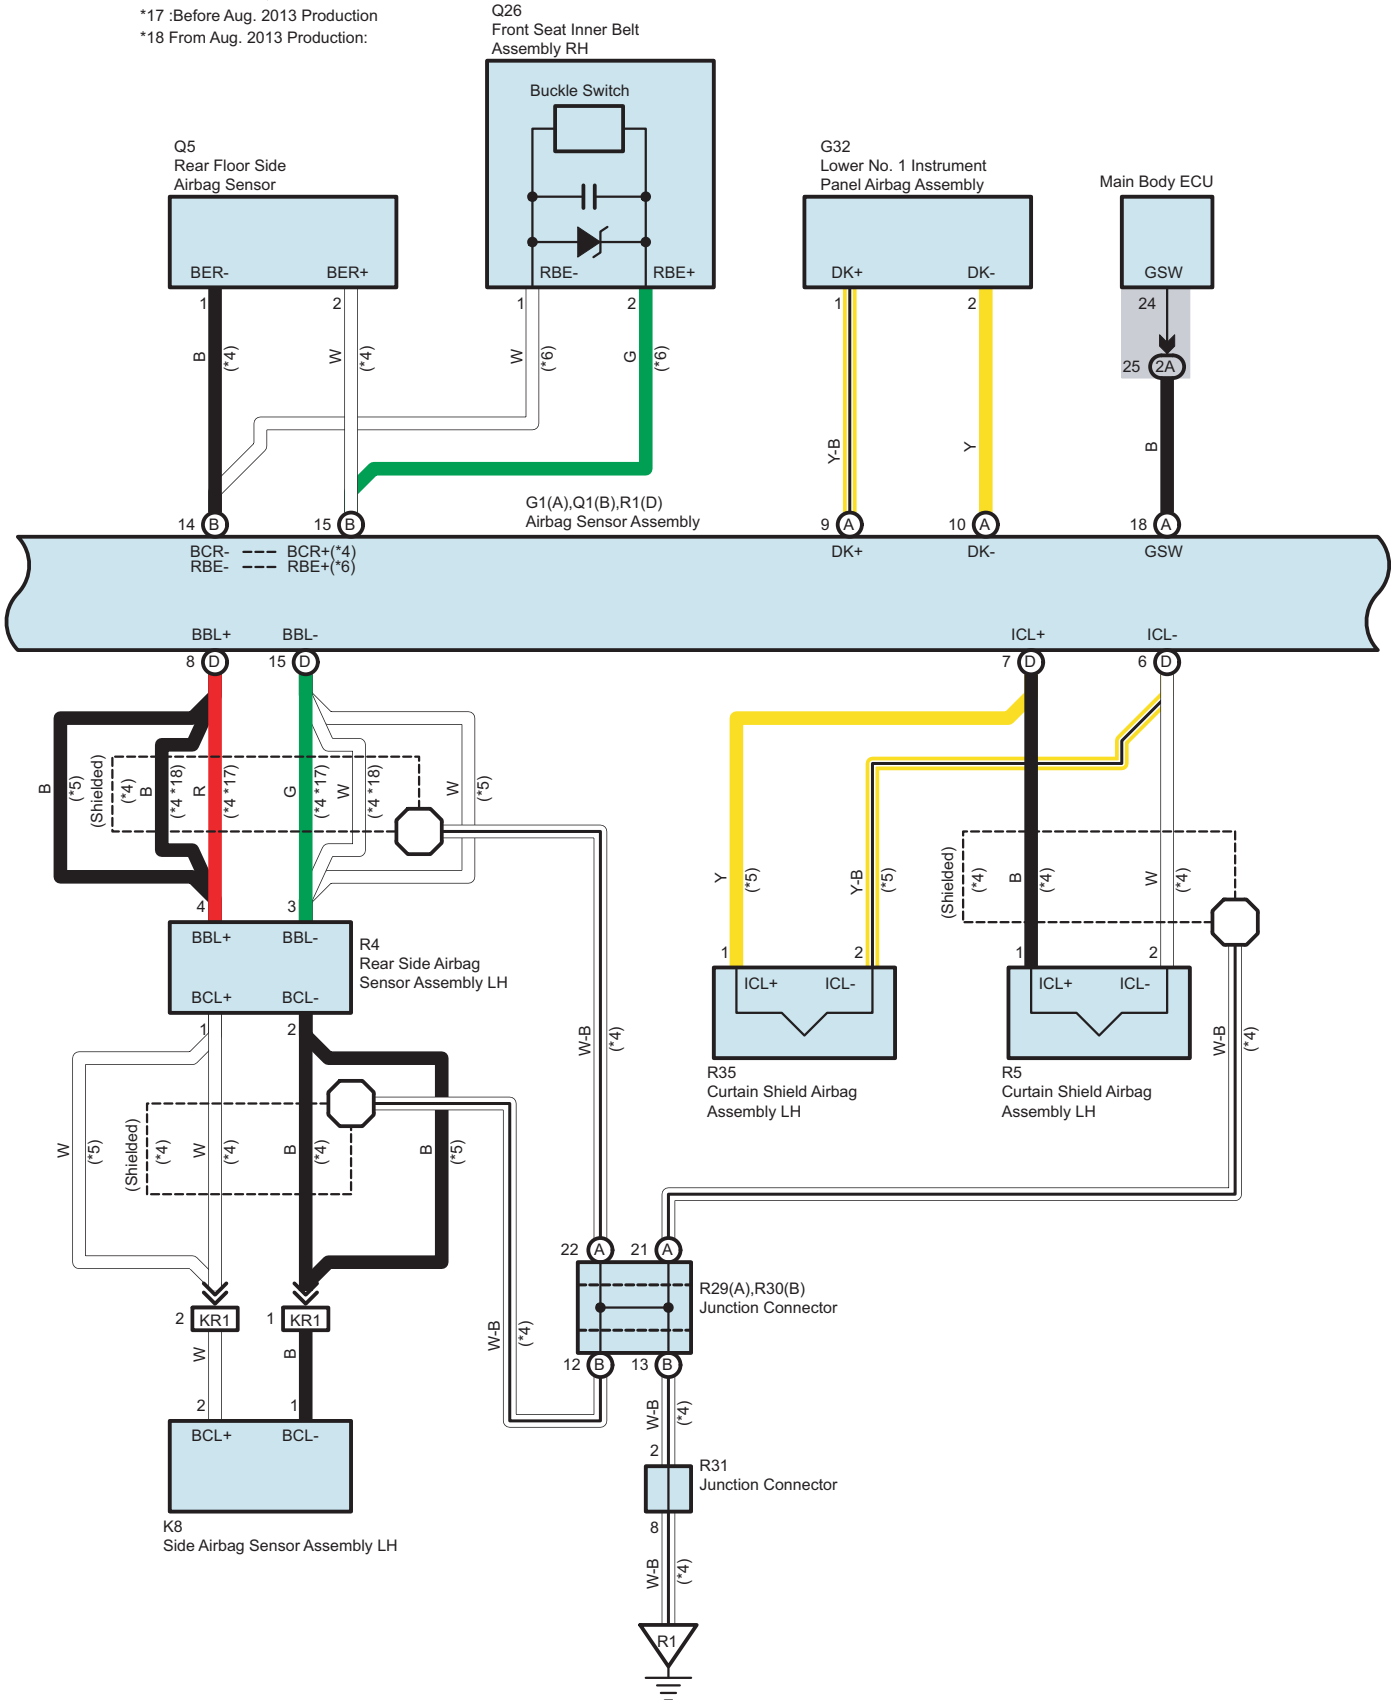

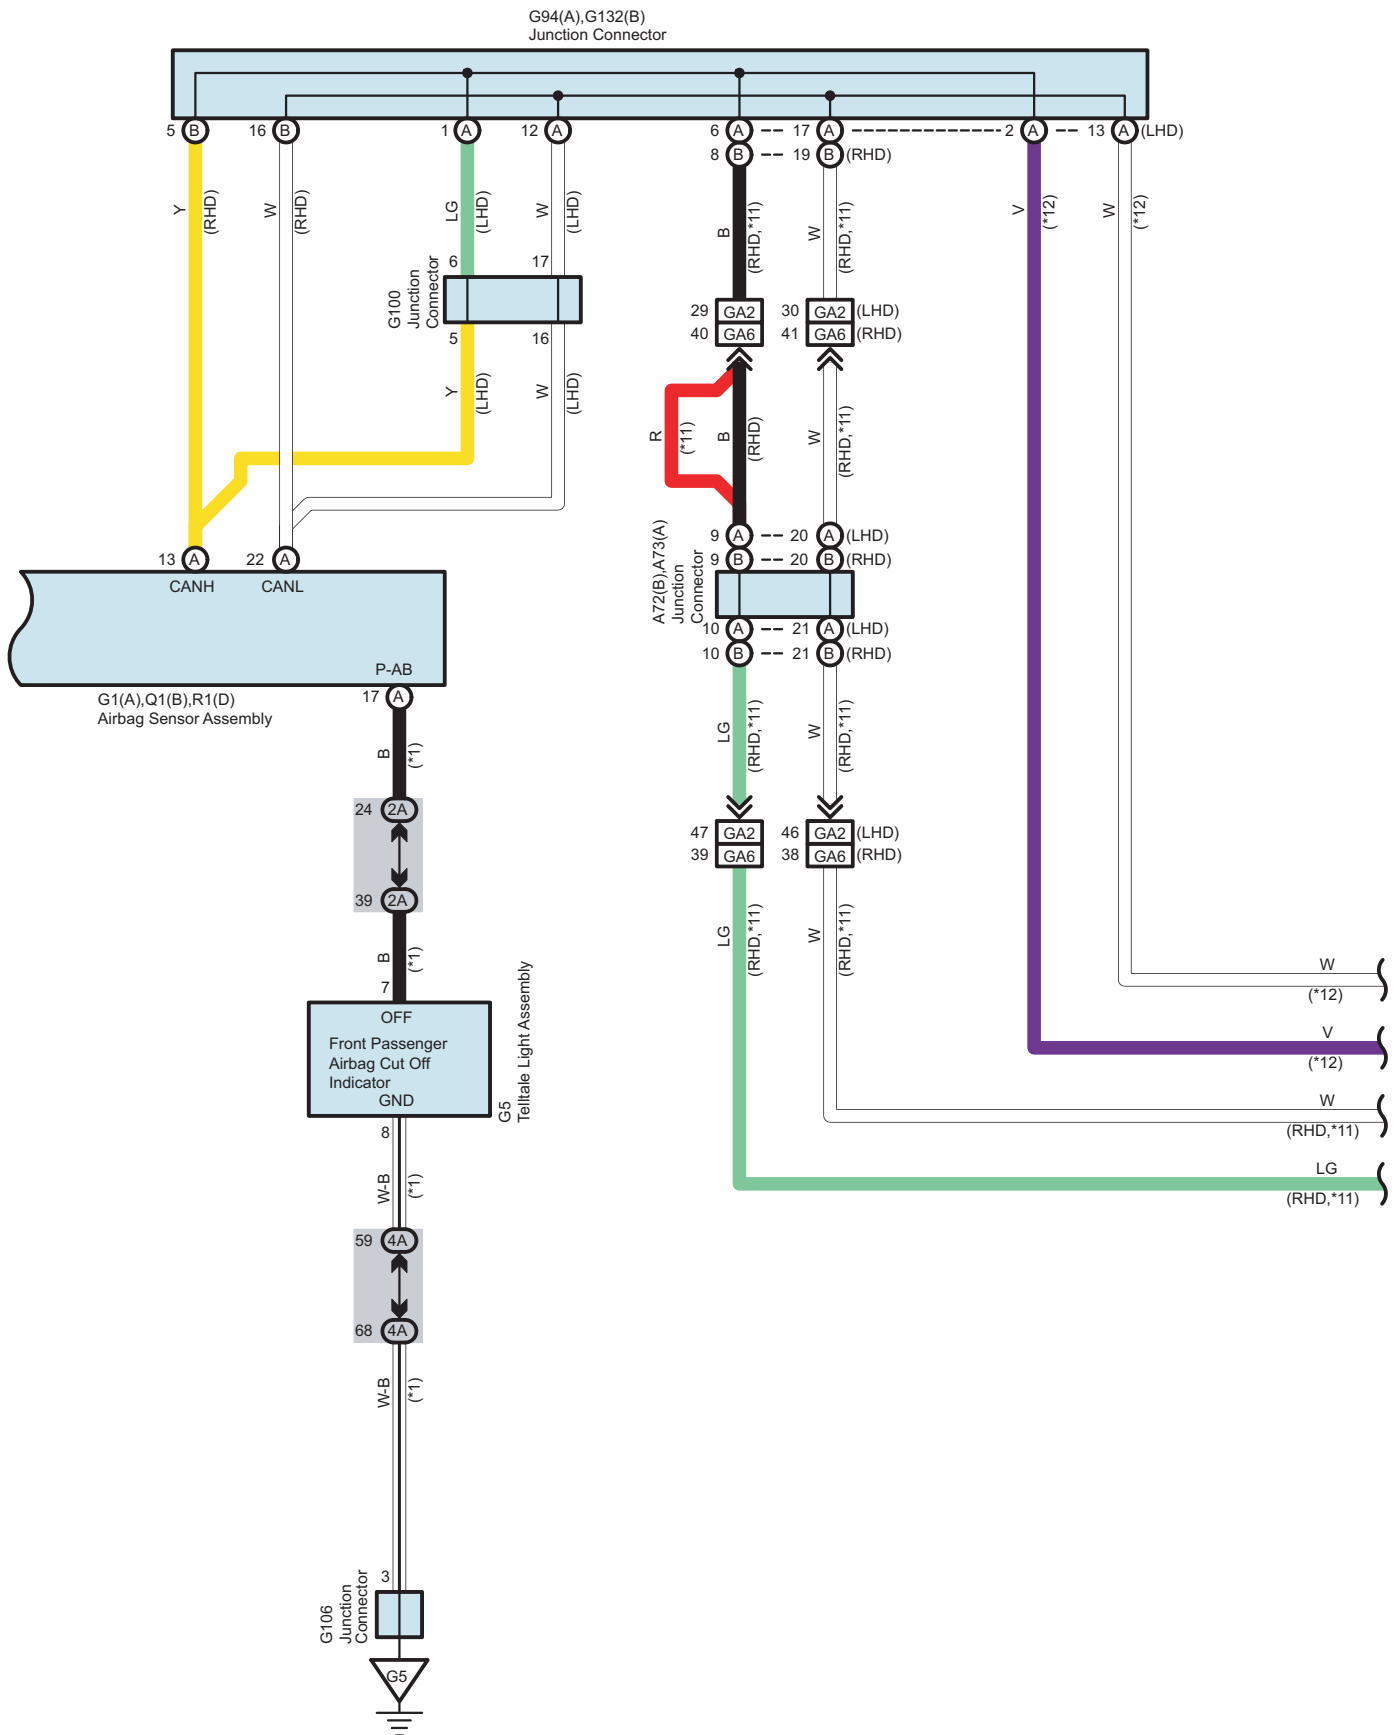

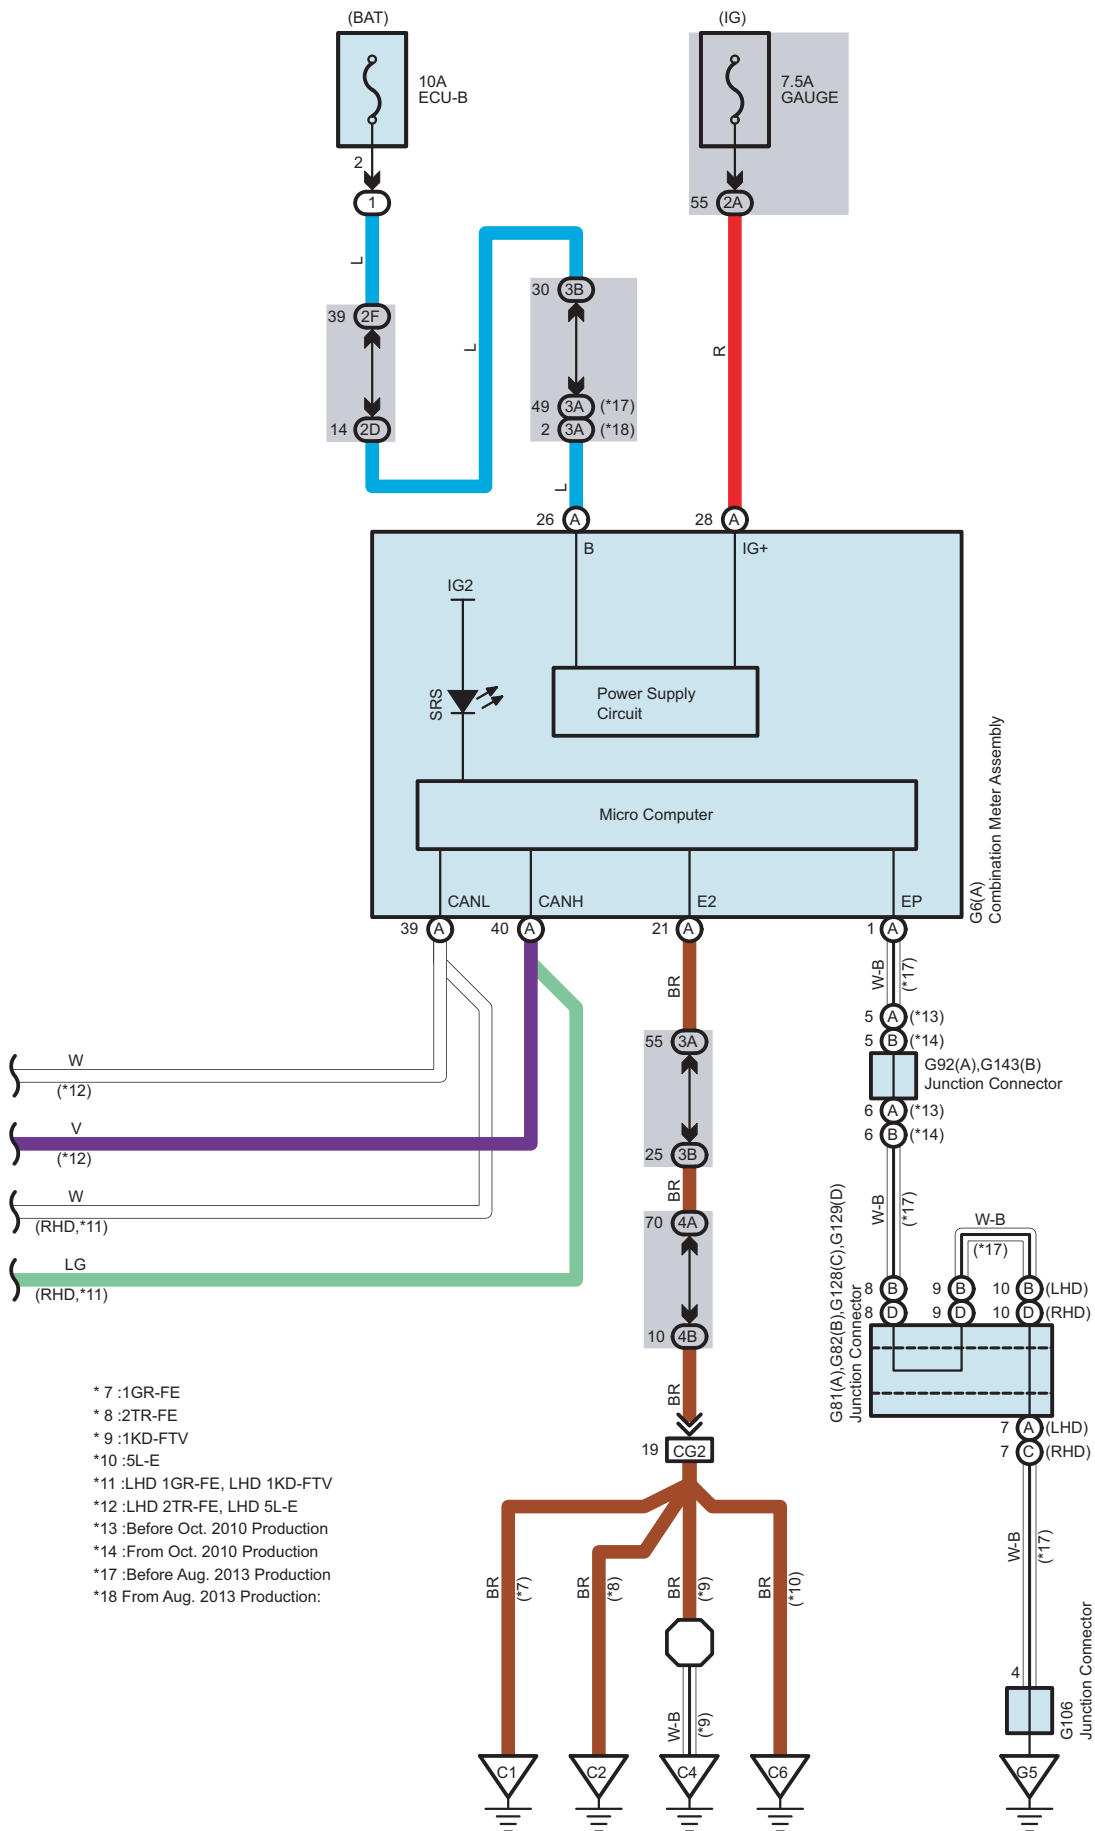


A20
Yellow

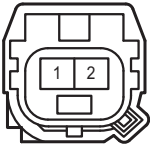


A21
Yellow




A72
White

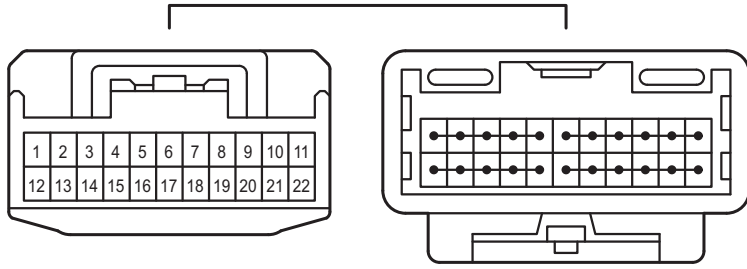


A73
White

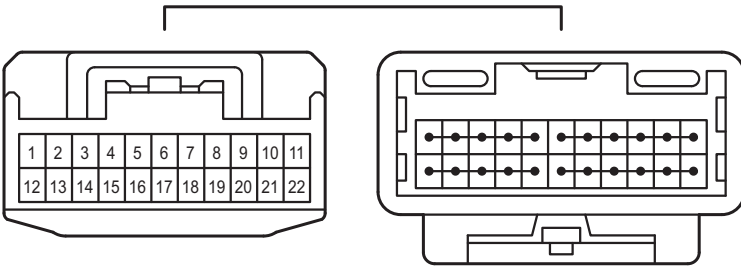

F1
Orange

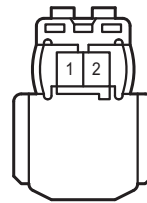


G1
Yellow

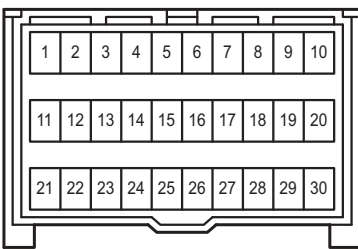


G5
Black




G6
Black

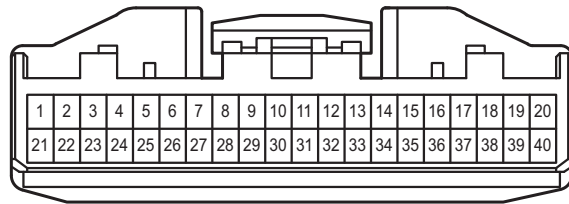

G32
Black

 


G41
Yellow

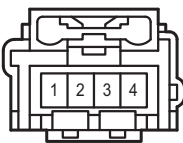


G73
White




G81
White

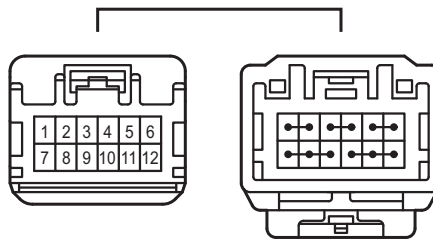


G82
White

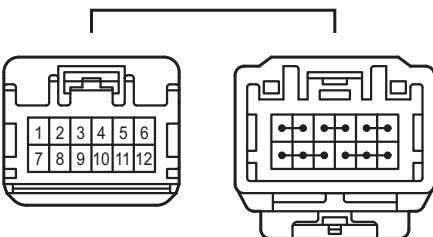



G92
White

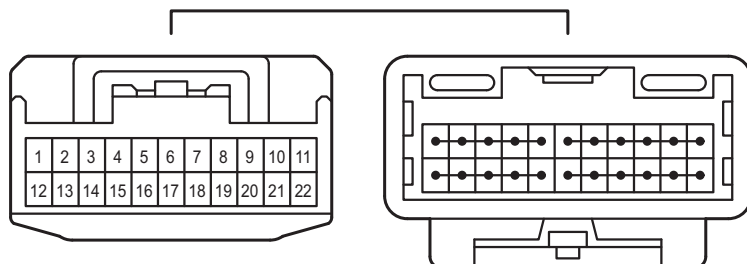



G94
White

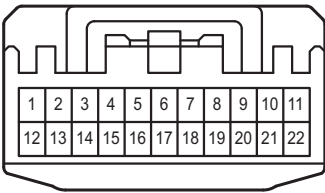



G100
Gray

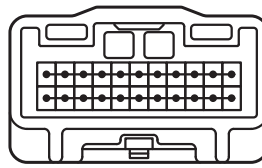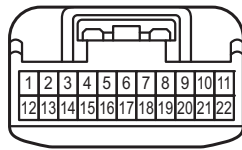



G106
White

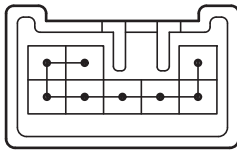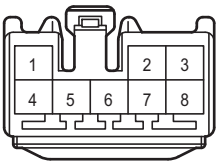


G128
Black

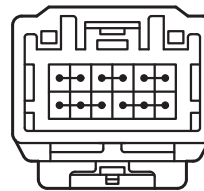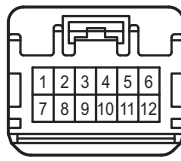



G129
Black

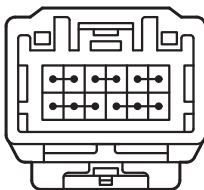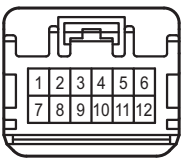


G132
Gray

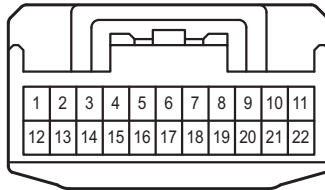

G143
Black

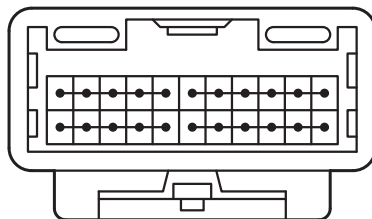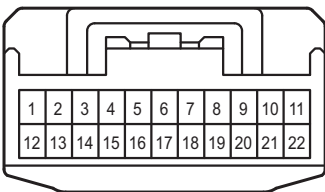


J8
Yellow

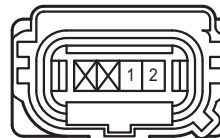


K8
Yellow



Q1
Yellow

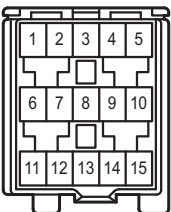

Q2
Black

 

Q4
Yellow



Q5
Yellow



Q6
Yellow




Q7
Yellow




SRS <w/ Curtain Shield Airbag>


Q23
White

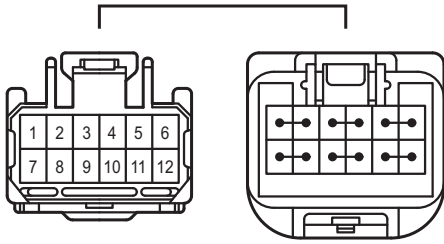


Q24
White

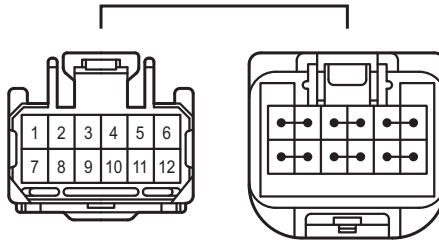


Q26
Gray

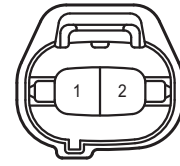


Q29
Black

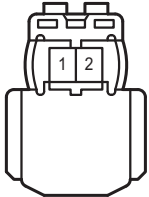


R1
Yellow

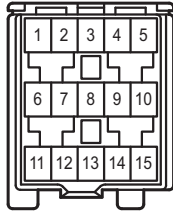

R2
Black

 

R4
Yellow

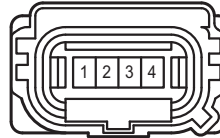


R5
Yellow




R6
Yellow




R10
Gray

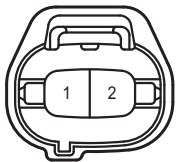


R29
Blue

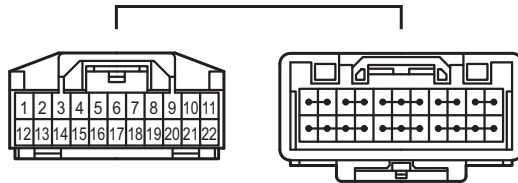


R30
Blue

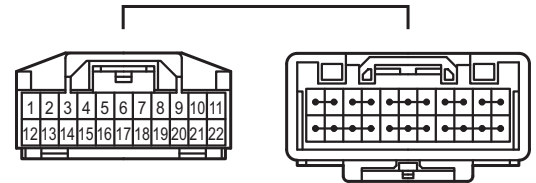


R31
White

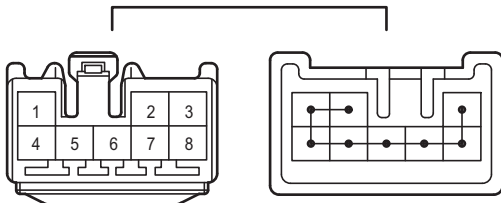


R35
Black

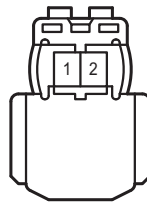


z5
Orange

 


z6
Black

 


2A
White

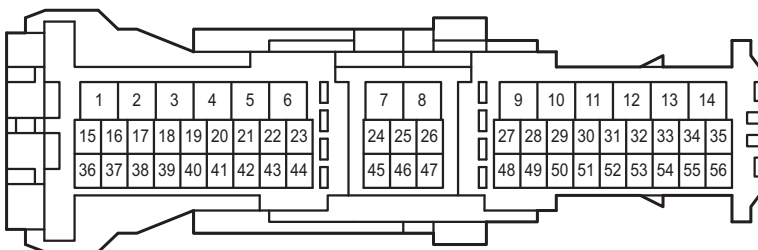


2D
White

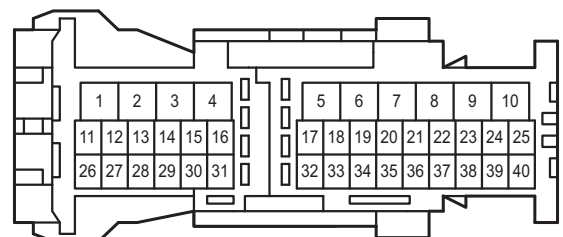


(2F)
White

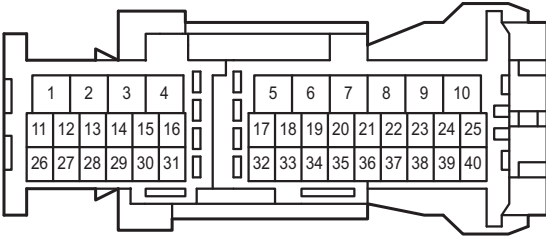


(3A)
White

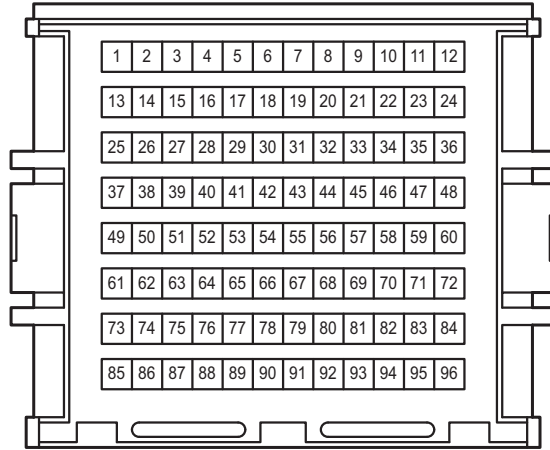


(3B)
White

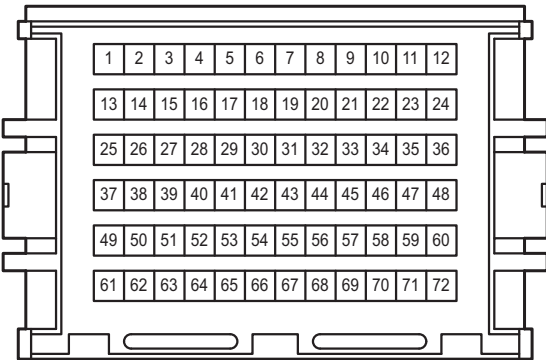


(4A)
White

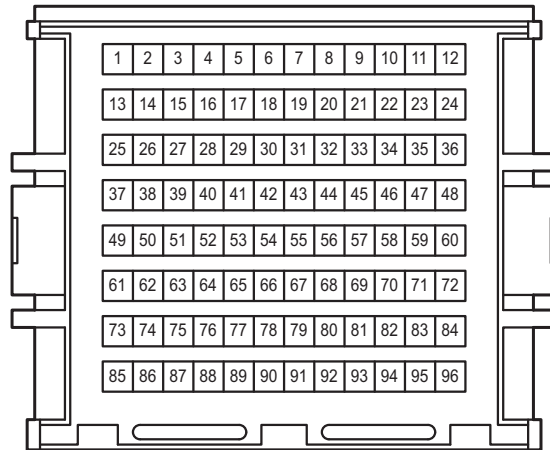


(4B)
White

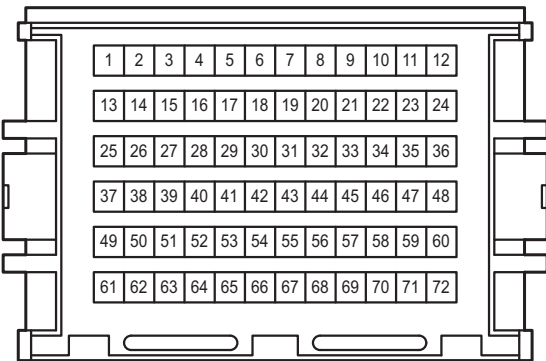


CG2
White

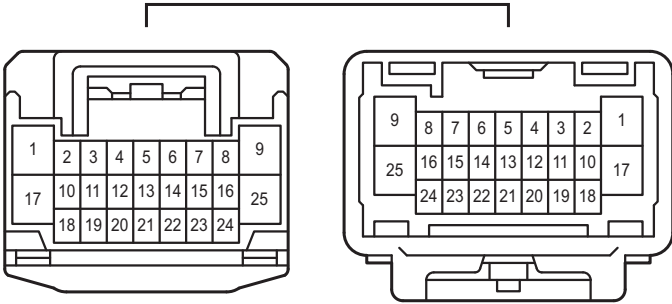

GA2
White

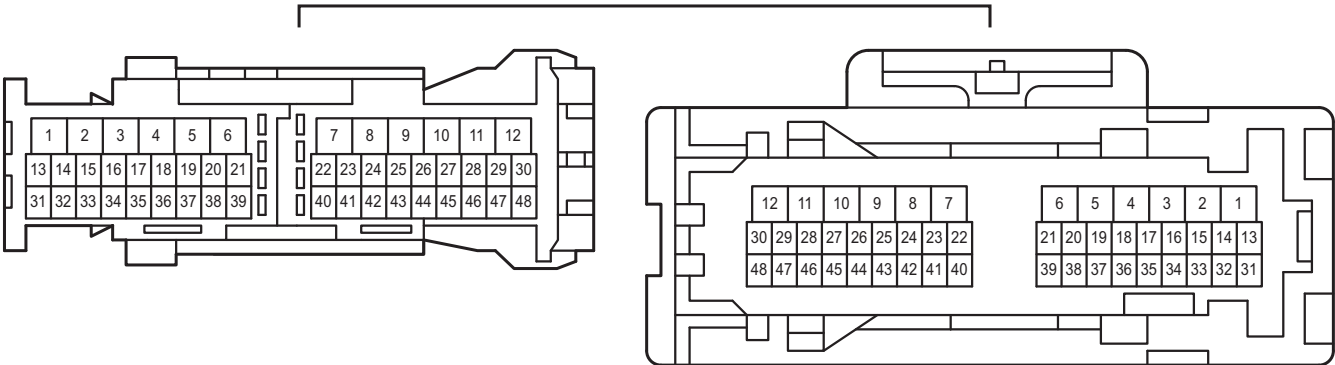

GA5
Yellow

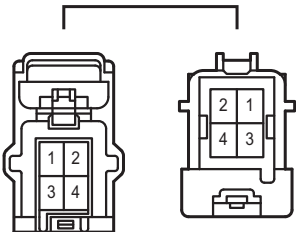

GA6
White

