



Position of Parts in Engine Compartment (LHD 1GD-FTV) (Before Aug. 2017 Production)

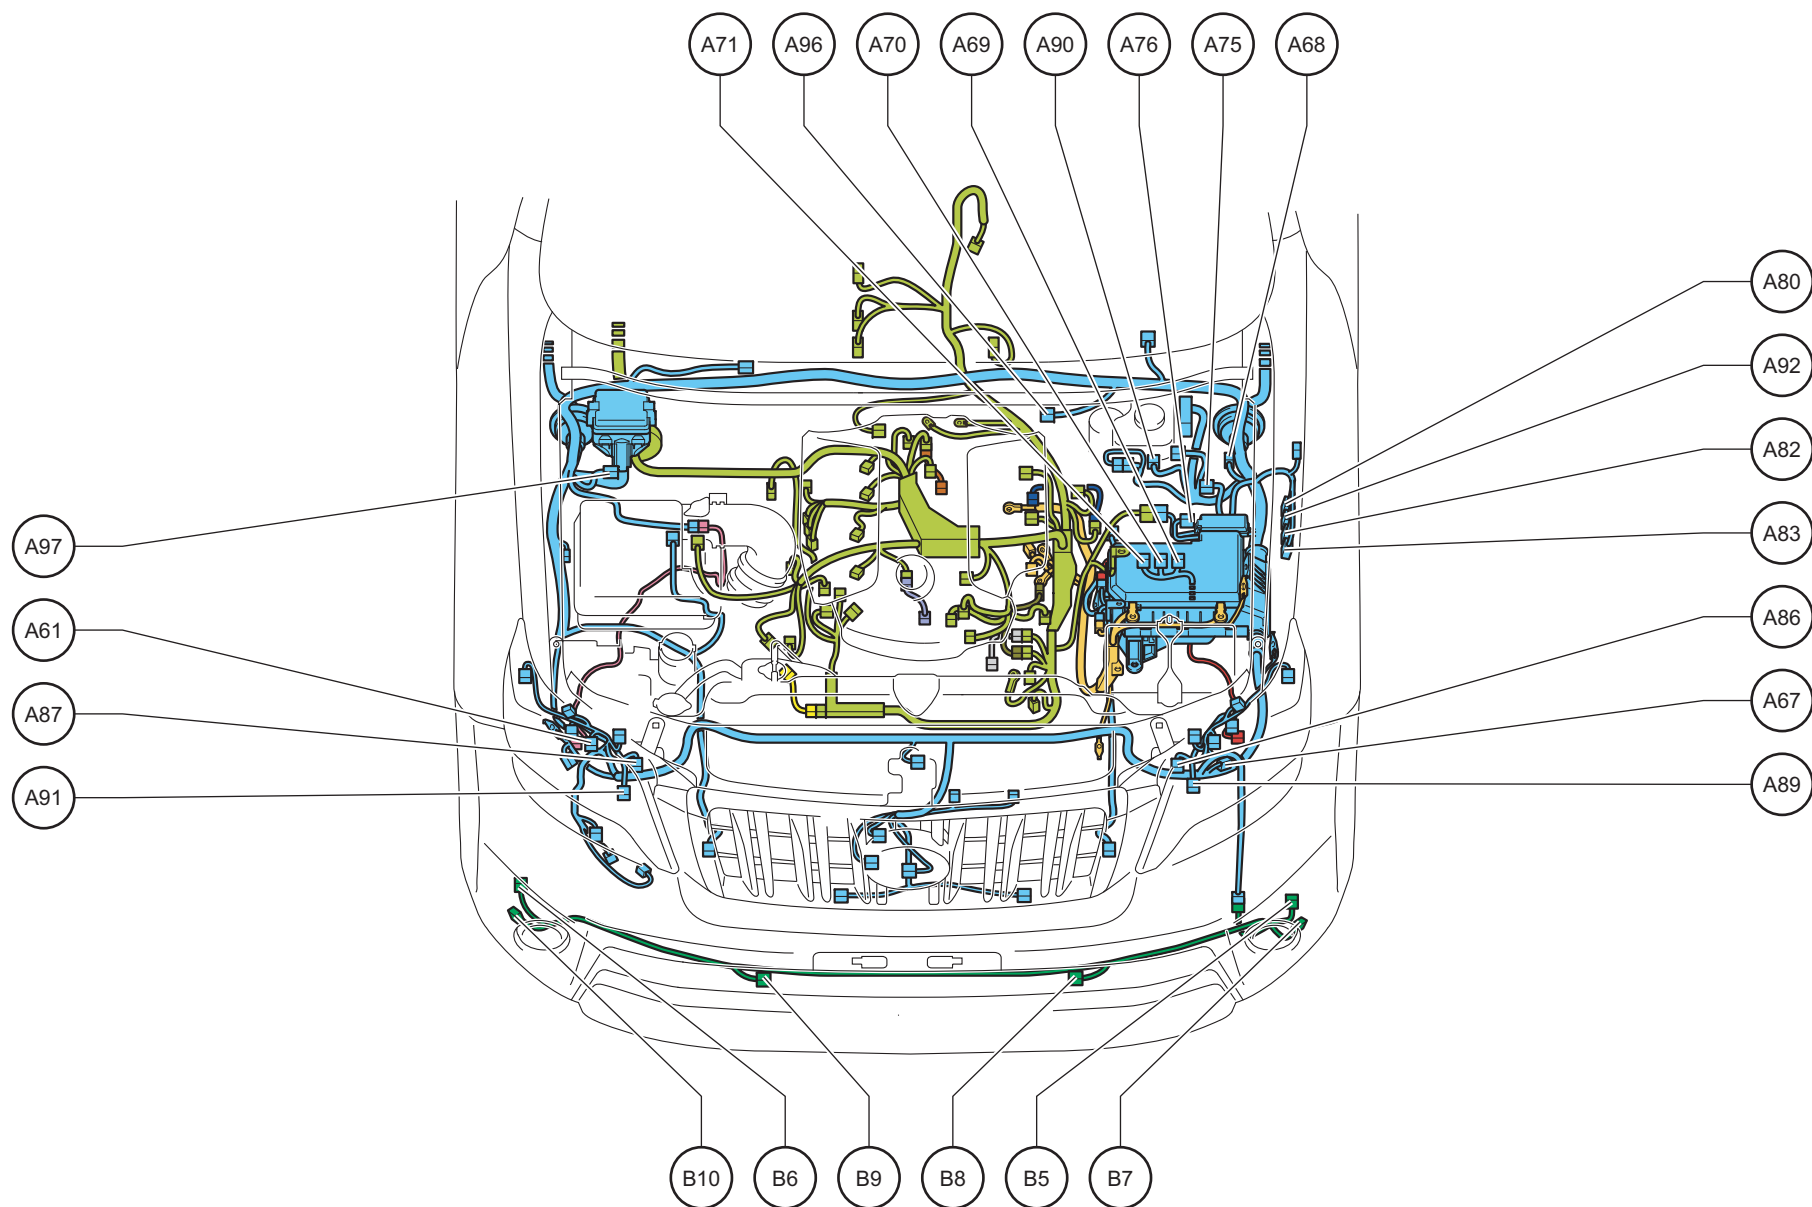


- A 61 Headlight Assembly RH
- A 67 Junction Connector
- A 68 Junction Connector
- A 69 Junction Connector
- A 70 Junction Connector
- A 71 Junction Connector
- A 75 Level Warning Switch (Fuel Filter Assembly)
- A 76 Fuel Filter Warning Switch
- A 80 Glow Plug Controller
- A 82 Glow Plug Controller
- A 83 Glow Plug Controller
- A 86 Headlight Assembly LH
- A 87 Headlight Assembly RH
- A 89 Headlight Assembly LH
- A 90 Brake Fluid Level Warning Switch (Brake Master Cylinder Reservoir Assembly)
- A 91 Headlight Assembly RH
- A 92 Glow Plug Controller
- A 96 Heater Pump Assembly
- A 97 Heater & Accessory Assembly
- B 5 Fog Light Assembly LH
- B 6 Fog Light Assembly RH
- B 7 Front No. 1 Ultrasonic Sensor LH
- B 8 Front No. 1 Ultrasonic Sensor Center LH
- B 9 Front No. 1 Ultrasonic Sensor Center RH
- B 10 Front No. 1 Ultrasonic Sensor RH

Position of Parts in Engine Compartment (LHD 1GD-FTV) (Before Aug. 2017 Production)

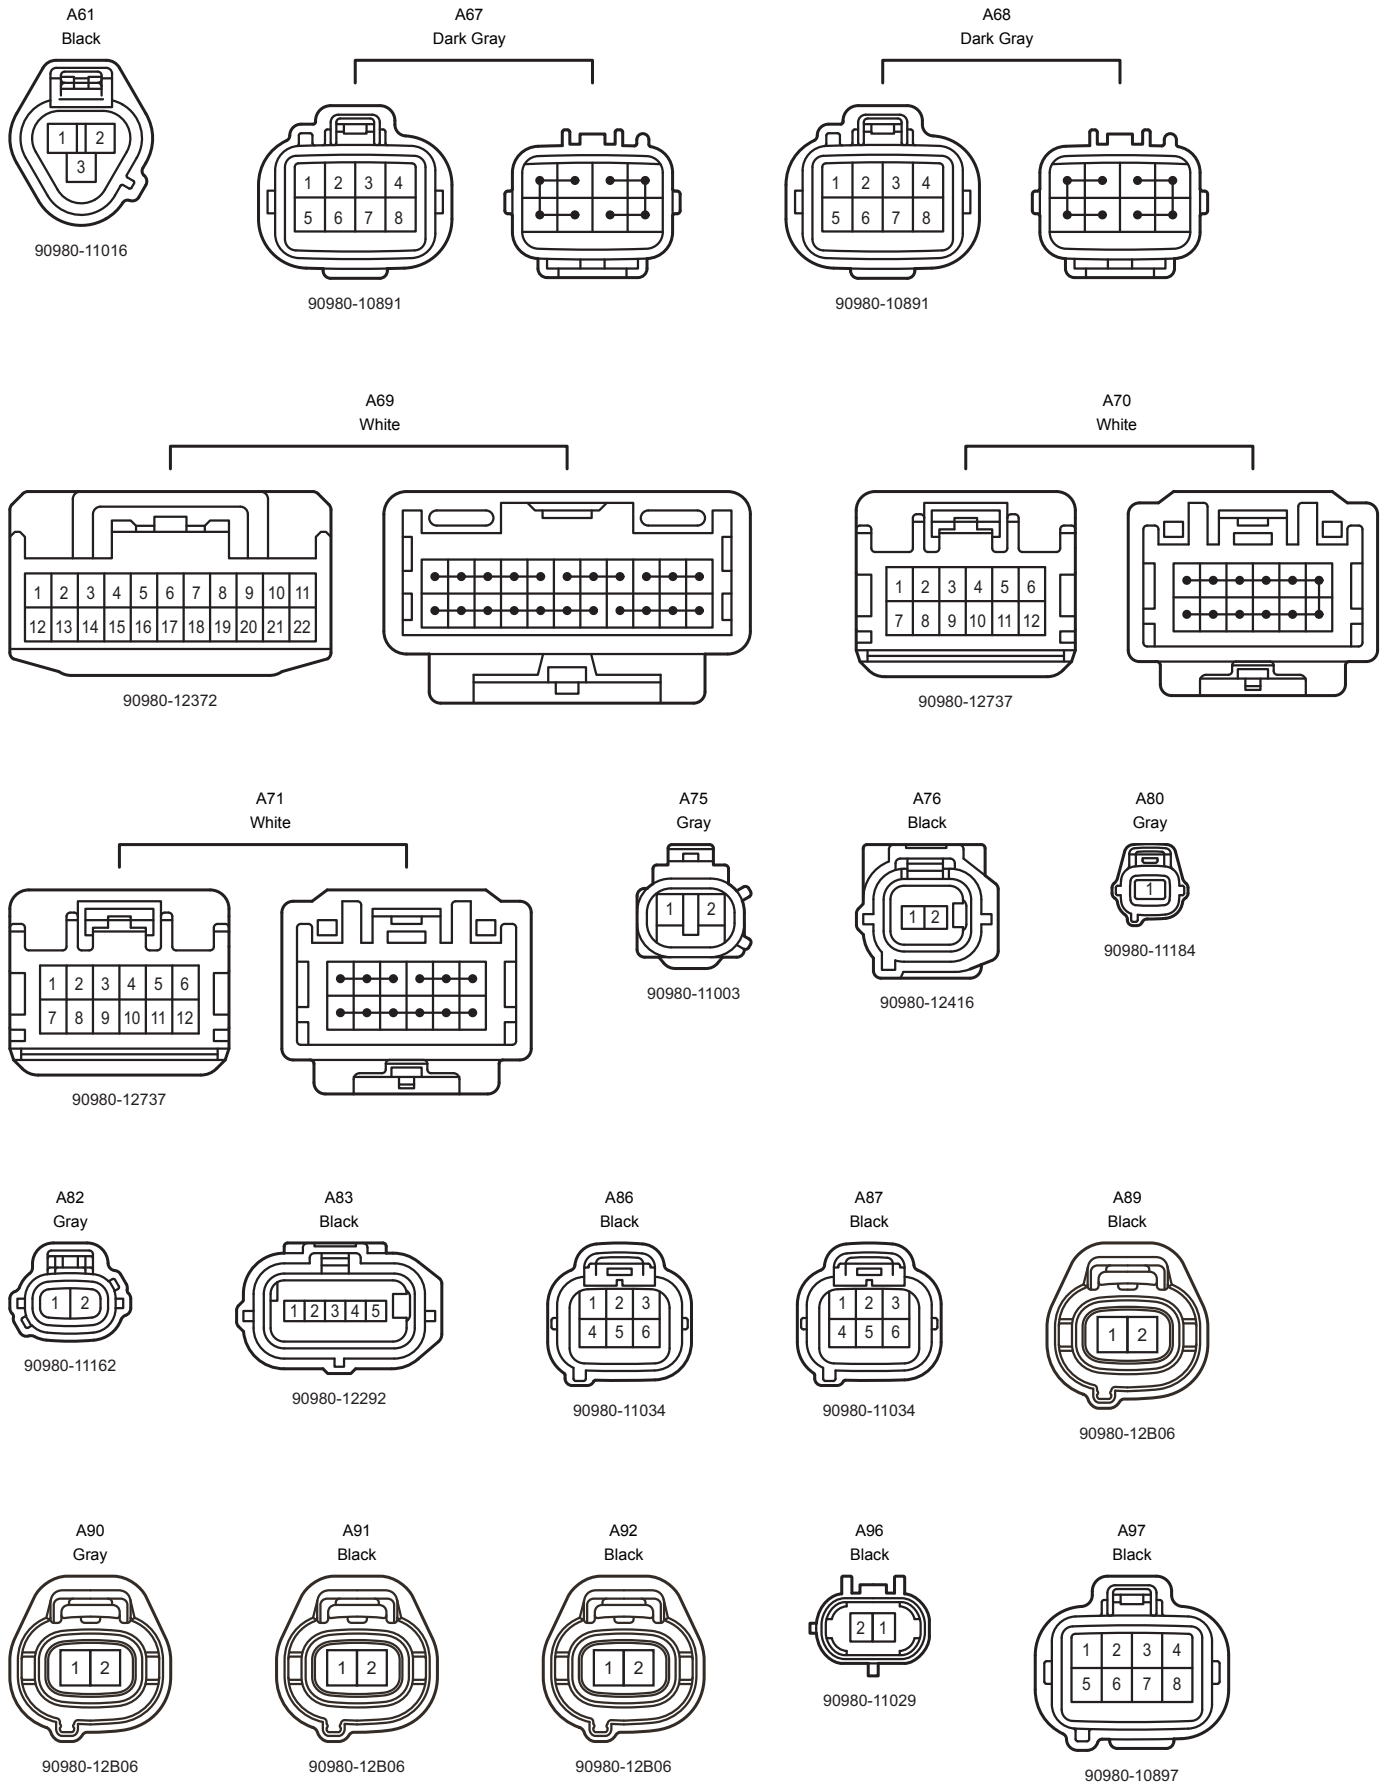


Position of Parts in Engine Compartment (LHD 1GD-FTV) (Before Aug. 2017 Production)

B5
Black

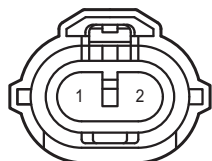


82824-60460

B6
Black

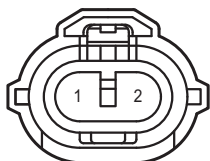


82824-60460

B7
Black

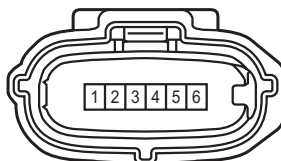


90980-12831

B8
Black

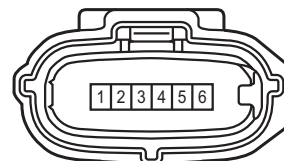


90980-12831

B9
Black

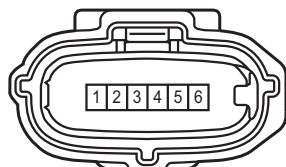

90980-12831

B10
Black

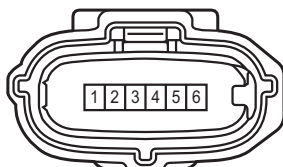

90980-12831